



- A EXPLOSION TONE CONTROL (TREBLE)
- B EXPLOSION TONE CONTROL (BASS)
- C JET PLANE VOLUME CONTROL
- D MISSILE VOLUME CONTROL
- E INTERNAL MASTER VOLUME CONTROL

NOTE: TO INCREASE VOLUME ROTATE  
IN A COUNTERWISE DIRECTION.

TO INCREASE VOLUME ROTATE  
IN A CLOCKWISE DIRECTION