



Schematic Notes
 Unless otherwise specified
 Resistance: (Ω) (K→KΩ, M→MΩ), 1/4 (W) carbon resistor
 Capacitance: 1 or higher → (pF), less than 1 → (μF)
 working voltage → 50 (V)
 ceramic capacitor
 Inductance: (μH)
 Electrolytic Cap: Capacitance Value (μF)/working voltage (V),
 NP → non-polar (or bipolar) electrolytic cap.
 Refer to the parts list for additional component information.
 ⊕ indicates test point connection
 ⏏ indicates chassis ground unless otherwise specified
 Hz indicates cycles per second
 For **safety** purposes (and continuing reliability)
 ⚠ replace all components marked with safety symbol with
 identical type.
 NOTE: FR → fusible resistor

00-4147-04
 G07-CB0

Parts identification on circuit boards:
 e.g. SU1126A (R107 = R1107)
 SU3030A (R113 = R3113)