

取扱説明書





ディップ・スイッチ DIP SWITCH

| DIP SWITCH 1 | | | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|-----------------|-----------------------------|-----|-----|-----|-----|-----|-----|------|-----|
| * | 3 | OFF | OFF | | | | | SIFE | |
| プレイヤー数 | ON | OFF | | | | | | | |
| PLAYER'S NUMBER | 4 | OFF | ON | | | | | | •• |
| | 1 | ON | ON | ! | | | | | |
| | 普通 NORMAL | | | OFF | OFF | | | | |
| 難易度 | 易しい EASY | | | ON | OFF | | | | |
| DIFFICULTY | 難しい HARD | | | OFF | ON | | | | |
| | 非常に難しい HARDEST | | | ON | ON | | | | |
| | No.1 | | | | | OFF | OFF | OFF | |
| | No.2 | | 14 | | | ON | OFF | OFF | |
| | No.3 | | | | | OFF | ON | OFF | |
| スタート・エリア | No.4 | | | | | ON | ON | OFF | |
| START AREA | No.5 | | | • | | OFF | OFF | ON | |
| | No.6 | | | | | ON | OFF | ON | |
| No.7 | | | | | | OFF | ON | ON | |
| | No.8 | | 77 | | | ON | ON | ON | |
| 画面反転 | 無し NO | - 6 | | | | | | | OF |
| SCREEN F/F | 有り YES | | | | | | | | ON |
| 出荷時の設定 | SETTING AT MAKER'S DELIVERY | OFF | OFF |

| DIP SWITCH 2 | | | ; 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|---------------------|---------------------------|--|-----|-----|-----|-----|-----|-----------|-----|-----|
| | 1 COIN 1 PLAY | | OFF | OFF | OFF | 1 | 1 | | | |
| | 1 COIN 2 PLAY | | ON | OFF | OFF | | 100 | | | |
| | 1 COIN 3 PLAY | | OFF | ON | OFF | | | | | |
| CONT. CONT.CO. | 1 COIN 4 PLAY | | ON | ON | OFF | 1 | | | | |
| COIN SWITCH 1 | 2 COINS 1 PLAY | | OFF | OFF | ON | | | | | |
| | 3 COINS 1 PLAY | | ON | OFF | ON | | | | | |
| | 4 COINS 1 PLAY | | OFF | ON | ON | | | | | |
| | FREE PLAY | | ON | ON | ON | | | | | |
| | 1 COIN 1 PLAY | | | | | OFF | OFF | OFF | i | |
| # | 1 COIN 2 PLAY | | | | | ON | OFF | OFF | | |
| | 1 COIN 3 PLAY | | : | | | OFF | ON | OFF | | |
| CON CARTOLIC | 1 COIN 4 PLAY | | - | | | ON | ON | OFF | | |
| COIN SWITCH 2 | 2 COINS 1 PLAY | | | | | OFF | OFF | ON | | |
| | 3 COINS 1 PLAY | | | | | ON | OFF | ON | | |
| | 4 COINS 1 PLAY | | | | | OFF | ON | ON | | * |
| | FREE PL | | | | | ON | ON | ON | | |
| デモ時のサウンド | 有り ソコ | | | | | | | emace and | OFF | |
| DEMONSTRATION SOUND | 無し NO | | | ! | | | | | ON | |
| 出荷時の設定 SE | ITING AT MAKER'S DELIVERY | | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |





取扱説明書

注意事項 Technical information

(1)電源

Required Power Capacity +5V 5A or more +12V 1A or more

2)Output

R—analog, positive
G—analog, positive
B—analog, positive

SYNC-H-V complexed, negative

| • | 72 |
|----------|-----------------|
| ⊕ | サウンドボリューム |
| | |
| | Sound ajustment |

ディップスイッチ2 ____

ディップスイッチ] ____

| 半 田 面 SOLDER SIDE | | | 部 品 面 COMPONENT SIDE |
|----------------------|----|----|-------------------------|
| GND | A | 1 | GND |
| GND | В | 2 | GND |
| +5V | C | 3 | +5V |
| +5V | D | 4 | +5V |
| | E | 5 | |
| +12V | F | 6 | +12V |
| | Н | 7 | |
| COIN COUNTER2 | J | 8 | COIN COUNTER1 |
| * * | K | 9 | |
| SP(-) | L | 10 | SP(+) |
| | M | 11 | |
| VIDEO GREEN | N. | 12 | VIDEO RED |
| VIDEO SYNC | P | 13 | VIDEO BLUE |
| SERVICE SW | R | 14 | VIDEO GND |
| W. | S | 15 | |
| COIN SW 2 | T | 16 | COIN SW 1 |
| START SW 2 | U | 17 | START SW 1 |
| 2P UP | V | 18 | 1P UP |
| 2P DOWN | W | 19 | 1P DOWN |
| 2P LEFT | X | 20 | 1P LEFT |
| 2P RIGHT | Y | 21 | 1P RIGHT |
| 2P PUSH 1 | Z | 22 | 1P PUSH 1 |
| | 8 | 23 | |
| | ь | 24 | |
| | C | 25 | |
| | d | 26 | * |
| GND | | 27 | GND |
| GND | i | 28 | GND |

JAMMA仕様