

**SEGA®**

# CHOPLIFTER

## INSTRUCTION MANUAL

FOR HORIZONTALLY  
MOUNTED MONITOR

**SEGA** ENTERPRISES, INC.

2149 PARAGON DR. SAN JOSE, CA 95131

(408) 435-0201

## CONTENTS

- RECOMMENDED WIRING DIAGRAM
- WIRING ROUTING (MAIN HARNESS)
- WIRING ROUTING (CONTROL PANEL HARNESS)
- OPTION SWITCHES / DC POWER REQUIREMENTS
- KIT CONTENTS

## CONVERSION KIT CONTENTS

- PC Board
- Generic Main Wiring Harness
- Control Panel Wiring Harness
- 8 Way Joystick Assembly
- Screws and Nuts for Joystick (4)
- Push Button Assemblies (6)
- Control Panel Overlay
- Monitor Card
- Side Decals (2)
- Plastic Marquee
- Instruction Manual
- License Seal

# PREVENTION OF COUNTERFEITING AND CONVERSION

## LABELING

To prevent counterfeits and conversions, the following labels are put on all the SEGA products. When handling such goods, be sure to confirm the labels. They are used to prevent illegal acts such as the unauthorized copying of the products and the printed circuit boards thereof or carrying on business by manufacturing similar merchandise or by converting, selling or using such products or printed circuit boards.

### ORIGINAL SEAL

The following seal is put on the machines manufactured by SEGA.



### LICENSE SEAL

The following seal is put on the kits, such as the printed circuit boards, of SEGA products.



## COPYRIGHT NOTICE


This SEGA product has the copyright notice as follows:

© SEGA 1985

This signifies that this work was disclosed in 1985 and is the property of SEGA ENTERPRISES, LTD.

### NOTICE WARNING

After installation of this kit , the 5 volt power supply must be checked and adjusted to make certain exactly 5 volts are present at pins 1 & 3 ( 1 is negative and 3 is positive ) of the 44 pin edge connector. The voltage check and adjustment must be done while the PCB is plugged in to the 44 pin connector to supply the proper load. This PCB will not operate properly on voltages below 5 volts as measured at the board.

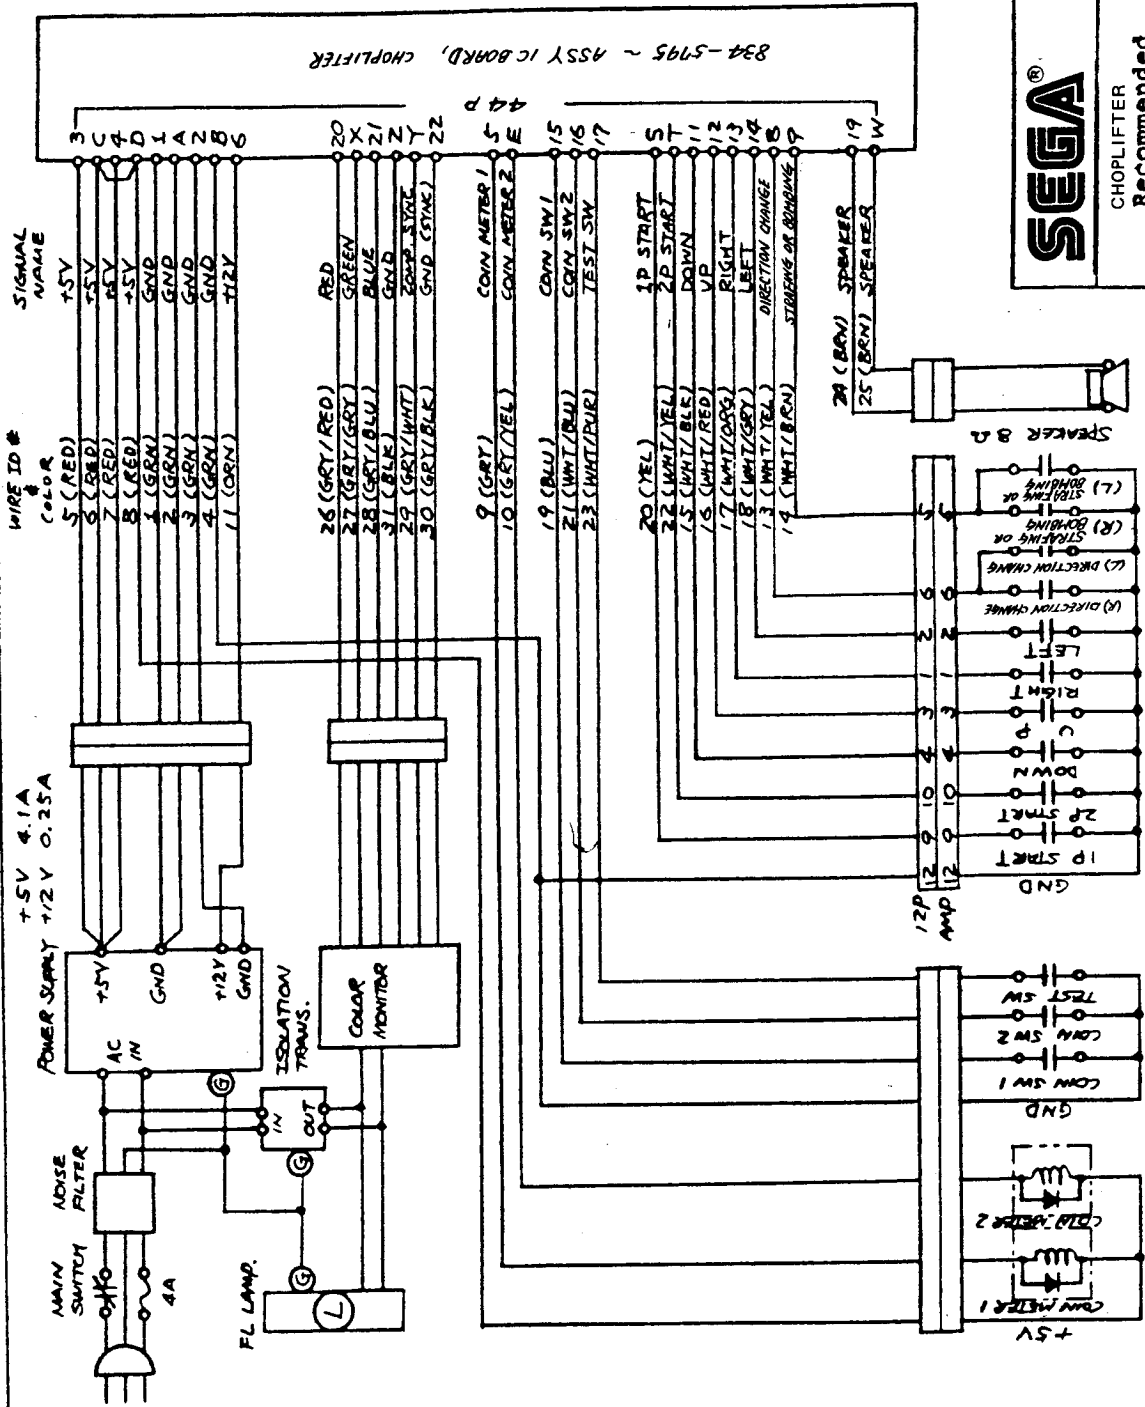

**SEGA**

CHOPFLIFTER  
Recommended  
Wiring Diagram


SEA 12 85

**DISTINATION**


WIRE ID #      SIGNAL NAME

44 PIN  
EDGE CONNECTOR

WIRE COLOR

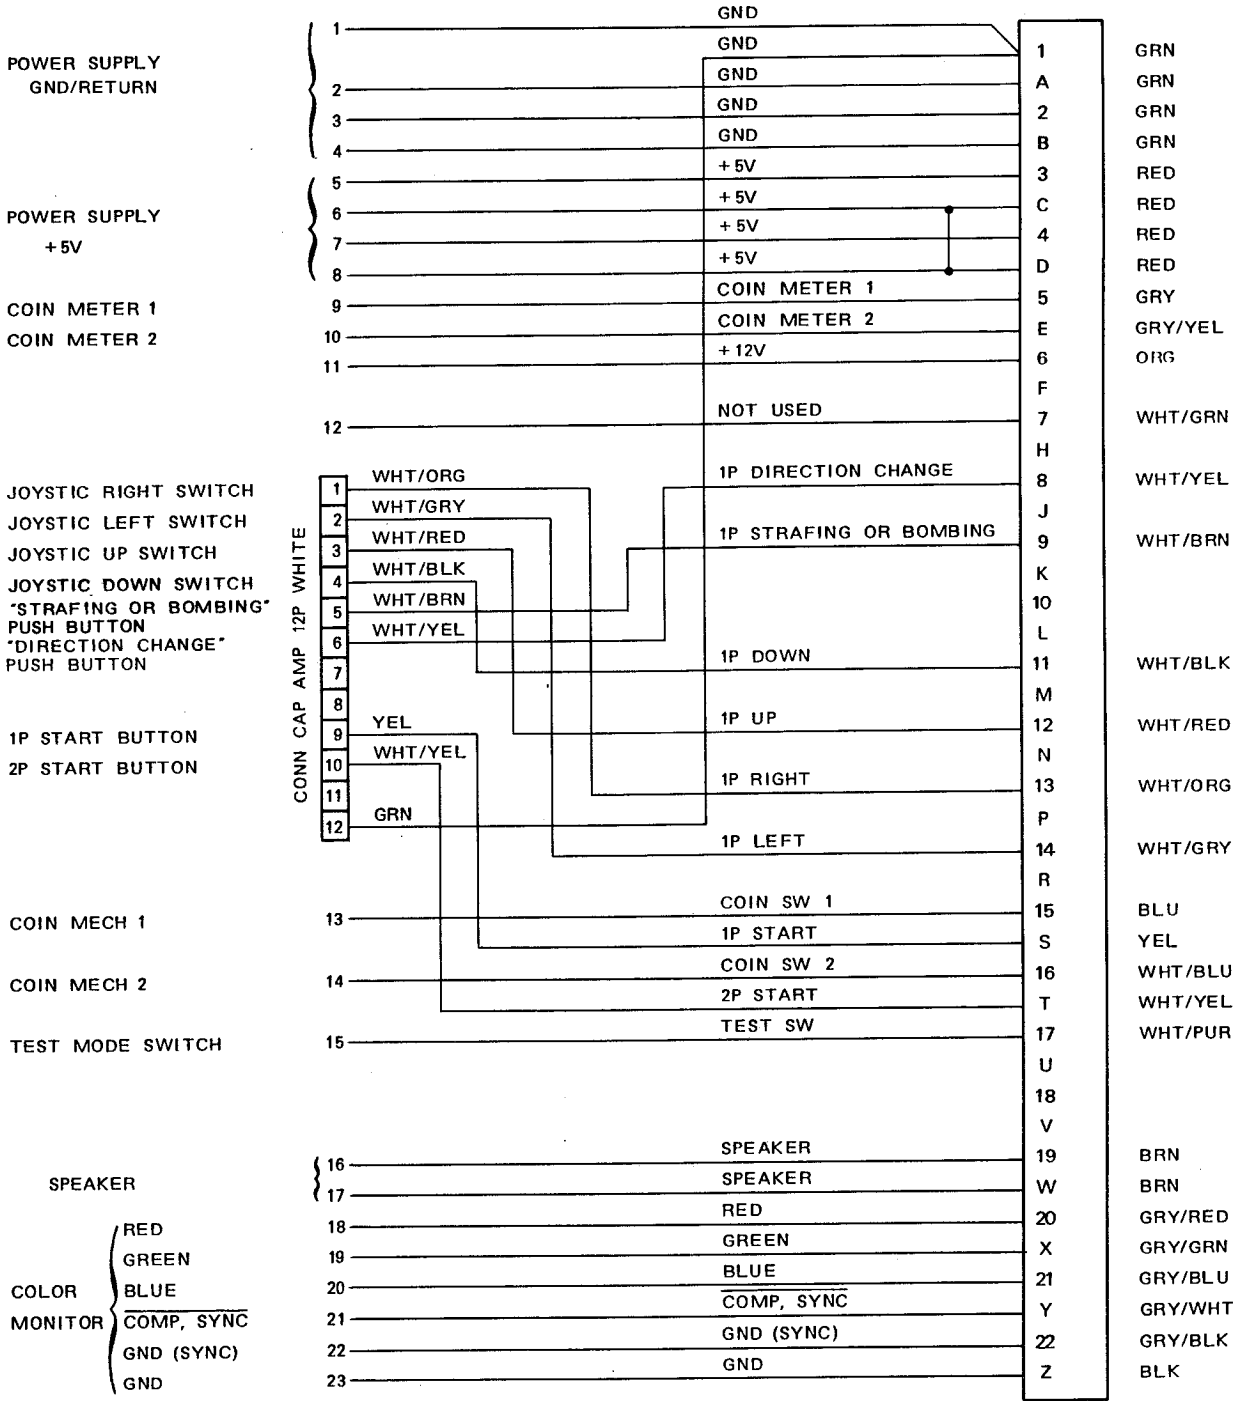

**CHOPLIFTER WIRE ROUTING**

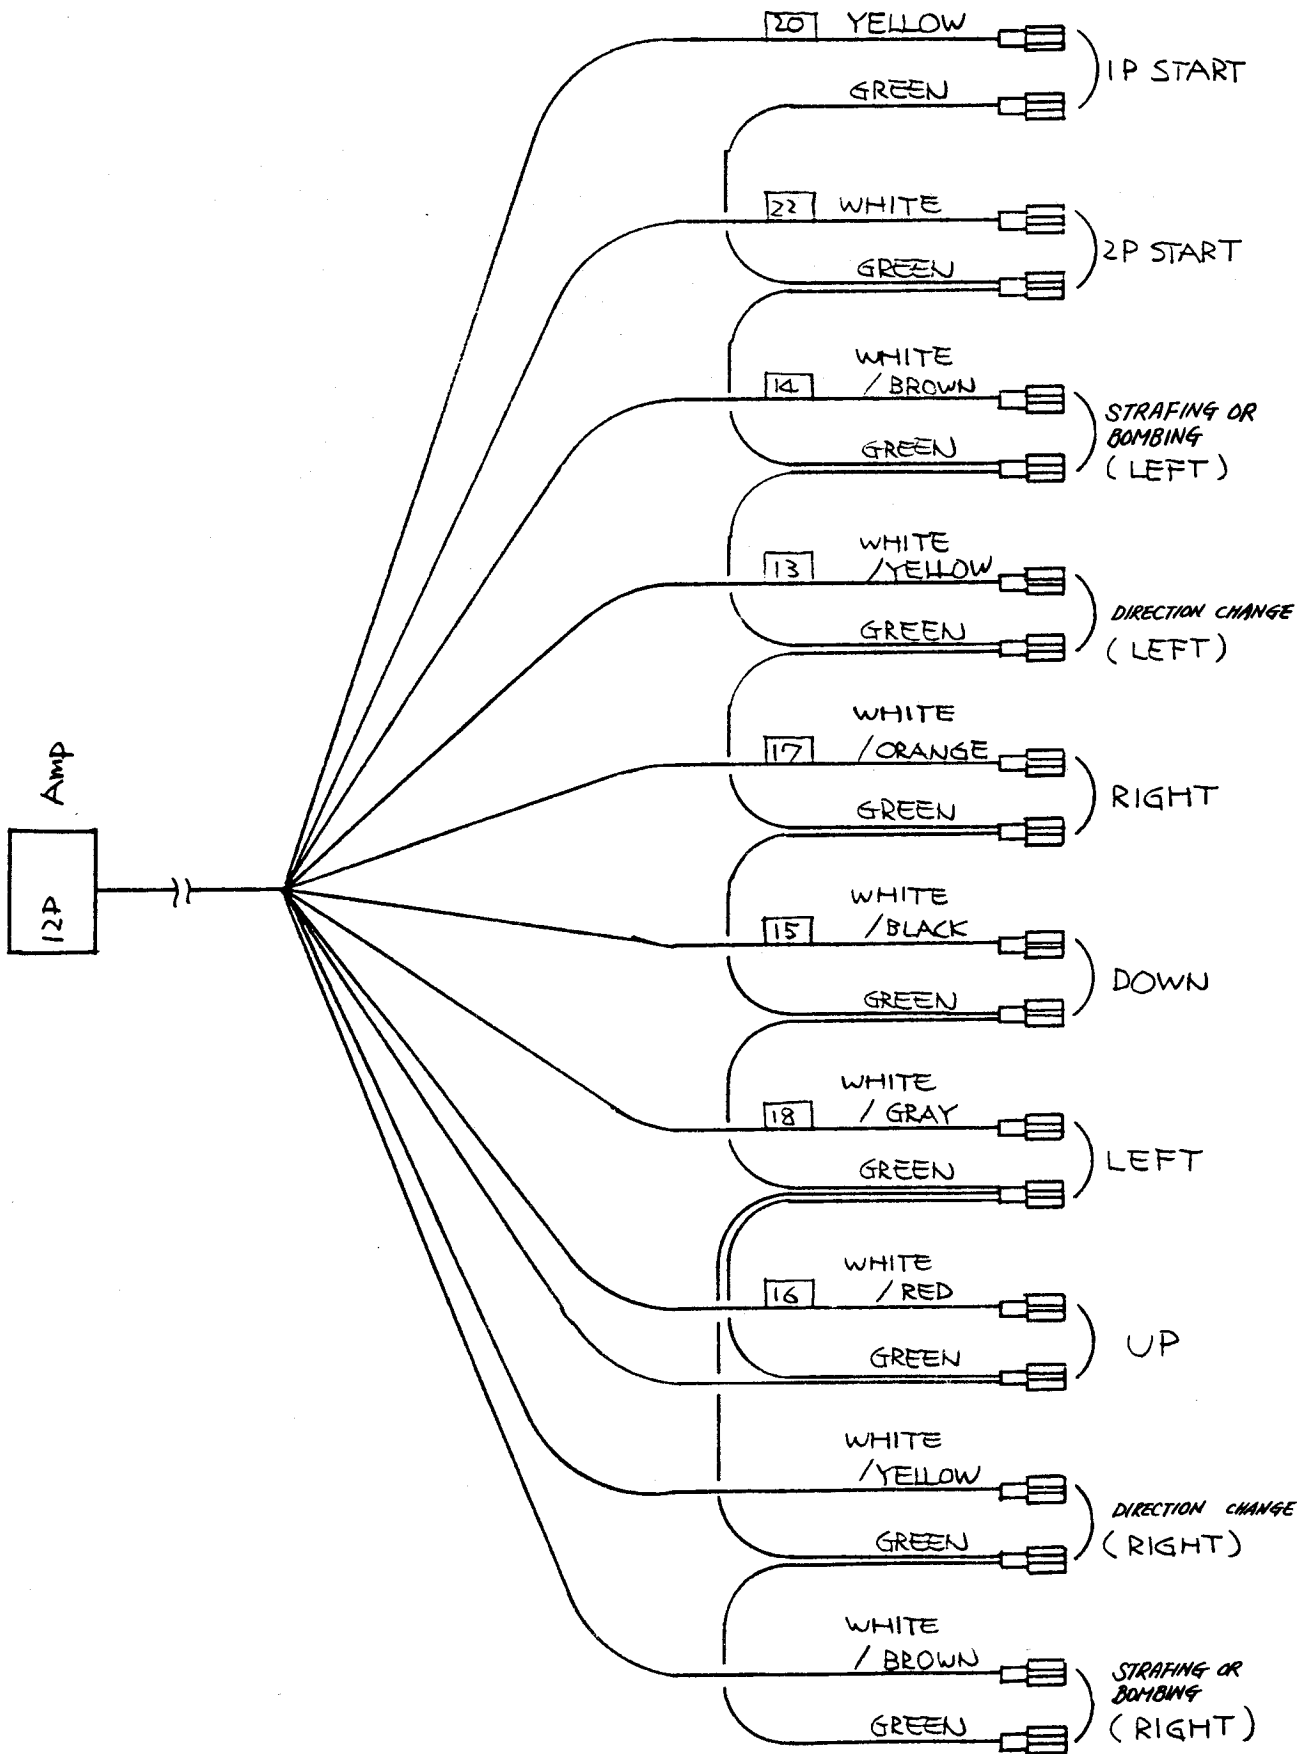





CONTROL PANEL HARNESS



# CHOPLIFTER ( 834 - 5795 )









COIN / CREDIT OPTION SWITCH SETTING	DIP SWITCH #A							
	1	2	3	4	5	6	7	8
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 2 CREDITS	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 3 CREDITS	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 4 CREDITS	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 5 CREDITS	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
1 COIN 6 CREDITS	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
2 COINS 1 CREDIT	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
2 COINS 1 CREDIT	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
2 COINS 2 CREDITS	ON	ON	ON	ON	OFF	OFF	OFF	OFF
2 COINS 2 CREDITS	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
3 COINS 3 CREDITS	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
3 COINS 3 CREDITS	ON	ON	ON	ON	OFF	OFF	OFF	OFF
4 COINS 4 CREDITS	ON	ON	ON	ON	ON	OFF	OFF	OFF
4 COINS 4 CREDITS	ON	ON	ON	ON	ON	ON	OFF	OFF
5 COINS 6 CREDITS	ON	ON	ON	ON	ON	ON	ON	ON
1 COIN 1 CREDIT	ON	OFF	ON	ON	ON	OFF	ON	ON
2 COINS 2 CREDITS	ON	ON	ON	ON	ON	ON	ON	ON
3 COINS 3 CREDITS	ON	ON	ON	ON	ON	ON	ON	ON
4 COINS 5 CREDITS	ON	ON	ON	ON	ON	ON	ON	ON
1 COIN 1 CREDIT	ON	ON	ON	ON	ON	ON	ON	ON
2 COINS 3 CREDITS	ON	ON	ON	ON	ON	ON	ON	ON
1 COIN 1 CREDIT	ON	ON	ON	ON	ON	ON	ON	ON






OPTION SWITCH SETTING	DIP SWITCH #B							
	1	2	3	4	5	6	7	8
TABLE UPRIGHT	OFF	ON						
ADVERT TISE	OFF	ON						
SOUND	OFF	ON						
PLAYER 3			OFF	OFF				
HELICOPTER 2			ON	OFF				
FREE 4			OFF	ON				
SCORE OF 20000, 70000			ON	ON				
ADDITIONAL 120000, 170000			ON	ON				
PLAYER 50000, 100000			ON	ON				
PLAYER 150000, 200000			ON	ON				
GAME DIFFICULTY								
EASY								OFF
HARD								ON

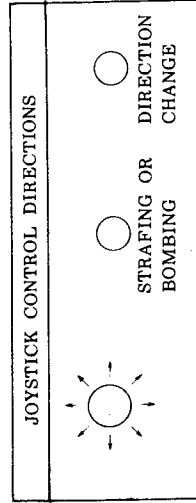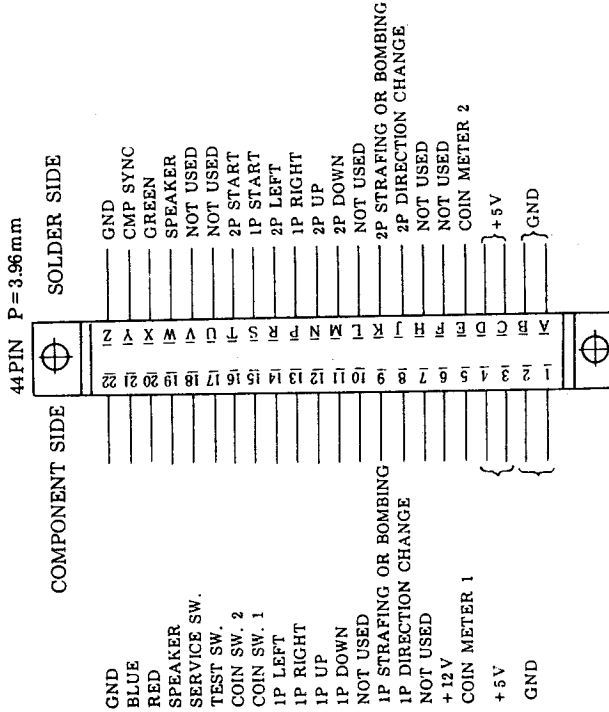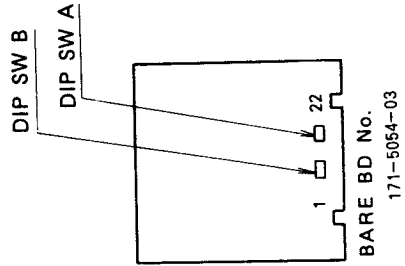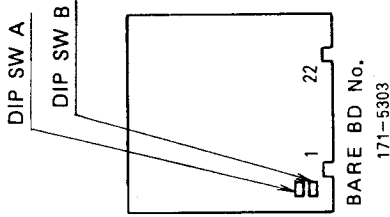

SUPPLY VOLTAGES & CURRENT	
VOLTAGE	CURRENT
DC5V	4.5 A
DC12V	0.25 A


# UC-4000

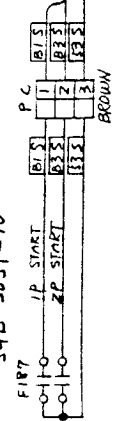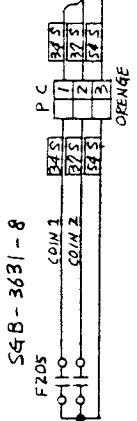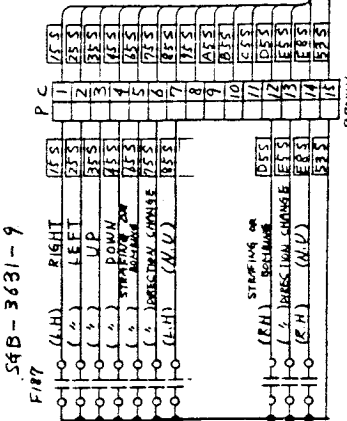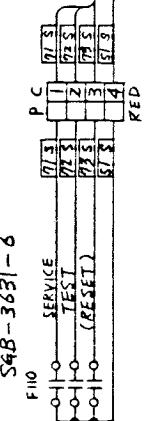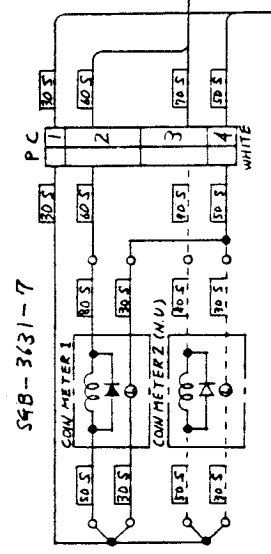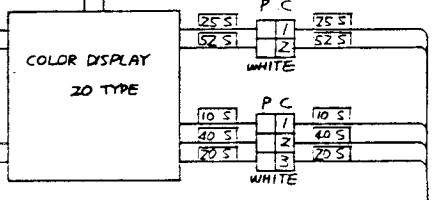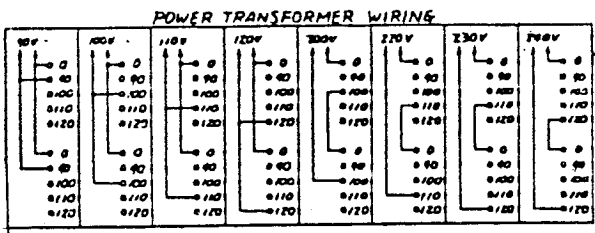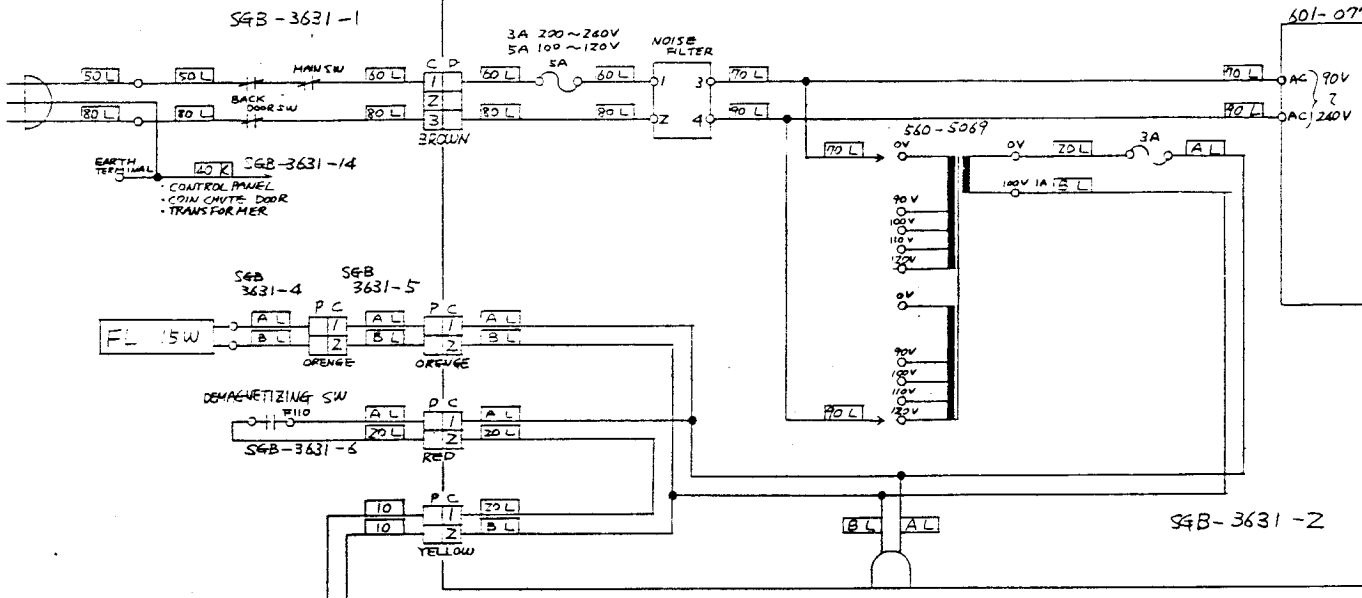

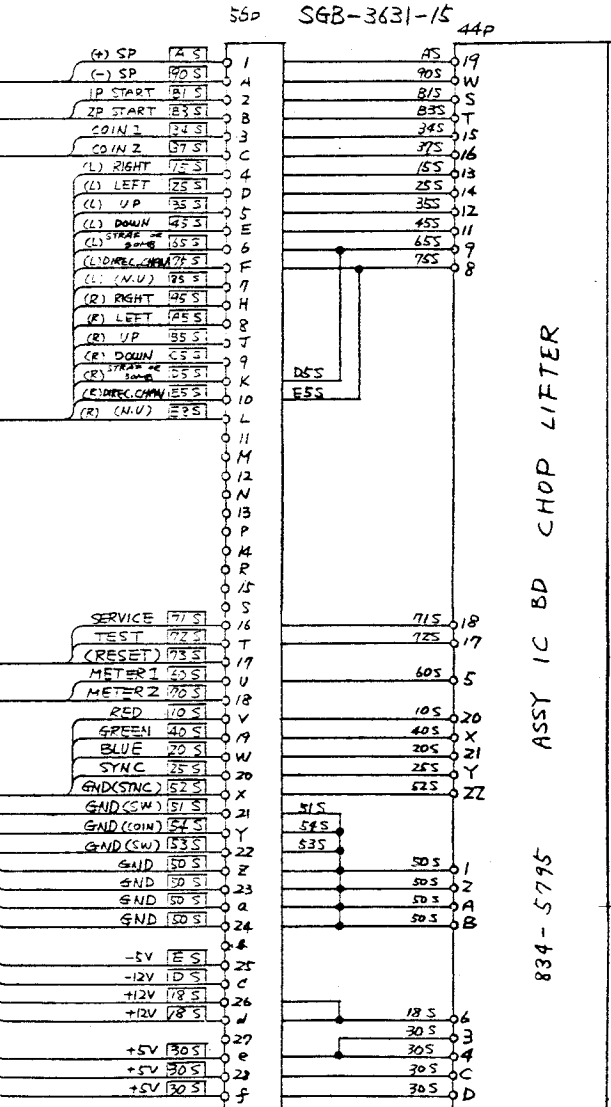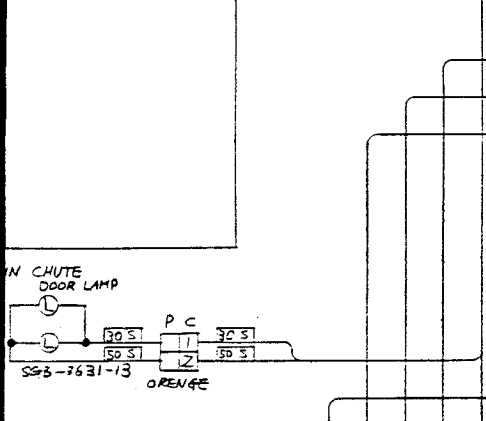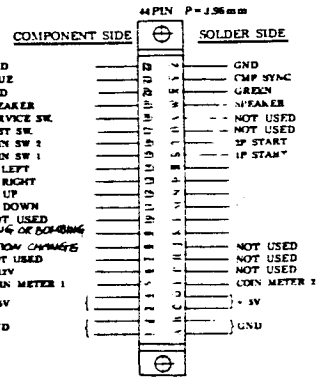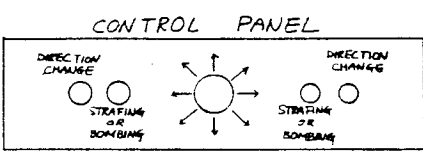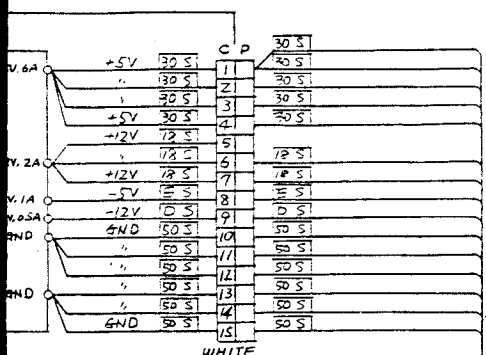

SGB-3631-13

ASSY IC BD CHOP LIFTER  
834-5795

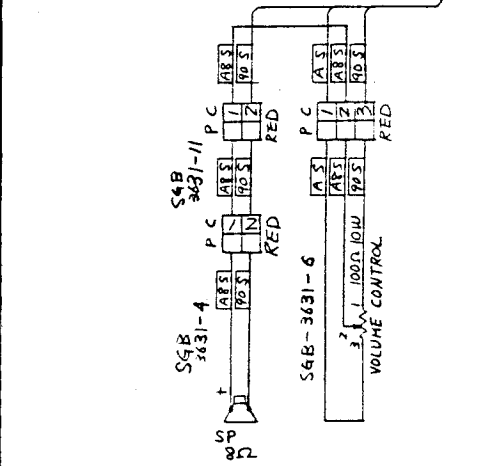

ALTERATION	VOLTAGE						SYMBOLS INDICATOR OPERATION BY A MOTOR
	110V	200V	220V	230V	240V	120V	
	W	W	W	W	W	W	CIRCLE IN THE SWITCH SYMBOLS INDICATOR OPERATION BY A MOTOR
	W	W	W	W	W	W	
						125	MAKE AND BREAK SWITCH
							NORMALLY CLOSED SWITCH OPER WHEN ENERGIZED
							NORMALLY OPEN SWITCH CLOSED WHEN ENERGIZED
							SWITCH SYMBOLS
							T.W.G. CHART NO.
							SCHEMATIC DIAGRAM NO.

COIL LOCATIONS RELAY LOCATIONS ABBREVIATIONS USED WIRE COLOR CODE  
 SEGA CHOP LIFTER EXPORT (AC 100~240V) 50/60 Hz  
 SGB-3631  
 884-3