

# FANTASYLAND

Consigliamo la programmazione degli switches come indicato dalle "X".  
Best setting is indicated with "X"

## JAMMA STANDARD

Solder Side		Components Side	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
N.C.	E	5	N.C.
+12V	F	6	+12V
	H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
(COIN LOCK OUT 2)	K	9	(COIN LOCK OUT 1)
SP.(-)	L	10	SP.(+)
N.C.	M	11	N.C.
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	TEST SW
COIN SW 2	T	16	COIN SW 1
START SW 2	U	17	START SW 1
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P PUSH 1	Z	22	1P PUSH 1
2P PUSH 2	a	23	1P PUSH 2
N.C.	b	24	N.C.
N.C.	c	25	N.C.
N.C.	d	26	N.C.
GND	e	27	GND
GND	f	28	GND

DESCRIZIONE	DIP 1	1	2	3	4	5	6	7	8
coin selector	1 coin 1 credit	off	off	off					
	1 coin 2 credit	on	off	off					
	1 coin 3 credit	off	on	off					
	1 coin 4 credit	on	on	off					
	2 coin 1 credit	off	off	on					
	3 coin 1 credit	on	off	on					
	4 coin 1 credit	off	on	on					
	FREE GAME	on	on	on					

sound of demo	yes				off				
	no				on				

continue play	yes					off			
	no					on			

culty	normal						off	off	
	medium						on	on	
	medium hard						off	off	
	hard						on	on	

test	yes								on
	no								off

DESCRIZIONE	DIP 2	1	2	3	4	5	6	7	8
-------------	-------	---	---	---	---	---	---	---	---

test sound	yes	on							
	no	off							

n. of life	1		off	off	off				
	2	X	on	off	off				
	3		off	on	off				
	4		on	on	off				
	5		off	off	on				
	6		on	off	on				
	7		off	on	on				
	8		on	on	on				

new life at	10000					off	off		
	20000					on	off		
	30000					off	on		
	40000	X				on	on		

## HORIZONTAL SCREEN

### CONTROL PANEL

