SOFTWARE DIP SWITCH MENU FOR FATAL FURY

FATAL FURY

→ CONTINUE
DEMO SOUND
HOW TO PLAY
DIFFICULTY
TIME COUNT
CREDIT

1. CONTINUE	Set "Number of Continue Plays"
Controls = Move joystick up and down to set "Continue", change mode with A button, press B button to set.	
Normal setting = With	
2. DEMO SOUND Controls = Move joystick u with A button, p	With or without "Sound" during demo mode p and down to set "Demo Sound", change mode press B button to set.
Normal setting = With	
3. HOW TO PLAY	With or without "How to Play Screen" at the start of each game
Controls = Move joystick up and down to set "How to Play", change mode with A button, press B button to set.	
Normal setting = With	
4. DIFFICULTY	Difficulty setting
Controls = Move joystick up and down to set "Difficulty", change mode with A button, press B button to set.	
Normal setting = Level 4	(Level 1-8, more difficult as number gets higher)
5. TIME COUNT	Set "Time of Play" during one round
Controls = Move joystick up and down to set "Time Count", change mode with A button, press B button to set.	
Normal setting = Normal	
6. CREDIT	With or without "Credit"
Controls = Move joystick up and down to set "Credit", change mode with A button, press B button to set.	
Normal setting = With	

SETTING UP THE SOFT DIP ON THE MULTI VIDEO SYSTEM

- 1.TURN POWER ON.
- 2. PUSH THE TEST BUTTON INSIDE THE CABINET.
- 3. THE FOLLOWING SCREEN WILL APPEAR.

MOVE LEFT JOYSTICK UP/DOWN TO MOVE THE POINTER TO "SETTING UP THE SOFT DIP". PRESS "A" BUTTON TO SET.

HARDWARE TEST

SETTING UP THE HARD DIP

SETTING UP THE SOFT DIP

BOOKKEEPING

SETTING UP THE CODE NUMBER

SETTING UP THE CALENDAR

EXIT

THE FOLLOWING SCREEN WILL BE DISPLAYED:

CABINET SET UP

SLOT 1 (GAME TITLE)

SLOT 2 (GAME TITLE)

SLOT 3 (GAME TITLE)

SLOT 4 (GAME TITLE)

SLOT 5 (GAME TITLE)

SLOT 6 (GAME TITLE)

4. SELECT THE GAME TITLE YOU WANT AND PRESS "A" BUTTON TO VIEW THE SOFT DIP SETTING OF EACH INDIVIDUAL GAME.