

SEGA®

Flicky



Flicky



*** HOW TO PLAY ***



FLICKY



CONTROL
FLICKY

FLICKY

WITH FLICKY.

TAKE



TO

* PUSH THE BUTTOM FOR " SHOT " .



* PUSH THE BUTTOM FOR " JUMP " .



FLICKY

* LET'S THROW



AT



* GET HIGH POINTS AFTER GO BACK TOGETHER.



 
© SEGA 1984

CN - 112

PARTS. SIDE

GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
	5	
+12V	6	
	7	
1P JUMP	8	2P JUMP
1P JUMP	9	2P JUMP
	10	
	11	
	12	
1P RIGHT	13	2P RIGHT
1P LEFT	14	2P LEFT
COIN 1	15	1P START
COIN 2	16	2P START
TEST	17	
SERVICE	18	
SP	19	SP
TV. RED	20	TV. GREEN
TV. BLUE	21	CMP SYNC
TV. GND	22	GND

CN-112



DIP SW. A

OPTION	1	2	3	4	5	6	7	8
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 2 CREDIT	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN 3 CREDIT	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 COIN 4 CREDIT	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN 5 CREDIT	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN 6 CREDIT	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COIN 1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COIN 1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COIN 1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
3 COIN 3 CREDIT	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COIN 1 CREDIT								
4 COIN 2 CREDIT	OFF	ON	OFF	ON	OFF	ON	OFF	ON
5 COIN 3 CREDIT								
6 COIN 4 CREDIT								
2 COIN 1 CREDIT	ON	ON	OFF	ON	ON	ON	OFF	ON
4 COIN 3 CREDIT								
1 COIN 1 CREDIT								
2 COIN 2 CREDIT								
3 COIN 3 CREDIT	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COIN 4 CREDIT								
5 COIN 6 CREDIT								
1 COIN 1 CREDIT								
2 COIN 2 CREDIT	ON	OFF	ON	ON	ON	OFF	ON	ON
3 COIN 3 CREDIT								
4 COIN 5 CREDIT								
1 COIN 1 CREDIT	OFF	ON	ON	ON	OFF	ON	ON	ON
2 COIN 3 CREDIT								
1 COIN 1 CREDIT	ON	ON	ON	ON	ON	ON	ON	ON

COIN SW. #1 COIN SW. #2

DIP SW. B

TYPE	TABLE	1	2	3	4	5	6	7	8
	UPLIGHT	OFF							
	FOR JAPAN.		OFF						
	FOR USA		ON						
	3			OFF	OFF				
	4			ON	OFF				
	5			OFF	ON				
	FREE			ON	ON				
EXTRA	30000 80000 160000					OFF	OFF		
Flicky	30000 100000 200000					ON	OFF		
	40000 120000 240000					OFF	ON		
	40000 140000 280000					ON	ON		
DIFFICULTY	EASY							OFF	
	HARD							ON	
									ON

