



☆ THE CONTROL OF THIS GAME USES ONE 8-WAY JOYSTICK AND 2 BUTTONS.

NOTE) BEFORE CHANGING THE SETTINGS OF THE DIP SWITCH, TURN THE POWER SWITCH OFF.

CONNECTOR

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V (+13V)
POST	H	7	POST
COIN COUNTER B	J	8	COIN COUNTER A
COIN LOCKOUT B	K	9	COIN LOCKOUT A
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
(COIN B)	T	16	COIN A
1P SELECT	U	17	1P SELECT
1P UP	V	18	1P UP
1P DOWN	W	19	1P DOWN
1P LEFT	X	20	1P LEFT
1P RIGHT	Y	21	1P RIGHT
1P SHOT BUTTON	Z	22	1P SHOT BUTTON
1P BOMB BUTTON	a	23	1P BOMB BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

◇ SETTING OF DIP SWITCH 1

(*) : FACTORY SETTINGS

SETTING	POSITION	1	2	3	4	5	6	7	8
GAME STYLE	TABLE	OFF							
	UPRIGHT	ON							
SCREEN INVERSION	* NORMAL		OFF						
	INVERSION		ON						
TEST MODE	* NORMAL GAME			OFF					
	TEST MODE			ON					
PLAY PRICING COIN A	* 1 COIN 1 PLAY					OFF	OFF		
	2 COINS 1 PLAY				OFF	ON			
	1 COIN 2 PLAYS					OFF	ON		
	1 COIN 6 PLAYS					ON			
PLAY PRICING COIN B	* 1 COIN 1 PLAY				OFF			OFF	OFF
	2 COINS 1 PLAY							ON	
	1 COIN 2 PLAYS							OFF	ON
	1 COIN 6 PLAYS							ON	
PLAY PRICING COIN A	1 COIN 1 PLAY				ON	OFF	OFF		
	2 COINS 1 PLAY					ON			
	1 COIN 3 PLAYS					OFF	ON		
	1 COIN 4 PLAYS					ON			
PLAY PRICING COIN B	1 COIN 1 PLAY				ON			OFF	OFF
	2 COINS 1 PLAY							ON	
	1 COIN 3 PLAYS							OFF	ON
	1 COIN 4 PLAYS							ON	

◇ SETTING OF DIP SWITCH 2

SETTING	POSITION	1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY (A) → DIFFICULT (D)	* RANK B	OFF	OFF						
	RANK A	ON							
	RANK C	OFF	ON						
	RANK D	ON							
CONTINUED PLAY	* WITH			OFF					
	WITHOUT			ON					
PAUSE MODE	* NORMAL				OFF				
	PAUSE				ON				OFF
NUMBER OF PLAYER	* 3					OFF	OFF		
	4					ON			
	5					OFF	ON		
	7					ON			