HOW TO INSTALL



DIP SWITCH SETTINGS

	DIP SWITCH				
NO	SETTINGS				EXPLANATION
8	OFF		ON		GAME TIME LIMIT
	NORMAL		FREE GAME		
7	OFF		ON		SOUND IN IDLING MODE
	NO		YES		
6	OFF	OFF	ON	ON	DIFFICULTY LEVELS
5	OFF	ON	OFF	ON	
	EASY——DIFFICULT				
4	OFF	OFF	ON	ON	LEFT SELECTOR
3	OFF	ON	OFF	ON	
	1	1	2	3	COIN
	1	2	1	1	CREDIT
2	OFF	OFF	ON	ON	RIGHT SELECTOR
1	OFF	ON	OFF	ON	
	1	1	2	3	COIN
	1.	2	1	1	CREDIT