

Magic Brush

PS Elect.

Olympia 1981

Solder Side		Component Side	
Speaker Ground	A	1	Ground
Ground	B	2	Ground
Ground	C	3	Ground
Speaker +	D	4	
+12 Volts	E	5	+12 Volts
Player UP	F	6	
	G	7	
	H	8	Video Ground
+5 Volts	I	9	+5 Volts
	J	10	Player DOWN
	K	11	
2 Player START	L	12	
1 Player START	M	13	Coin
	N	14	Player RIGHT
Player LEFT	O	15	Video RED
Video BLUE	P	16	
Video GREEN	Q	17	
Composite Sync	R	18	