


= POCKET GAL =

2. ハーネスの接続 / HARNESS CONNECTIO

2-1 端子Noのふり方 / TERMINAL NUMBERING

コネクタ CONECTOR CR7E-56DA-3.96E (HRS) 3.96mm Pitch  
 1168-056-009 (KEL) 3.96mm Pitch

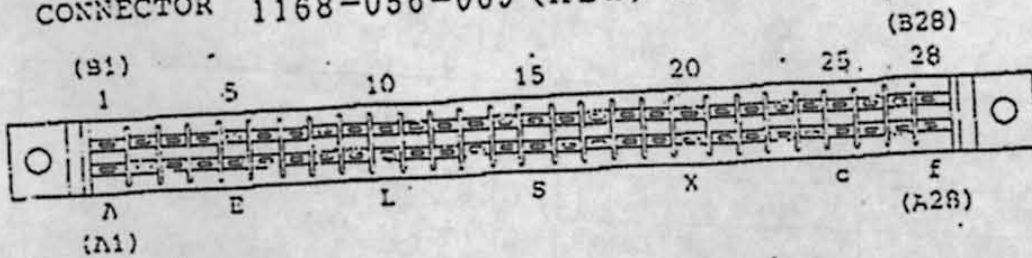

2-2 エッジコネクタ端子の配列 / SIGNAL TO TERMINAL

半田面 SOLDER SIDE	端子番号 PIN #	部品面 PARTS SIDE
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
	E 5	
+12V	F 6	+12V
誤挿入防止キー MISTAKEN INPUT PREVENTION	H 7	誤挿入防止キー MISTAKEN INPUT PREVENTION
	J 8	COIN COUNTER 1
	K 9	
SPEAKER (-)	L 10	SPEAKER (+)
	M 11	
VIDEO GREEN	N 12	VIDEO RED
VIDEO SYNC	P 13	VIDEO BLUE
SERVICE SWITCH	R 14	VIDEO GND
	S 15	
	T 16	COIN SWITCH 1
START SWITCH 2	U 17	START SWITCH 1
2P CONTROL 1 UP	V 18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W 19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X 20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y 21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	Z 22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	a 23	1P CONTROL 6 PUSH 2
	b 24	
	c 25	
	d 26	
GND	e 27	GND
GND	f 28	GND

10. ディップスイッチの説明 / DIP SWITCH SETTING

DIP SWITCH					REMARKS
NO.	SETTING				
1	OFF	ON	OFF	ON	COIN / CREDIT RIGHT SELECTOR
2	OFF	OFF	ON	ON	
3	1 COIN 1 PLAY	1 2	1 3	2 1	
3	OFF	ON			画面ローテーション
	通常	NORMAL	反転	REVERSE	SCREEN ROTATION
4	OFF	ON			2プレイヤーゲームの有無
	有	YES	無	NO	* 2 PLAYERS GAME
5	OFF	ON			アイドル中サウンドの有無
	有	YES	無	NO	ATTRACT MODE SOUND
6	OFF	ON			ゲームの難易度
	通常	NORMAL	難	HARDEST	GAME DIFFICULTY
7	OFF	ON			持ち玉数
	3	2			NUMBER OF BALLS
8	OFF				取扱禁止 DON'T CHANGE

\* By choice of setting Dip SW No.4, game can be played by 2 persons alternately (OFF) and 1 person only (ON).