


POLYGON

SOLDER SIDE	PIN #		PART SIDE
G N D	A	1	G N D
G N D	B	2	G N D
+ 5V	C	3	+ 5V
+ 5V	D	4	+ 5V
	E	5	
+ 12V	F	6	+ 12V
KEY	H	7	KEY
COIN COUNTER 2	J	8	COIN COUNTER 1
COIN COUNTERS 3	K	9	
SPEAKER (L)	L	10	SPEAKER (R)
AUDIO (GND)	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
	R	14	VIDEO GND
COIN SW 3	S	15	TEST SW
COIN SW 2	T	16	COIN SW 1
START SW 2	U	17	START SW 1
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P PUSH 1	Z	22	1P PUSH 1
2P PUSH 2	a	23	1P PUSH 2
2P PUSH 3	b	24	1P PUSH 3
2P PUSH 4	c	25	1P PUSH 4
	d	26	
G N D	e	27	G N D
G N D	f	28	G N D

SWITCHES			COIN 1	COIN 2	COIN 3	DEMO SOUND
2	1		COIN 1			
4	3		COIN 2			
7	6	5	COIN 3			
8						
ON	ON	ON	2 coin - 1 credit	COIN 1,2,3		
ON	ON	OFF	1 coin - 1 credit	COIN 1,2,3		
ON	OFF	ON	1 coin - 2 credits	COIN 1,2,3		
ON	OFF	OFF	1 coin - 3 credits	COIN 1,2,3		
OFF	ON	ON	1 coin - 4 credits	COIN 3		
OFF	ON	OFF	1 coin - 5 credits	COIN 3		
OFF	OFF	ON	1 coin - 6 credits	COIN 3		
OFF	OFF	OFF	1 coin - 7 credits	COIN 3		
ON			Demo sound			
OFF			No demo sound			

1644

 Push Memory
 Card in
 Slot 1

Press Test before Power On

Difficulty Level: Easy, Medium, Hard, Very Hard, Ultra Hard

Fight Count: 1, 2, 3, 4, 5

Round Time: 00, 10, 20, 30, 40, 50, 60

Speaker Out: Mono, stereo

3GM Select: Arrange, Original

2P Game Wins: Fruit, Number

Character Change: NO, YES

Key Config: NO FUNCTION

Exit 1P Start

