

PSYCHIC



HEL

PARTS SIDE		SOLDER SIDE	
GND	1	A	GND
GND	2	B	GND
+5V	3	C	+5V
+5V	4	D	+5V
	5	E	
+12V	6	F	+12V
MIS INSERT PRE-	7	H	MIS INSERT PRE-
VENTION	8	J	VENTION
GND	9	K	GND
SPEAKER (+)	10	L	SPEAKER (-)
	11	M	
VIDEO RED	12	N	VIDEO GREEN
VIDEO BLUE	13	P	VIDEO SYNC
VIDEO GND	14	R	SERVICE SW
	15	S	
COIN 1	16	T	COIN 2
1P START	17	U	2P START
1P UP	18	V	2P UP
1P DOWN	19	W	2P DOWN
1P LEFT	20	X	2P LEFT
1P RIGHT	21	Y	2P RIGHT
1UP JUMP	22	Z	2P JUMP
1P ATTACK	23	a	2P ATTACK
	24	b	
	25	c	
	26	d	
GND	27	e	GND
GND	28	f	GND



