

Centuri Pin Outs

"Round-Up"

1981

Parts Side		Solder Side	
GND	Z	22	GND
GND	Y	21	GND
	X	20	
	W	19	
	V	18	
Player 1 Move	U	17	Player 2 Move
Player 1 Right	T	16	Player 2 Right
Player 1 Down	S	15	Player 2 Down
Player 1 Left	R	14	Player 2 Left
Player 1 UP	P	13	Player 2 Up
1 Player Start	N	12	
	M	11	2 Player Start
	L	10	Coin
	K	9	
Video GND	J	8	Blue
Green	H	7	Red
KEY	F	6	KEY
Composite Sinc	E	5	
Speaker	D	4	Speaker
+12V	C	3	+12V
+5V	B	2	+5V
+5V	A	1	+5V

Correct pinouts for "Round-Up"
Not sure what the "Move" switch
does. No action on my PCB.

Do not ground either speaker term. gametech 2017