

"Stratovox"

Taito 1980

Pinouts

(Corrected)

Game Board

"T" Connector

1 +5V
2 +5V
3 +12V
4 +12V
5 -5V
6
7 KEY
8
9
10
11
12
13
14 GND
15 GND
16 GND
17 GND
18

Sound Board

"G" Connector

COMP SIDE	CKT SIDE
-----	-----
1 GND	A GND
2 GND	B GND
3 GND	C GND
4 SP +	D SP GND
5 +12V	E +12V
6 KEY	F KEY
7	H
8	J
9 +5V	K +5V
10 System Reset (See Note)	L
11	M
12	N 2 START
13 COIN	P 1 START
14 1 FIRE	R 1 RIGHT
15 VID RED	S 1 LEFT
16 2 RIGHT	T VID BL
17 2 LEFT	U VID GN
18 2 FIRE	V SYNC

Note: This pin will be held low during normal operation. It must be allowed to pulse high at turn-on to reset processors.