

Centuri Pin Outs

"The Pit"

1982

Parts Side		Solder Side	
GND	Z	22	GND
GND	Y	21	GND
	X	20	
	W	19	
	V	18	
Player 1 Fire	U	17	Player 2 Fire
Player 1 Right	T	16	Player 2 Right
Player 1 Down	S	15	Player 2 Down
Player 1 Left	R	14	Player 2 Left
Player 1 UP	P	13	Player 2 Up
1 Player Start	N	12	
	M	11	2 Player Start
	L	10	Coin
	K	9	
Video GND	J	8	Blue
Green	H	7	Red
KEY	F	6	KEY
Composite Sinc	E	5	
Speaker	D	4	Speaker
+12V	C	3	+12V
+5V	B	2	+5V
+5V	A	1	+5V

Terminals A-Z are on the parts side of the PCB.
gametech 2017

Do not ground either speaker term.