

## DIP SWITCH 1

(V'BALL)

1	2	3	4	5	6	7	8	
								Degree of Difficulty
OFF	OFF							Normal
ON	OFF							Easy
OFF	ON							Less than difficult
ON	ON							Difficult

## DIP SWITCH 2

1	2	3	4	5	6	7	8	
								◎Coin-1
OFF	OFF	OFF						1 Coin -- 1 Play
ON	OFF	OFF						1 Coin -- 2 Play
OFF	ON	OFF						1 Coin -- 3 Play
ON	ON	OFF						1 Coin -- 4 Play
OFF	OFF	ON						1 Coin -- 5 Play
ON	OFF	ON						2 Coin -- 1 Play
OFF	ON	ON						3 Coin -- 1 Play
ON	ON	ON						4 Coin -- 1 Play
								◎Coin-2
			OFF	OFF	OFF			1 Coin -- 1 Play
			ON	OFF	OFF			1 Coin -- 2 Play
			OFF	ON	OFF			1 Coin -- 3 Play
			ON	ON	OFF			1 Coin -- 4 Play
			OFF	OFF	ON			1 Coin -- 5 Play
			ON	OFF	ON			2 Coin -- 1 Play
			OFF	ON	ON			3 Coin -- 1 Play
			ON	ON	ON			4 Coin -- 1 Play
								◎Screen Invert
						OFF		Normal
						ON		Invert
								◎Sound for Demonstration
							OFF	可 Sound
							ON	不可 Not sound

## CONNECTING DIAGRAM

半田面 Solder Side	Pin	No.	Pin	No.	部品面 Parts Side
GND	A	1			GND
GND	B	2			GND
+5V	C	3			+5V
+5V	D	4			+5V
-5V	E	5			-5V
+12V	F	6			+12V
	H	7			
	J	8			
	K	9			
Speaker (-)	L	10			Speaker (+)
	M	11			
Video Green	N	12			Video Red
Video Sync	P	13			Video Blue
Service	R	14			Video GND
	S	15			
Coin 2	T	16			Coin 1
2P Start	U	17			1P Start
2P Up	V	18			1P Up
2P Down	W	19			1P Down
2P Left	X	20			1P Left
2P Right	Y	21			1P Right
2P Push S/W 1	Z	22			1P Push S/W 1
2P Push S/W 2	a	23			1P Push S/W 2
	b	24			
	c	25			
	d	26			
GND	e	27			GND
GND	f	28			GND