

lager

VENUS

- | | |
|--------------------|-------------------|
| SOLDER SIDE | PARTS SIDE |
| -5V | +12V |
| SOUND CH1 | SOUND CH1 |
| 2P SHOOT | 1P RIGHT |
| 2P LEFT | 2P START |
| 1P START | 2P UP |
| 1P SHOOT | SERVICE |
| 1P RIGHT | 1P LEFT |
| 1P UP | 2P DOWN |
| COIN 1 | COIN 2 |
| 1P DOWN | COIN COUNTER 1 |
| TV GREEN | COIN COUNTER 2 |
| TV RED | TV BLUE |
| SOUND CH 2 | TV SYNC |
| GND | SOUND CH 2 |
| GND | GND |
| +5V | +5V |

DIP SW 1

COIN	PLAY	1	2	3	4
1	1	OFF	OFF		
1	2	ON	OFF	OFF	OFF
1	3	OFF	ON		
1	4	ON	ON		
1	5	OFF	OFF	ON	OFF
1	6	ON	OFF		
1	7	OFF	ON		
2	1	ON	ON		
2	3	OFF	OFF		
2	5	ON	OFF	OFF	ON
3	1	OFF	ON		
3	2	ON	ON		
3	4	OFF	OFF		
4	1	ON	OFF	ON	ON
4	3	OFF	ON		
7リ-7レ1		ON	ON		

FOR COIN SW 2, USE SW NO. 5, 6, 7, & 8 IN THE SAME MANNER AS SW 1, 2, 3, & 4.

DIP SW 2

	SW	1	2	3	4	5	6	7	8
NR OF LIVES	3	OFF	OFF				ON	OFF	
"	4	ON	OFF				ON	OFF	(ALWAYS OFF)
"	5	OFF	ON			ON	ON	OFF	(ALWAYS ON)
"	255	ON	ON						
COCKTAIL TABLE TYPE				OFF					
UPRIGHT TYPE				ON					
BONUS	30,000/70,000				OFF				
	40,000/80,000				ON				
WITH ATTRACT MODE SOUND									OFF
NO ATTRACT MODE SOUND									ON

DIP 3 (not used)

