Wiring diagram Wec Le Mans 24, Konami 1986

28 PIN EDGE CONNECTOR ON CPU BOARD PWB(A)201020A

PARTS		SOLDER
GND	+ 1 1	GND
GND	2 2	GND
+5V	3 3	+5V
	4 4	+5V
	5 5	
+12V	6 6	+12V
KEY	7 7	KEY
COUNTER 1	8 8	COUNTER 2
	9 9	
	10 10	
	11 11	
		GREEN
BLUE	13 13	SYNC
Start Lamp		
TEST SW		
COIN 1	16 16	COIN 2
START		
Shift SW	: : :	
	19 19	
	20 20	
Llimit	: : :	
Rlimit	: : :	
GND	23 23	GND
Turn VR		•
		Gas VR
AD VCC		
	27 27	GND
GND	28 28	GND

CND (ON CPU BOARD PWB(A)201020A)

.

- 1 GND
- 2 Mono (unamplified) to AMP board CN1
- 3 GND
- 4 Speaker Left + (unamplified) to AMP board CN1
- 5 GND
- 6 Speaker Right + (unamplified) to AMP Board CN1

Wec Le Mans 24.txt

```
CNE ( ON VIDEO BOARD PWB(B)201023 )*
-----
1 VCC
2 VCC
3 VCC
4 GND
5 GND
6 GND
AMP BOARD PWB(C)402079
CN4 POWER
-----
1 +12V
2 GND
CN1 INPUT
1 GND
2 Mono (unamplified) from CPU board CND
4 Speaker Left + (unamplified) from CPU board CND
6 Speaker Right + (unamplified) from CPU board CND
CN3 SPEAKER OUT
-----
1 Speaker Right -
2 Speaker Right +
3 Speaker Left -
4 Speaker Left +
5 MONO -
6 MONO +
* Must be powered to work, video board doesn't get power from CPU board
Derived from Schematics, pinout missing some outputs
Typed on 19.05.2018 by Corrado Tomaselli c.tomaselli78@gmail.com
```