取 扱 説 明 書


OPERATOR'S MANUAL

WELLTRIS TM

WELLTRISTM
TM AND (C) 1989 DOKA. WELLTRIS LICENSED TO BULLET-PROOF SOFTWARE.
(C) 1990 BULLET-PROOF SOFTWARE ALL RIGHTS RESERVED.
SUBLICENSED TO VIDEO SYSTEM CO.,LTD.

ORIGINAL CONCEPT AND DESIGN BY ALEXEY PAJITNOV


| 使用電源 | DC+5V DC+12V |
|--------------|----------------------------------|
| Power Supply | |
| CRT画面 | 横 画 面 |
| Monitor | horizontal |
| ゲームスタイル | 1P、2P同時プレイ可 |
| Game Style | I player Or 2player Simultaneous |

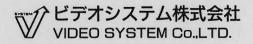

Connector Diagram


●JAMMA規格

| SOLDER SIDE(半田面) | NO. | NO. | PARTS SIDE (部品面) |
|------------------|-----|-----|------------------|
| GND | Α | 1 | GND |
| GND | В | 2 | GND |
| +5V | С | 3 | +5V |
| +5V | D | 4 | +5V |
| | E | 5 | |
| +12V | F | 6 | +12V |
| | Н | 7 | |
| COIN COUNTER 2 | J | 8 | COIN COUNTER 1 |
| | K | 9 | |
| SPEAKER (-) | L | 10 | SPEAKER (+) |
| | М | 11 | |
| VIDEO GREEN | N | 12 | VIDEO RED |
| VIDEO SYNC | Р | 13 | VIDEO BLUE |
| SERVICE SW | R | 14 | VIDEO GND |
| | S | 15 | |
| COIN SW 2 | Т | 16 | COIN SW 1 |
| 2P START | U | 17 | 1P START |
| 2P UP | ٧ | 18 | 1P UP |
| 2P DOWN | W. | 19 | 1P DOWN |
| 2P LEFT | Х | 20 | 1P LEFT |
| 2P RIGHT | Υ | 21 | 1P RIGHT |
| 2P SW 1 A BUTTON | Z | 22 | 1P SW 1 A BUTTON |
| 2P SW 2 B BUTTON | a | 23 | 1P SW 2 B BUTTON |
| | b | 24 | 1 |
| | С | 25 | |
| | d | 26 | |
| GND | е | 27 | GND |
| GND | f | 28 | GND |

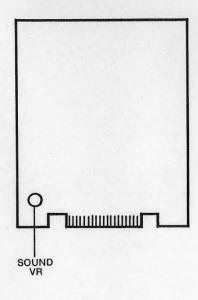

コントロールパネル Control Panel.

ジョイスティックレバー 8方向(2方向にもできます。) JOYSTICK LEVER……8 directions (or 2 directions)

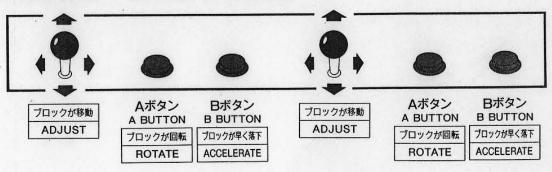

DIP SW 1 (SW 2)

| COIN | COIN 1 | | | | COIN 2 | | | | |
|--------|-----------------|-----------------------|------|---------------------|--------|---------|-----|--------|-----|
| COIN | CREDIT | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| 1COIN | 1CREDIT | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| 1COIN | 2CREDITS | ON | OFF | OFF | OFF | ON | OFF | OFF | OFF |
| 1COIN | 3CREDITS | OFF | ON | OFF | OFF | OFF | ON | OFF | OFF |
| 1COIN | 4CREDITS | ON | ON | OFF | OFF | ON | ON | OFF | OFF |
| 1COIN | 5CREDITS | OFF | OFF | ON | OFF | OFF | OFF | ON | OFF |
| 1COIN | 6CREDITS | ON | OFF | ON | OFF | ON | OFF | ON | OFF |
| 2COINS | 1CREDIT | OFF | ON | ON | OFF | OFF | ON | ON | OFF |
| 3COINS | 1CREDIT | ON | ON | ON | OFF | ON | ON | ON | OFF |
| 4COINS | 1CREDIT | OFF | OFF | OFF | ON | OFF | OFF | OFF | ON |
| 5COINS | 1CREDIT | ON | OFF | OFF | ON | ON | OFF | OFF | ON |
| 2COINS | 3CREDITS | OFF | ON | OFF | ON | OFF | ON | OFF | ON |
| 2COINS | 1CREDIT | | | | | | | | |
| 4COINS | 2CREDITS | ON | N ON | OFF | ON | ON | ON | OFF | ON |
| 5COINS | 3CREDITS | | | | | | | | |
| 6COINS | 4CREDITS | | | | | | | | |
| 2COINS | 1CREDIT | OFF | OFF | ON | ON | OFF | OFF | ON | ON |
| 4COINS | 3CREDITS | OFF | OFF | ON | ON | OFF | OFF | ON | ON |
| 1COIN | 1CREDIT | | | | | | | | - |
| 2COINS | 2CREDITS | | | | | | | | |
| 3COINS | 3CREDITS | ON | OFF | ON | ON | ON | OFF | ON | ON |
| 4COINS | 4CREDITS | | | | | | | | |
| 5COINS | 6CREDITS | | | | | | | | |
| 1COIN | 1CREDIT | -7111- | | er i arw | | | | | |
| 2COINS | 2CREDITS | STATE OF THE PARTY OF | 100 | 12223 | | -2412-0 | | 52-1-1 | |
| 3COINS | 3CREDITS | OFF | ON | ON | ON | OFF | ON | ON | ON |
| 4COINS | 5CREDITS | | | | | 100 | 14 | | |
| COIN | 1CREDIT | 011 | 011 | 011 | ON | ON | 011 | 201 | 011 |
| 2COINS | 3CREDITS | ON | ON | ON | ON | ON | ON | ON | ON |

DIP SW 2 (SW 3)

| DIP 2 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|---|--------------------------------------|------------------------|------------------------|-----|-----------|-----------|-----------|-----------|-----------|
| DIFFICULTY | NORMAL EASY HARD SUPER HARD | OFF OFF ON ON | OFF ON OFF ON | | | | | | |
| PLAY MODE 1 COIN···1 PLAYER 2 COIN···2 PLAYER | | | | OFF | | | | | |
| | COIN···1 or 2 PLAYER | | | ON | | | | | |
| DEMO SOUND | ON OFF | | | | OFF ON | | | | |
| N.C. OFF で使用してください | | | | | | OFF ON | | | |
| N.C. OFF で使用してください | | | | | R T | | OFF ON | | |
| FLIP FLOP | OFF ON | | | | | | | OFF ON | |
| TEST MODE | OFF ON | | | | | -10 | | | OFF ON |

※(SW__) は基板の方に入っているシルクのNOです。

**Numbers shown as (SW__) are silk-printed on the substrate.

HOW TO PLAY


- ◆底面で縦、横のラインが揃えば消えます。
- ◆例面にはみ出ると、その分だけボーダーラ インがせまってきます。
- ◆ブロックがボーダーラインに達すると、ゲームオーバーです。
- ◆ラインを消した数だけボーダーラインが元にもどります。
- ◆ボーナスブロックを消せば復活!

- If blocks are aligned horizontally or vertically along the bottom surface, the entire line disappears.
- If a block protrudes into a wall, the border will close in.
- The border will recede backward as many lines as you delete.
- If the blocks are piled high enough to reach the border, it is game-over.
- If you delete a bonus block, you gain a chance for a quick victory.


画面調整について

WHITE RED


GREEN BLUE

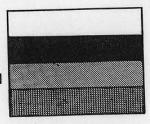

色あいを合わせます。 Rレベル, Gレベル, Bレベルを調整。

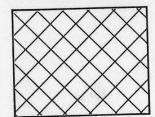

画面の縦横比をあわせます。 H-SIZE, V-SIZEを調整。

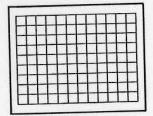

画面の位置を合わせます。

上下位置: V-POSI 左右位置:H-POSI

大きさ(はみ出しているかどうか):H-SIZE, V-SIZE

社 〒606 京都市左京区下鴨松ノ木町35-1 OFFICE: 35-1 Mathunoki-cho, Simogamo, Sakyo-ku, Kyoto, 606 Japan ■TEL/075-723-0358∜ ■FAX/075-723-0368