

# WESTSTORY

WESTSTORY

## DIP SWITCH SETTING 1

DIPSW-1		1	2	3	4	5	6	7	8	
COIN MODE SELECT		COIN MODE 1 OFF								
		ON								
C O I N  M O D E	MODE 1	1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	OFF			
		2 COINS 1 CREDIT	↑	ON	OFF	OFF	OFF			
		3 COINS 1 CREDIT		OFF	ON	OFF	OFF			
		4 COINS 1 CREDIT		ON	ON	OFF	OFF			
		5 COINS 1 CREDIT		OFF	OFF	ON	OFF			
		6 COINS 1 CREDIT		ON	OFF	ON	OFF			
		1 COIN 2 CREDITS		OFF	ON	ON	OFF			
		1 COIN 3 CREDITS		ON	ON	ON	OFF			
		1 COIN 4 CREDITS		OFF	OFF	OFF	ON			
		1 COIN 5 CREDITS		ON	OFF	OFF	ON			
		1 COIN 6 CREDITS		OFF	ON	OFF	ON			
		2 COINS 3 CREDITS		ON	ON	OFF	ON			
		3 COINS 2 CREDITS		OFF	OFF	ON	ON			
	5 COINS 3 CREDITS		ON	OFF	ON	ON				
	8 COINS 3 CREDITS		↓	OFF	ON	ON	ON			
		FREE PLAY	OFF	ON	ON	ON	ON			
	MODE 2	COIN A	1 COIN 1 CREDIT	ON	OFF	OFF				
			2 COINS 1 CREDIT	↑	ON	OFF				
			3 COINS 1 CREDIT		OFF	ON				
			5 COINS 1 CREDIT		ON	ON				
COIN B		1 COIN 2 CREDITS				OFF	OFF			
		1 COIN 3 CREDITS				ON	OFF			
		1 COIN 5 CREDITS				OFF	ON			
	1 COIN 6 CREDITS	↓	ON		ON	ON				
STARTING COIN		NORMAL					OFF			
		x 2					ON			
SPEED	1							ON	ON	
	2							OFF	ON	
	3							ON	OFF	
	4							OFF	OFF	

## DIP SWITCH SETTING 2

DIPSW-2		1	2	3	4	5	6	7	8
No. of LIVES	3	OFF	OFF						
	2	ON	OFF						
	5	OFF	ON						
	1	ON	ON						
EXTEND PLAY (extend-every)	100000, +200000 EVERY			OFF	OFF				
	200000, +300000 EVERY			ON	OFF				
	500000 ONLY			OFF	ON				
	NO EXTENDED			ON	ON				
DIFFICULTY	1(NORMAL)					OFF	OFF		
	2(EASY)					ON	OFF		
	3(HARD)					OFF	ON		
	4(HARDEST)					ON	ON		
CONTINUE PLAY	YES							OFF	
	NO							ON	
DEMO SOUND	YES								OFF
	NO								ON

AT POWER ON, IF YOU TOUCH THE JOYSTICK, YOU WILL HAVE DIP-SW SETTING ON THE SCREEN.

JAMMA コネクター表

WESTSTORY


半田面 SOLDER SIDE		端子番号 Pin No.	部品面 PARTS SIDE
	GND	A 1	GND
	GND	B 2	GND
	+5V	C 3	+5V
	+5V	D 4	+5V
	-5V	E 5	-5V
	+12V	F 6	+12V
	誤挿入防止キー	H 7	誤挿入防止キー
	COIN COUNTER 2	J 8	COIN COUNTER 1
	N. C.	K 9	N. C.
	SP (-)	L 10	SP (+)
	N. C.	M 11	N. C.
	VIDEO GREEN	N 12	VIDEO RED
	VIDEO SYNC	P 13	VIDEO BLUE
	SERVICE SW	R 14	VIDEO GND
	N. C.	S 15	N. C.
	COIN SW 2	T 16	COIN SW 1
	START SW 2	U 17	START SW 1
2P	CONTROL UP	V 18	1P CONTROL UP
2P	CONTROL DOWN	W 19	1P CONTROL DOWN
2P	CONTROL LEFT	X 20	1P CONTROL LEFT
2P	CONTROL RIGHT	Y 21	1P CONTROL RIGHT
2P	CONTROL PUSH 1	Z 22	1P CONTROL PUSH 1
2P	CONTROL PUSH 2	a 23	1P CONTROL PUSH 2
2P	CONTROL PUSH 3	b 24	1P CONTROL PUSH 3
	N. C.	c 25	N. C.
	N. C.	d 26	N. C.
	GND	e 27	GND
	GND	f 28	GND

How to play:

BLOOD BROS. is a simultaneous two player game.

One 8-way joystick and 3 buttons for each player.


1. Use joystick for player and cursor control.
2. Use button (A) for firing.
3. Use button (B) for rolling to left or right.
4. Use button (C) for throwing dynamite.
5. Damage gauge: to clear each scene, you want to put out red damage gauge by shooting the enemy.

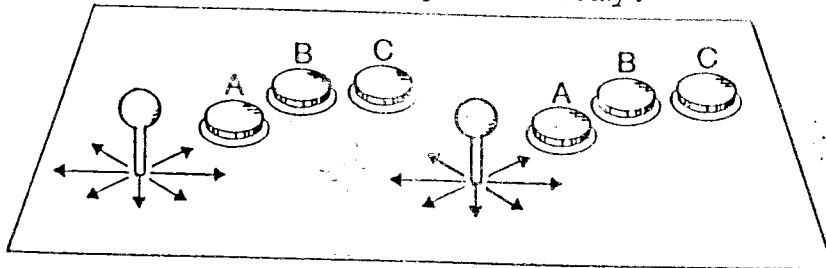

Increase in number of dynamite



 Destruction power up



Machine gun (fast firing)

Insert extra coins to continue game.