

DIP SWITCH SETTING

DIP SWITCH 1					
No.	SETTING				REMARKS
1	OFF	ON	OFF	ON	COIN/CREDIT RIGHT SELECTOR
	OFF	OFF	ON	ON	
	1 COIN 1 PLAY	1 2	1 3	2 1	
3	OFF	ON	OFF	ON	COIN/CREDIT LEFT SELECTOR
	OFF	OFF	ON	ON	
	1 COIN 1 PLAY	1 2	1 3	2 1	
5	OFF				DON'T CHANGE
6	OFF		ON		ATTRACT MODE SOUND
	YES	無	NO		
7	OFF		ON		SCREEN ROTATION
	NORMAL		REVERSE		
8	OFF		ON		CONTROL PANEL
	TABLE		UPRIGHT		


DIP SWITCH 2					
No.	SETTING				REMARKS
1	OFF	ON	OFF	ON	NUMBER OF LIVES
	OFF	OFF	ON	ON	
2	3	5	1	~	GAME DIFFICULTY
	OFF	OFF	ON	ON	
3	OFF	ON	OFF	ON	GAME DIFFICULTY
	OFF	OFF	ON	ON	
4	NORMAL	EASY	HARD	HARDEST	GAME DIFFICULTY
	OFF	OFF	ON	ON	
5	OFF		ON		CONTINUE MODE
	YES			NO	
6	OFF				DON'T CHANGE
7	OFF				
8	OFF				

# WONDER PLANET

/ HARNESS CONNECTION (WONDER PLANET)

/ TERMINAL NUMBERING

CONNECTOR CR7E-56DA-3.96E (HRS) 3.96mm Pitch  
1168-056-009 (KEL) 3.96mm Pitch

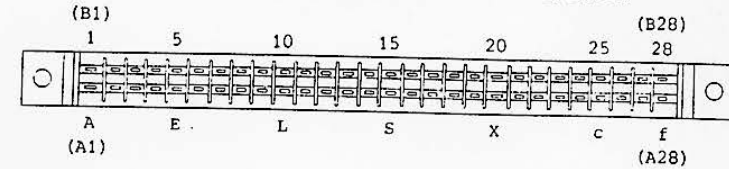

SIGNAL TO TERMINAL

SOLDER SIDE	PIN #	PARTS SIDE
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
	E 5	
+12V	F 6	+12V
MISTAKEN INPUT PREVENTION	H 7	MISTAKEN INPUT PREVENTION
COIN COUNTER 2	J 8	COIN COUNTER 1
	K 9	
SPEAKER (-)	L 10	SPEAKER (+)
	M 11	
VIDEO GREEN	N 12	VIDEO RED
VIDEO SYNC	P 13	VIDEO BLUE
SERVICE SWITCH	R 14	VIDEO GND
	S 15	
COIN SWITCH 2	T 16	COIN SWITCH 1
START SWITCH 2	U 17	START SWITCH 1
2P CONTROL 1 UP	V 18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W 19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X 20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y 21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	Z 22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	a 23	1P CONTROL 6 PUSH 2
	b 24	
	c 25	
	d 26	
GND	e 27	GND
GND	f 28	GND

WONDER PLANET

SOLDER SIDE

PARTS SIDE

GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
	5	
+12V	6	+12V
	7	
	8	COIN COUNTER 1
	9	
SP (-)	10	SP (+)
	11	
VIDEO GREEN	12	VIDEO RED
VIDEO SYNC	13	VIDEO BLUE
SERVICE SW	14	VIDEO GND
	15	
COIN SW 2	16	COIN SW 1
START SW 2	17	START SW 1
2P UP	18	1P UP
2P DOWN	19	1P DOWN
2P LEFT	20	1P LEFT
2P RIGHT	21	1P RIGHT
2P PUSH 1	22	1P PUSH 1
2P PUSH 2	23	1P PUSH 2
	24	
	25	
	26	
GND	27	GND
GND	28	GND

DIP SW 1					
NO	SETTING				REMARKS
1	OFF	ON	OFF	ON	COIN/CREDIT RIGHT SELECTOR
2	OFF	OFF	ON	ON	
	1COIN 1	1	2		
	1PLAY 2	3	1		
3	OFF	ON	OFF	ON	COIN/CREDIT LEFT SELECTOR
4	OFF	OFF	ON	ON	
	1COIN 1	1	2		
	1PLAY 2	3	1		
5		OFF			DON'T CHANGE
6	OFF		ON		ATTRACT MODE SOUND
	ON		OFF		
7	OFF		ON		SCREEN ROTATION
	NORMAL		REVERSE		
8		OFF			<del>DON'T CHANGE</del> <i>table - upright</i>

DIP SW 2					
NO	SETTING				REMARKS
1	OFF		ON		POVER LEVEL
	NORMAL		LEVEL		
2		OFF			DON'T CHANGE
3	OFF	ON	OFF	ON	GAME DIFFICULTY
4	OFF	OFF	ON	ON	
	NORMAL	EASY	LIEELE	DIFFICULT	
			DIFFICULT		
5		OFF			DON'T CHANGE
6		OFF			
7		OFF			
8		OFF			