


WORLD-CUP II


WC '90

● JAMMA.

SOLDER SIDE (半田面)	NO.	NO.	PARTS SIDE (部品面)
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
COIN L. OUT 2	K	9	COIN L. OUT 1
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
RESET SW	S	15	TEST SW
COIN SW 2	T	16	COIN SW 1
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P SW 1 A BUTTON	Z	22	1P SW 1 A BUTTON
2P SW 2 B BUTTON	a	23	1P SW 2 B BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

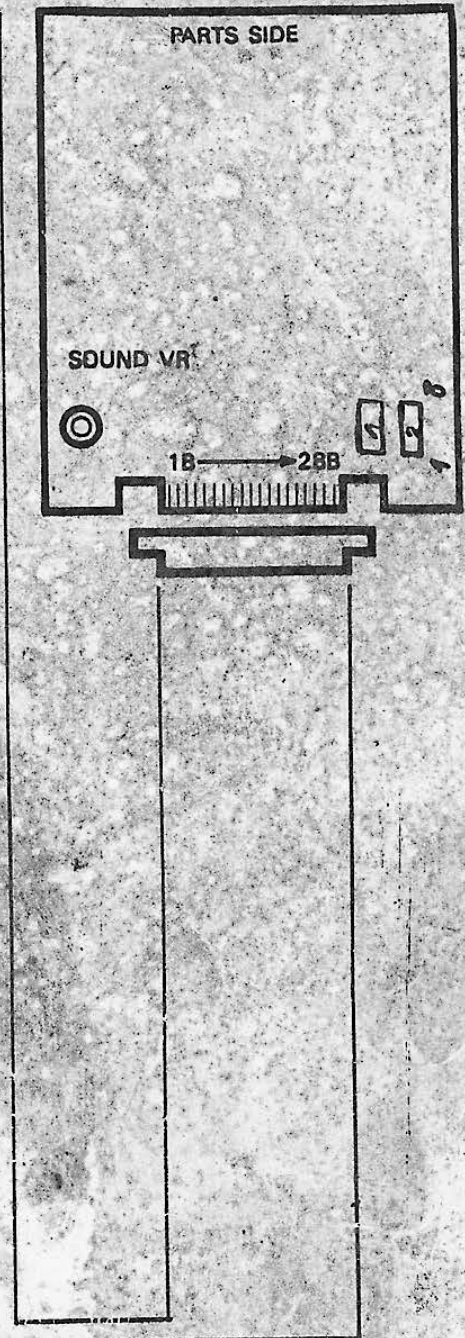

JOYSTICK LEVER..... 8 directions

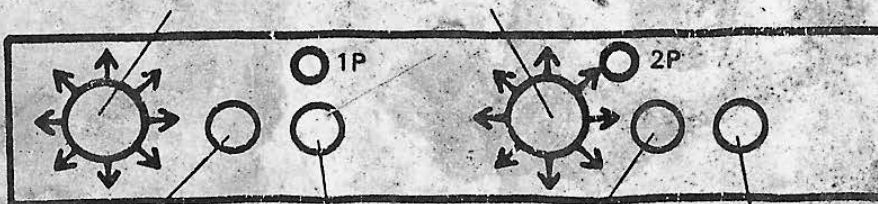

A BUTTON SLIDING B BUTTON JUMP A BUTTON SLIDING B BUTTON JUMP

POWER SOURCE
 +5V 5A
 +12V 1

ディップスイッチ ● Dip Switch

DIP SWITCH 1		8	7	6	5	4	3	2	1
COIN/CREDIT	1 COIN 1 CREDIT					OFF	OFF	OFF	OFF
	1 COIN 2 CREDIT					ON	OFF	OFF	OFF
	1 COIN 3 CREDIT					OFF	ON	OFF	OFF
	1 COIN 4 CREDIT					ON	ON	OFF	OFF
	1 COIN 5 CREDIT					OFF	OFF	ON	OFF
	1 COIN 6 CREDIT					ON	OFF	ON	OFF
	2 COIN 1 CREDIT					OFF	ON	ON	OFF
	2 COIN 3 CREDIT					ON	ON	ON	OFF
	3 COIN 1 CREDIT					OFF	OFF	OFF	ON
	4 COIN 1 CREDIT					ON	OFF	OFF	ON
	5 COIN 1 CREDIT					OFF	ON	OFF	ON
	6 COIN 1 CREDIT					ON	ON	OFF	ON
	7 COIN 1 CREDIT					OFF	OFF	ON	ON
	8 COIN 1 CREDIT					ON	OFF	ON	ON
9 COIN 1 CREDIT					OFF	ON	ON	ON	
10 COIN 1 CREDIT					ON	ON	ON	ON	
DIFFICULTY	MODERATE			OFF	OFF				
	↓			ON	OFF				
	DIFFICULT			OFF	ON				
COUNT DOWN	1 COUNT 1 SECOND		OFF						
	1 COUNT 56/60 SECOND		ON						
		OFF							

DIP SWITCH 2		8	7	6	5	4	3	2	1
2P 1P GAME TIME	2:00							OFF	OFF
	1:00							ON	OFF
	1:30							OFF	ON
	2:30							ON	ON
1P 2P GAME TIME	3:00				OFF	OFF	OFF		
	1:00				ON	OFF	OFF		
	1:30				OFF	ON	OFF		
	2:00				ON	ON	OFF		
	2:30				OFF	OFF	ON		
	3:30				ON	OFF	ON		
	4:00				OFF	ON	ON		
5:00				ON	ON	ON			
DON'T CHANGE		ON	OFF	OFF					