

# Sega Hologram Marquee Assembly Instructions

## Parts List

### Hardware

- A. 6) 1/4" 20X2 1/2" Machine Screws
- B. 2) 1/4" 20X3 1/2" Machine Screws
- C. 4) 1/4" 20X2 1/2" Wing Nuts
- D. 4) 1/4" Washers
- E. 4) #8X3/4" Sheet Metal Screws
- F. 2) L-Brackets
- G. 2) Plastic End Cap
- O. 1) Allen Wrench

### 1) Light Box Including:


- H. 1) Light Fixture
- I. 1) Light Bulb

### 2) Square Poles

- J. 1) 12" Cord and Plug Wired to Light Box thru Pole
- K. 1) Rubber Grommet

### 1) Plex and Graphic Sub Pack:

- L. 1) Clear 12"X40" Plex
- M. 1) Frosted 12"X40" Plex
- N. 1) Hologram Graphic Panel

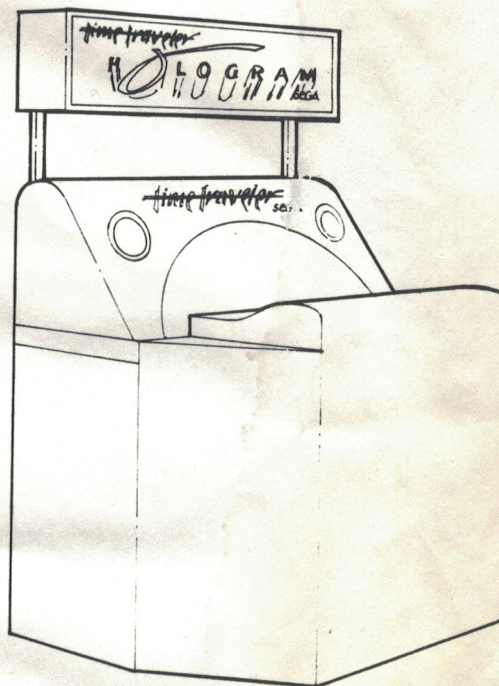

(408)432-8333  
Made in USA



Figure 1. Remove end panel from light box using allen wrench supplied and install light bulb (I) in light fixture (H).

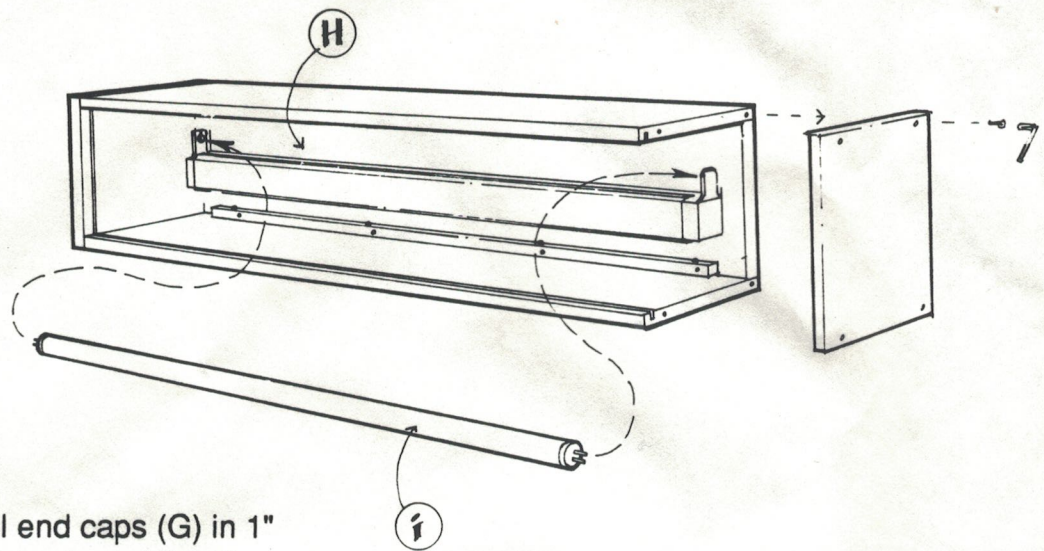


Figure 2. Install end caps (G) in 1" square poles. Affix 1" square poles to light box (H) with 2 1/2" Machine screws on outside and wing nuts (C) on inside. (Note: The end of the poles with holes 7" apart attaches to the light box).

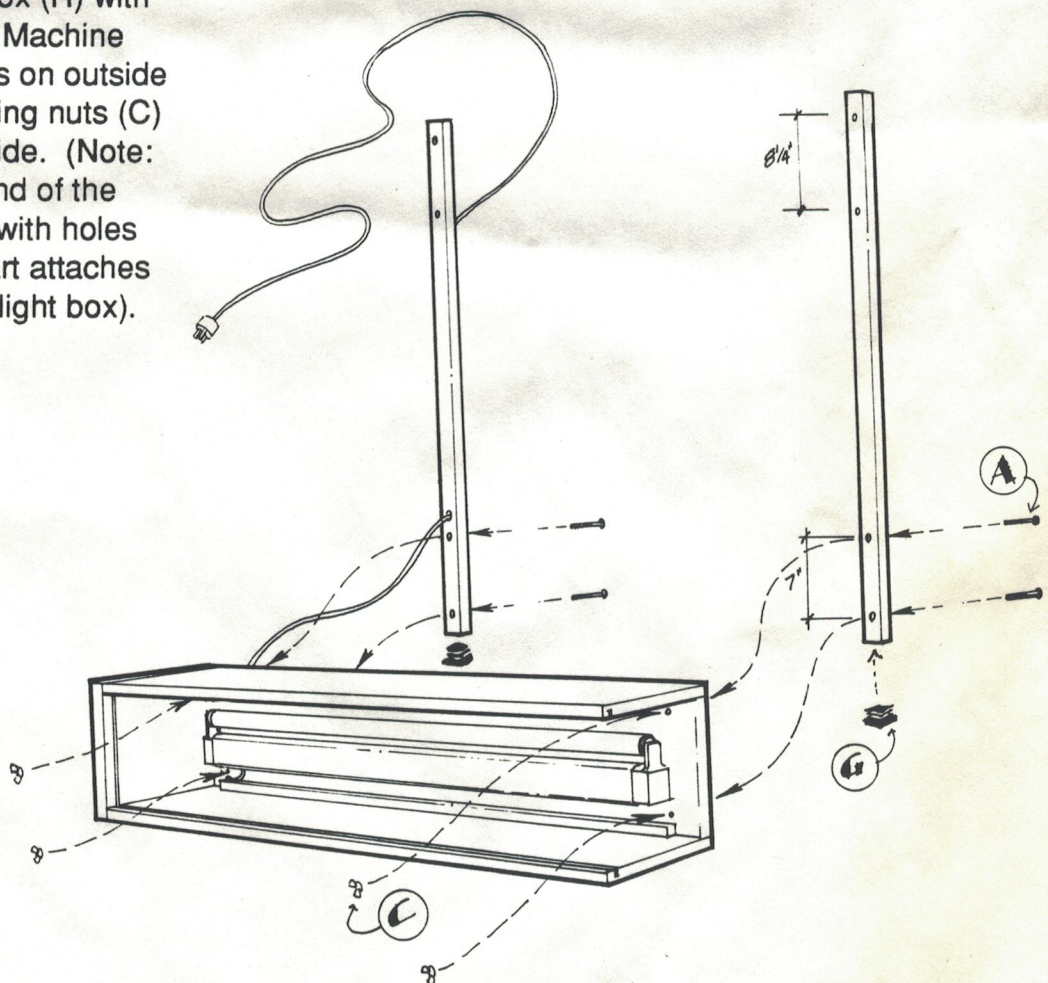




Figure 3. Peel protective coating from front and rear of both clear plex (L) and frosted plex (M). Form a sandwich of the three panels with frosted on inside (M) hologram graphics panel in middle (N) and clear panel on outside. Slide the sandwich into the groove slot in light box.


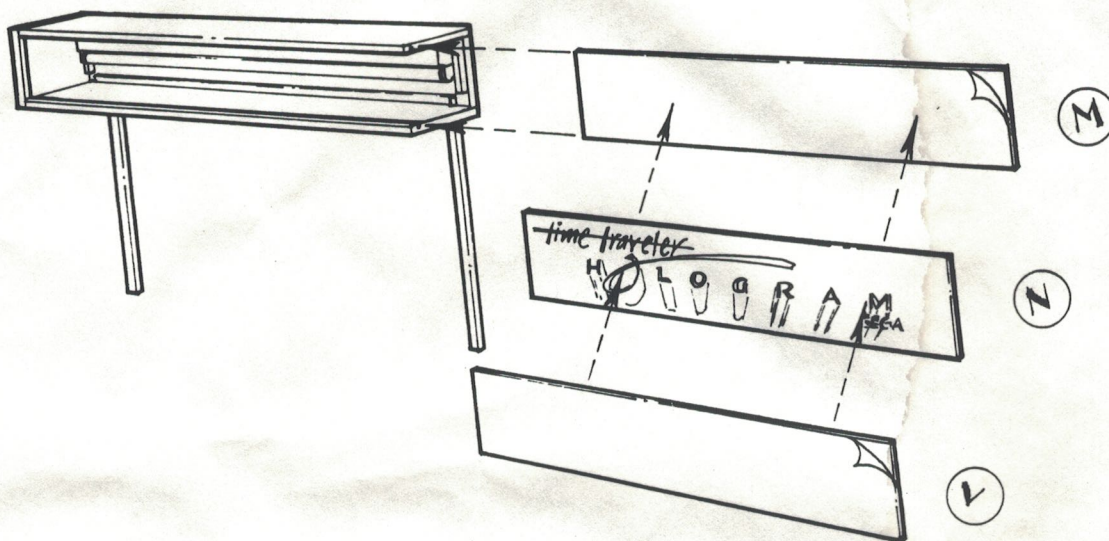


Figure 4. Re-assemble the end panel to the light box.



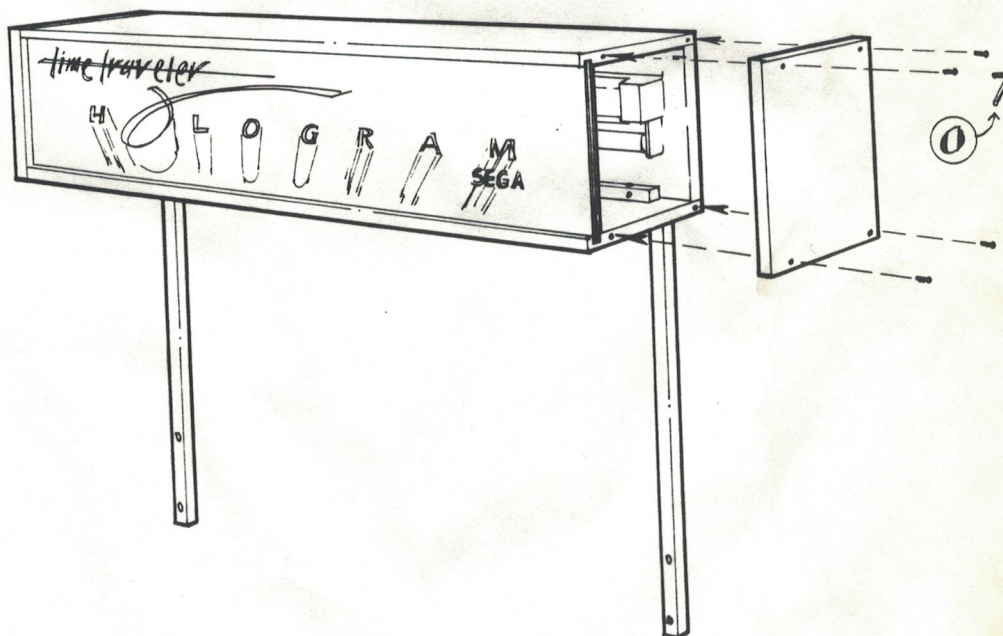

Remove the rear door of the Hologram Game. (Disconnect Fan Connection).

Figure 5. Remove the two (2) outermost T-27 Torx screws on the rear of the cabinet that secure the Canopy to the rear Cabinet base.

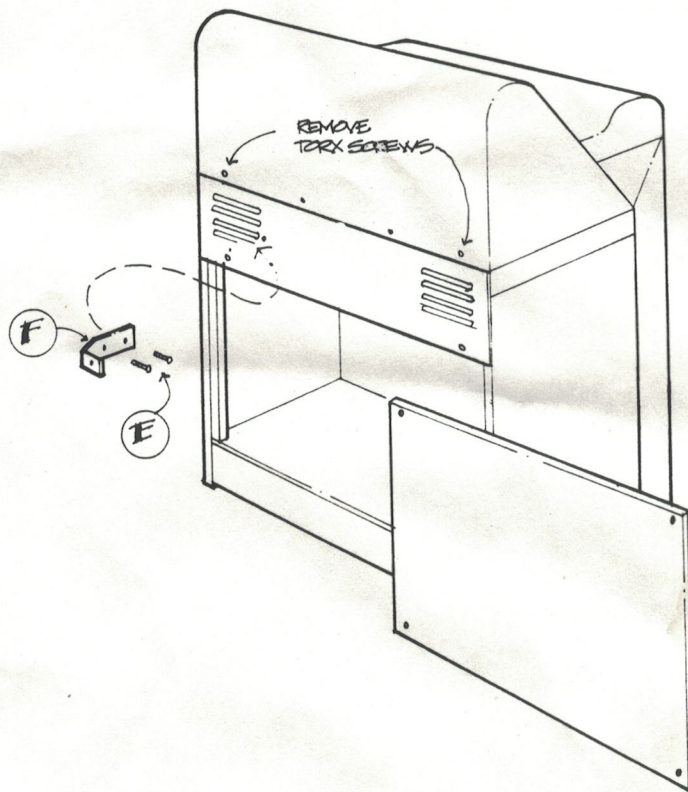




Figure 6. Preliminarily mount the Hologram sign to the game using the two (2) 10-24 by 3 1/2" screws and washers in place of the screws removed above.

Install the sheet metal brackets on the left and right inside of the Cabinet by using the two (2) 10-24 X2 1/3" screws and washers through the existing holes in the cabinet. (Note: This allows for proper alignment of the brackets when they secured to the Cabinet).

Secure the left and right bracket by using the (4) #8 Wood Screws provided.

Verify that all screws are secure and tight.

Connect Rear Door Fan and remount Rear Door.

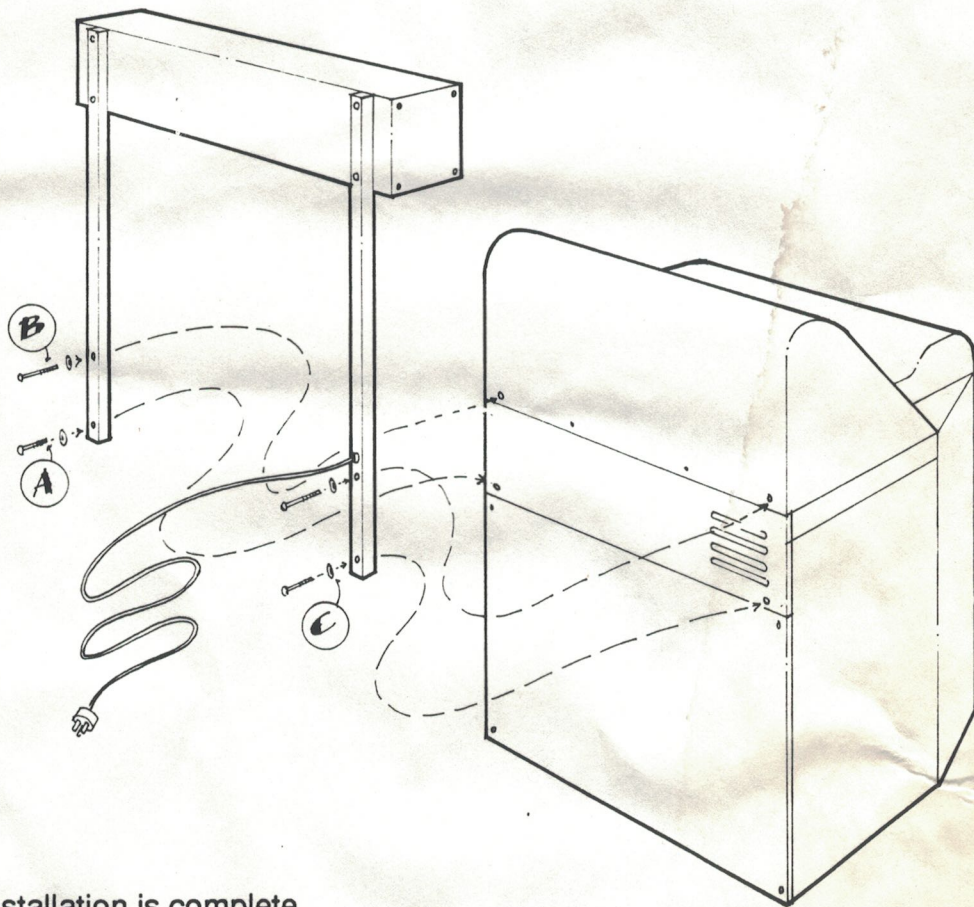


Figure 7. Installation is complete.