


TM

Installation Instructions for

Update Kit 45394

Updates NBA / Blitz '99 to Blitz 2000 Gold Edition / NBA Showtime SportsStation

For Use on all Models of NBA / Blitz Combination Video Games

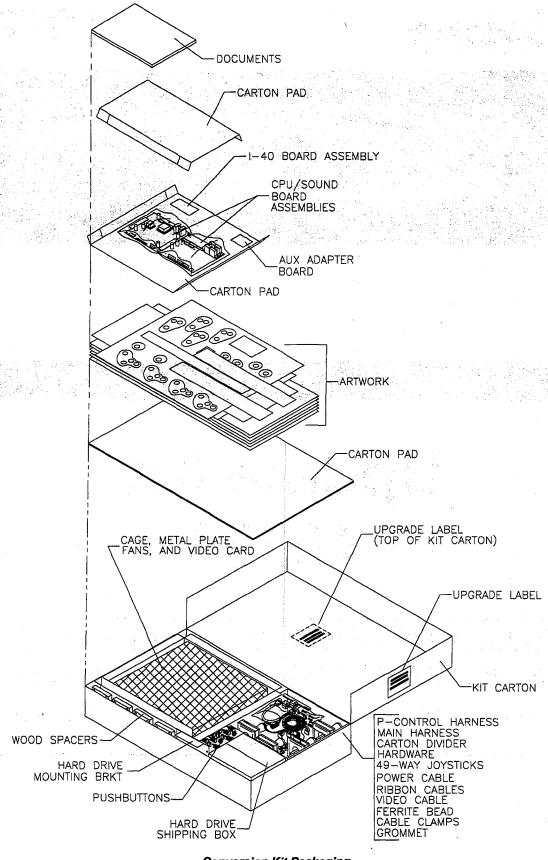

Conversion Kit Packaging

Cá -	NOTICE: The term VGM refers to the video game machine.
	NOTICE: Leave EPROMs in the protective package until you're ready to install them. Store the devices that you remove in the packaging from this upgrade kit.
	NOTICE: The hard disk drive must be programmed with <i>Sport Station 2000</i> software. If the disk does not contain this version of software return it to an authorized distributor to be upgraded.


INSPECT KIT 45394

Kit 45394 includes components to update a *NBA/Blitz* '99 kit 45967 to a *Sport Station* kit. Unpack the materials from the carton and check for obvious signs of damage. Use this checklist to be sure the kit is complete.

Item	Part #	Qty	Item	Part #	Qty
ARTWORK			COMPONENTS, MAJOR		
☐ Artwork, Backlit Marquee	31-3515-2	1	□ PIC, Programmed	A-23434	1
□ Decal, Cntrl Panel Wallpaper	31-3480.1	1	☐ ROM, U27 Boot	A-5343-45994-1	1
□ Decal, Side Panel, Universal	31-3476	2			
☐ Decal, Cntrl Panel, Add On	31-3481	1	DOCUMENTS		
☐ Decal, Cntrl Panel Hsg Left	31-3479-1	1	☐ Label, Version Upgrade	16-10978	2
□ Decal, Cntrl Panel Hsg Right	31-3479-2	1	□Manual, Kit	16-45994-101	1
□ Decal, Cntrl Panel Hsg Front	31-3479-3	1			
□ Decal, Pop-Up Header	31-3482.1	1			

INSTALL CHIPS

- [] 1. Open the kit carton that you intend to upgrade. See the illustration *Conversion Kit Packaging*. Remove the manual, CPU Board, SIO Board and artwork from the carton. Leave other parts in carton as shown.
- [] 2. Locate the socket for the memory circuit in one corner of the CPU Board.
- [] 3. Use a chip extraction tool to remove EPROM U27 on the CPU Board. Gently rock the chip in its socket until it is loosened and can be removed from the CPU Board.
- [] 4. Locate the EPROM labeled NFL Blitz 2000/NBA Showtime U27 Boot in the kit. Remove the protective packaging and orient the chip over the empty socket. Align the notches on both the chip and socket. Insert the chip pins into the socket and press the chip firmly to seat it. Place the modified board in an anti-static bag and set it aside.

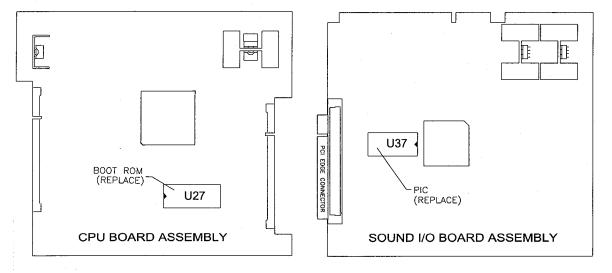

- [] 5. Use a chip extraction tool to remove the PIC at location U37 on the SIO Board. Gently rock the chip in its socket until it is loose and can be removed from the SIO Board.
- [] 6. Find the new PIC chip in the kit. Remove the protective packaging. Orient the PIC over the empty socket. Align the notches on both the chip and socket. Insert the chip pins into the socket and press the chip firmly to seat it. Place the modified board in an anti-static bag.
- [] 7. Return both the modified CPU Board and SIO Board to the kit carton.

UPDATE ART, MANUAL, LABELS

- [] 8. Locate the marquee art in the Blitz '99 kit. Replace it with the Sport Station marquee art.
- [] 9. Locate the top bezel art in the Blitz '99 kit. Replace it with Sport Station top bezel art.
- [] 10. Locate the bottom bezel art in the Blitz '99 kit. Replace it with Sport Station bottom bezel art.
- [] 11. Locate the art for the left, front and right sides of the control panel housing in the Blitz '99 kit. Replace it with art for the left, front and right sides of the Sport Station control panel housing.
- [] 12. Locate both pieces of side panel art for the Blitz '99 kit. Replace it with Sport Station side panel art.
- [] 13. Locate the control panel add-on art for the Blitz '99 kit. Replace it with Sport Station control panel add-on art.
- [] 14. Locate the pop-up header for the Blitz '99 kit. Replace it with the pop-up header for Sport Station.
- [] 15. Locate the two version-upgrade labels in the Sport Station kit. Stick one label on the end of the upgraded kit carton. Stick the other label on the topside of the upgraded kit carton.
- [] 16. Replace the kit instruction manual with the new one.

FINISH THE JOB

- [] 17. See the illustration Conversion Kit Packaging. Repack the carton exactly as shown.
- []18. Make sure that all parts have been returned to the upgraded kit carton. Close and seal the upgraded kit carton.