



ELECTRICAL SYSTEM

CONNECTS TO PC-1

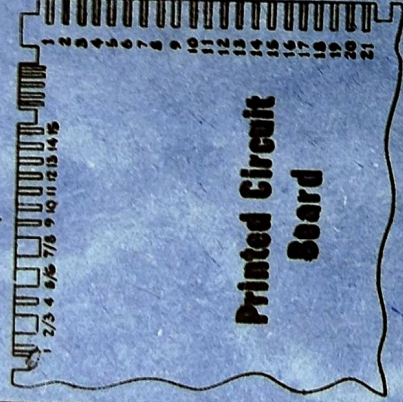

NOTE
 LIGHTS
 L1, 2, 3, 4, 7, 8, 9, 10, 11, 17 ARE ALWAYS ON DURING PLAY.
 L5, 6 AND L10 THRU L15 TURN ON/OFF DURING PLAY.

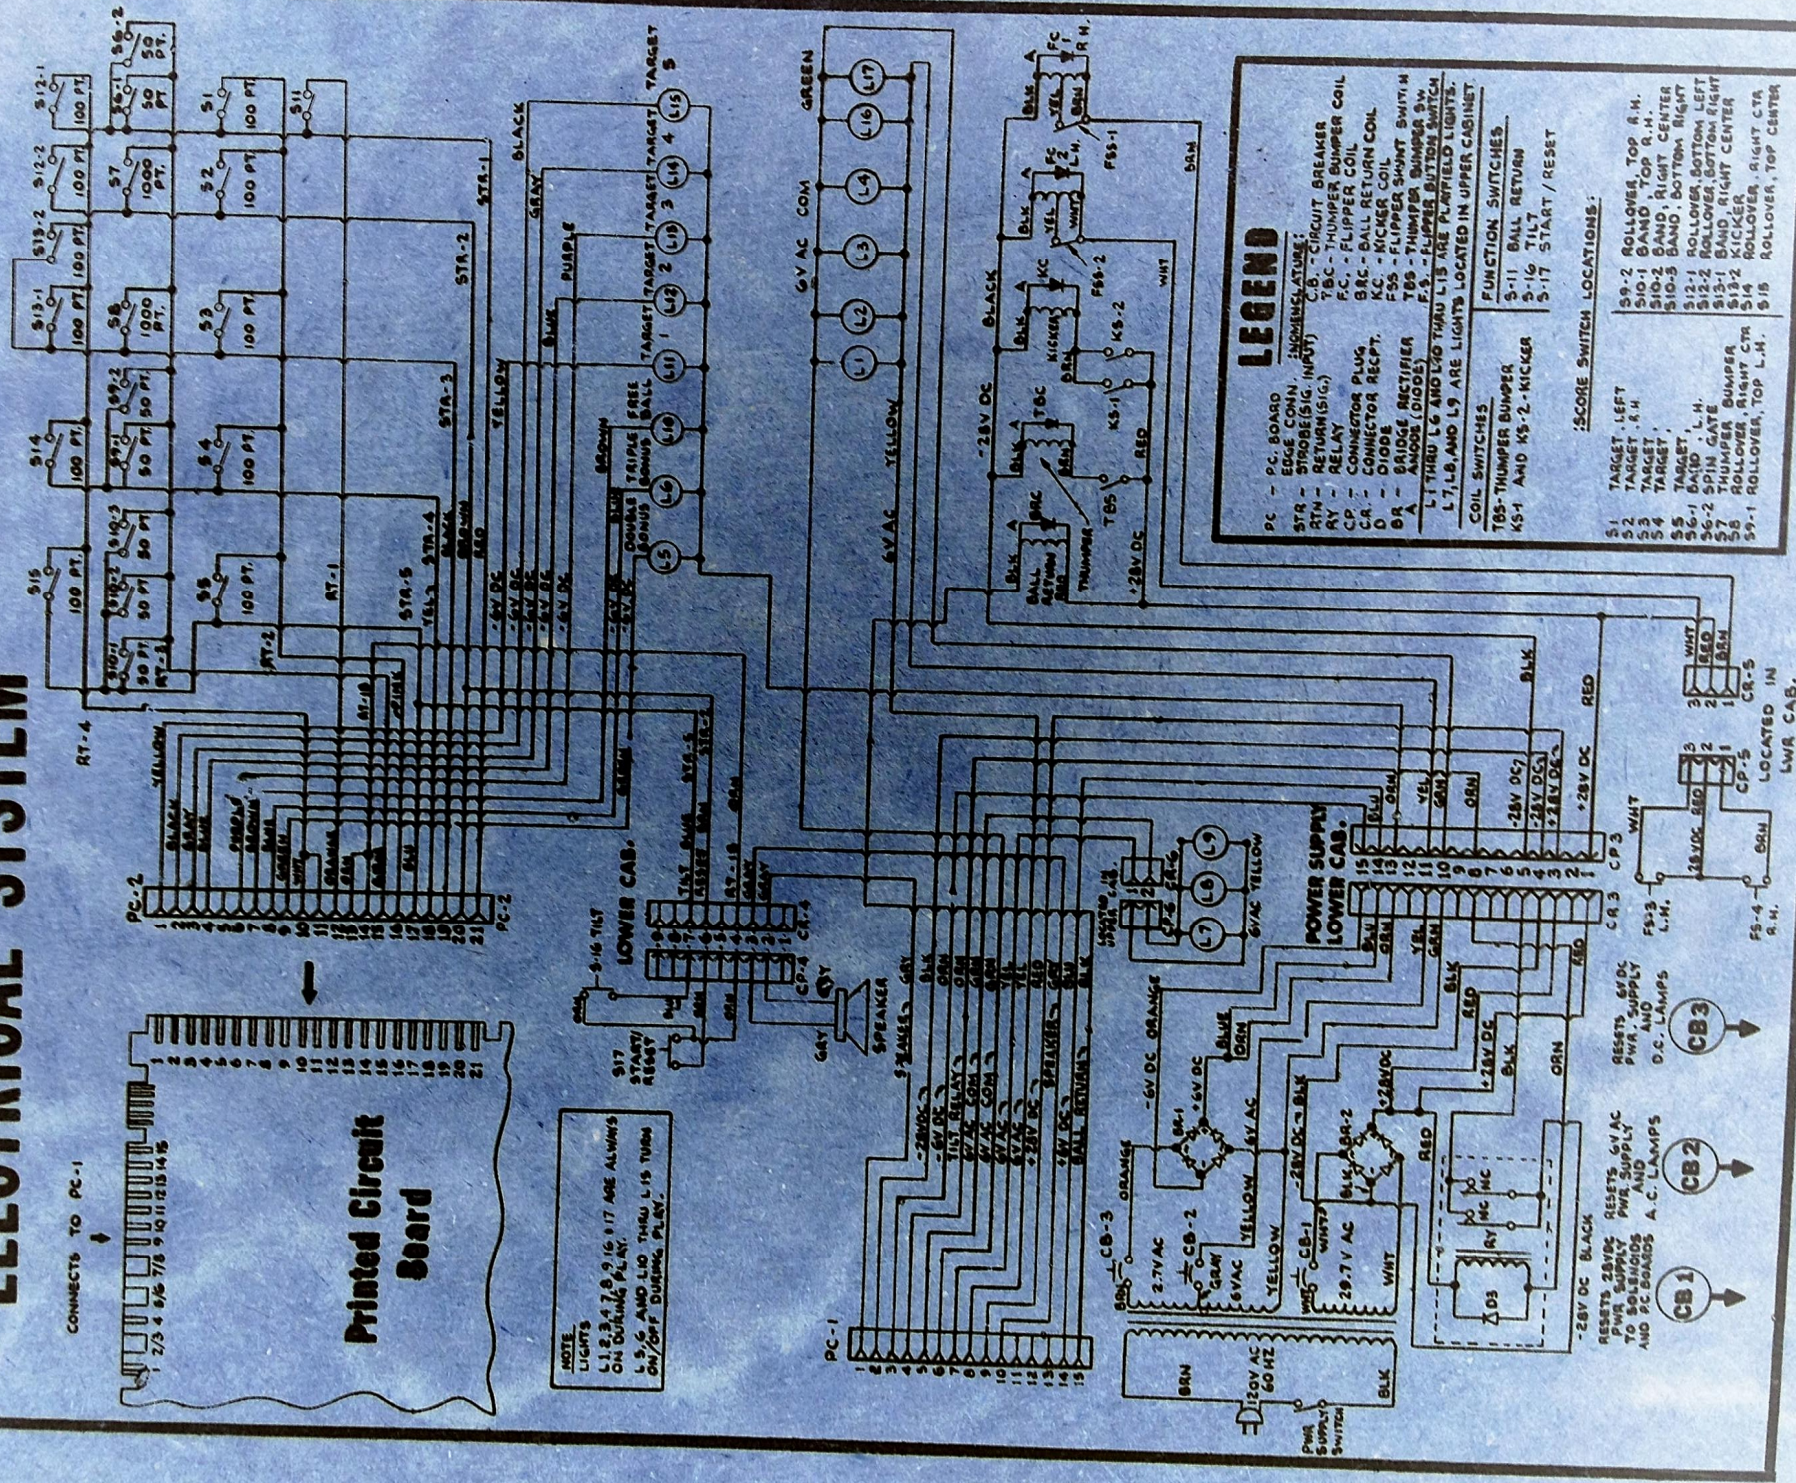

LEGEND

- | | | |
|-------|---|---------------------------|
| PC | - | PC BOARD |
| PC-1 | - | EDGE CONN. (NOMENCLATURE) |
| RT-1 | - | STROBE (SIG. INPUT) |
| RT-2 | - | RETURN (SIG.) |
| RT-3 | - | RELAY |
| RT-4 | - | RELAY |
| STR-1 | - | CIRCUIT BREAKER |
| STR-2 | - | THUMPER BUMPER COIL |
| STR-3 | - | FLIPPER COIL |
| STR-4 | - | BALL RETURN COIL |
| STR-5 | - | KICKER COIL |
| TEL-1 | - | DIODE |
| TEL-2 | - | BRIDGE RECTIFIER |
| TEL-3 | - | THUMPER BUMPER SW |
| TR-1 | - | THUMPER BUMPER SW |
| L1 | - | LAMP (DIODE) |
| L2 | - | LAMP (DIODE) |
| L3 | - | LAMP (DIODE) |
| L4 | - | LAMP (DIODE) |
| L5 | - | LAMP (DIODE) |
| L6 | - | LAMP (DIODE) |
| L7 | - | LAMP (DIODE) |
| L8 | - | LAMP (DIODE) |
| L9 | - | LAMP (DIODE) |
| L10 | - | LAMP (DIODE) |
| L11 | - | LAMP (DIODE) |
| L12 | - | LAMP (DIODE) |
| L13 | - | LAMP (DIODE) |
| L14 | - | LAMP (DIODE) |
| L15 | - | LAMP (DIODE) |
| S1 | - | FUNCTION SWITCHES |
| S2 | - | FUNCTION SWITCHES |
| S3 | - | FUNCTION SWITCHES |
| S4 | - | FUNCTION SWITCHES |
| S5 | - | FUNCTION SWITCHES |
| S6 | - | FUNCTION SWITCHES |
| S7 | - | FUNCTION SWITCHES |
| S8 | - | FUNCTION SWITCHES |
| S9 | - | FUNCTION SWITCHES |
| S10 | - | FUNCTION SWITCHES |
| S11 | - | FUNCTION SWITCHES |
| S12 | - | FUNCTION SWITCHES |
| S13 | - | FUNCTION SWITCHES |
| S14 | - | FUNCTION SWITCHES |
| S15 | - | FUNCTION SWITCHES |
| S16 | - | FUNCTION SWITCHES |
| S17 | - | FUNCTION SWITCHES |

SCORE SWITCH LOCATIONS:

- | | |
|-------|------------------------|
| S1 | TARGET LEFT |
| S2 | TARGET 4 H |
| S3 | TARGET |
| S4 | TARGET |
| S5 | TARGET |
| S6-1 | BAND, BOTTOM LEFT |
| S6-2 | BAND, BOTTOM RIGHT |
| S7 | THUMPER BUMPER |
| S8 | KICKER |
| S9-1 | ROLLOVER, RIGHT CTR |
| S9-2 | ROLLOVER, TOP CENTER |
| S10-1 | BAND, TOP R.H. |
| S10-2 | BAND, RIGHT CENTER |
| S10-3 | BAND, BOTTOM RIGHT |
| S11 | TARGET |
| S12-1 | ROLLOVER, BOTTOM LEFT |
| S12-2 | ROLLOVER, BOTTOM RIGHT |
| S13-1 | BAND, RIGHT CENTER |
| S14 | ROLLOVER, RIGHT CTR |
| S15 | ROLLOVER, TOP CENTER |

