


8/89

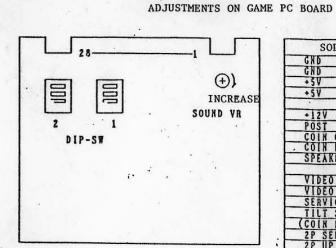

↑ THE CONTROL THIS GAME USES ONE 8-WAY JOYSTICK AND 2 BUTTONS.

SOLDER SIDE		COMPONENTS SIDE					
GND	A	II GND					
GND	B	1 2	GND				
+57	C	3	+5V				
+5V	D	4	+5 V				
	E	5					
+12V	F	6	+127				
POST	H	7	POST				
COIN COUNTER (B)	J	8	COIN COUNTER (1)				
COIN LOCKOUT (B)	K	9	COIN LOCKOUT (I)				
SPEAKER (-)	L	10	SPEAKER (+)				
	N	TII					
VIDEO G	N	12	VIDEO R				
VIDEO SYNC	P	13	VIDEO B				
SERVICE SW	R	14	VIDEO GND				
TILT SW	S	15	(TEST SW)				
(COIN B)	Ī	16	COLN A				
2P SELECT	U	17	IP SELECT				
2P UP	V	18	IP UP				
2P DOWN	9	19	IP DOWN				
2P LEFT	X	20	IP LEFT				
2P RIGHT	Y	21	IP RIGHT				
2P SHOT -	7	22	1P SHOT				
2P BOMB	a	23	IP BOMB				
	b	24					
	С	25					
and the state of t	d	26					
GKD	e	27	GND				
CND	1 1	1 28	CND				

)

(TRUXTON

NOTE) BEFORE CHANGING THE SETTINGS OF THE DIP SWITCH. TURN THE POWER SWITCH OFF.

0	D	I	P	_	S	W	

(+) . FACTORY SETTINGS

SETTING	POSITION		N 1	2	3	4	5	6	1 7	8
GAME TITLE TABLE		OFF								
•	UPRIGHT		ON							
SCREEN INVERSION * NORMAL			OFF					1		
	INVERSI	ON		ON						
TEST MODE . * NORMAL GAME			7	OFF		-	-		-1195	
	TEST MO	DE		12 M	ON				1 0	
ATTRACT SOUND	* RODUCED					OFF	1			
	NO RODU	CED	1	•			1			
PLAY PRICING	* 1 COIN	1 PLA	Y		1	di d	OFF	T	1	
* 16	1 "	2 ''					ON	OFF		
COIN A	2 ".	1 "					OFF			
	2 "	3 "					ON	ON		
PLAY PRICING	* 1 COIN	1 PLA	Y	3/			79.40		OFF	1
	1 "	2 "							ON	OFF.
COINB	2 "	1 "							OFF	
	2 "	3 "					1		ON	ON

ODIP-SW 2

SETTING	POSITION	1	2	3	4	5	6	17	8
GAME DIFFICULTY EASY	* RANK B	OFF	OFF OFF						
	" A.	ON	ON OFF						
(A) → (D)	" . C	OFF	ON						1
DIFFICULT	D D	NO							
BONUS POINTS	* 70k / 2 0 0k			OFF	I				
(k = 1,000.PTS.)	50k / 1 5 0k			ON	OFF				
1ST / EVERY	1 00k only.			OFF					
	NO BONUS			ON	- NO				
NUMBER OF PLAYER	* 3				-	OFF		1	
	5					ON	OFF	1	1
	4					OFF			
	2					ON	ON	1	
DIP-SW TEST	* NORMAL GAME		1					OFF	
	TEST .							ON	1
CONTINUED PLAY	* WITH								OFF
	WITHOUT	1							0.11