

GORGAR

INSTRUCTION BOOKLET

This booklet provides game operation, bookkeeping, game adjustment, and diagnostic procedures for GORGAR. For installation and special maintenance information refer to the blue-covered game manual. For detailed information refer to Williams Solid State Flipper Maintenance Manual.

SPECIAL CONSIDERATIONS WHEN REPLACING CIRCUIT BOARDS

CPU Board

1. For memory protection feature, revision level 6 CPU Boards (batteries located on lower right corner of board) must be used. Revision level 4 CPU Boards equipped with IC14 and IC16 sockets may be used but the memory protection feature is lost.
2. Must be equipped with green-labeled GORGAR PROMs or game ROM and green-labeled flipper ROMs.
3. When Game ROM is used, jumper J3 must be connected and J4 removed.

Sound Board

1. Model D 8224 required for speech.
2. Must be jumpered for white-labeled sound ROM operation and be equipped with Sound ROM 2. (Jumpers W2, W5, W7, W9, W10, and W15 connected; W3, W4, W6, W8, W11, W12, and W13 removed)

Power Supply Board

1. Fuse F4 (15A SB) for flipper solenoids and magnet must be installed.

Optional Speech Module

1. Requires 5T4961 (IC7), 5T4962 (IC5), and 5T4963 (IC6) speech ROMs.

GAME OPERATION

*Indicates adjustable features

Game Over Mode - Turn game ON; player scores show zero, high score to date* alternates with player 1 score, player 1 up lamp flashes, game over lamp lights, all playfield lamps except for credit lamp cycle in attract mode.

Credit Posting - Insert coin; knocker sounds, number of credits displayed. If maximum credits* exceeded by coin or high score to date*, credits are posted correctly, coin lockout de-energized until remaining credits are below maximum. No credits may be won and coins are rejected while lockout is energized.

Game Start - Push credit button; start-up tune played, ball served, credit display reduced by one, player 1 up lamp flashes until first scoring switch is made, ball in play shows 1. Pushing credit button before ball 2 displayed allows additional players.

Bonus Advance - "A-E" rollovers (3 advances for "B"), "1-4" targets, and eject hole. 10,000 bonus lights spinner, 20,000 bonus turns spinner off. Bonus multiplier advanced by spotting "A-B-C".

"1-4" Lamps - lights magnet for 50,000, advances lighting of stars 1 and 2 and "1-4" Target Special arrows. Spotting "D" and "E" spots one of "1-4" lamps.

"G-O-R" Drop Targets - spots "GOR", advances magnet lamps.

"G-A-R" Drop Targets - spots "GAR", advances lighting of jet bumpers, "GAR" 5,000 lamp, and bottom outside alternate Special lamps.

Extra Ball (maximum of one per ball) - made in eject hole when lit; eject hole lamps advanced by spotting "GOR" and "GAR". Lamps reset when Extra Ball collected from eject hole and reset for subsequent ball when Same Player Shoots is lit. Eject hole scores 5,000 or highest flashing value.

Magnet - making magnet switch energizes magnet, scores 1,000 or highest flashing value, flashes magnet lights; value reset to 1,000 when made for 20,000 or more.

Tilts - Ball in play tilted on first closure of Playfield and Ball Roll tilts and third* closure of Plumb Bob. Slam Tilt returns game to game over.

Memory - Magnet lamps, *eject hole lamps, partial spotting of "A-B-C", "D-E", or 1-4", and *features lit from "1-4" targets until target Special is made.

End of Game - Match Digits* appears in ball in play display, *credit awarded for match. Exceeding high score to date awards *three credits. Match, High Score to Date, and Game Over sounds made as appropriate.

With optional Speech Module, the following phrases are produced during game play:

ACHIEVEMENT

Game start
Making "1 - 4" targets
Making magnet switch for 50,000
Making magnet switch for other values
Spotting "GOR" and "GAR"
Winning Extra Ball
Making special or match
High Score to Date
Game over

PHRASE

GORGAR speaks.
Me hurt.
Me hurt.
Me got you.
GORGAR.
You hurt GORGAR.
You beat me.
You beat GORGAR.
Me GORGAR, beat me.

BOOKKEEPING AND EVALUATION TOTALS

(Functions 01-12)

1. In game over mode, set toggle switch to AUTO-UP and depress ADVANCE pushbutton. Test 04 is indicated in number of credits display, Function 00 in ball in play display, and game identification in Player 1 display.
2. Operate the ADVANCE pushbutton to display each function on the ball in play display (see Table 1) and record each total from Player 1 display. (To review a total that has been advanced past, set toggle switch to MANUAL-DOWN and operate the ADVANCE pushbutton.)
3. Calculate the following if desired:
 $\% \text{ Paid Credits} = \text{Function 04} \div \text{Function 08}$
4. Turn the game OFF and back ON to return to game over mode.
5. To change current High Score to Date to value of Function 13, momentarily depress HIGH SCORE RESET pushbutton.
6. To zero Functions 01-11, see page 7

GAME ADJUSTMENT PROCEDURE

(Functions 13-35)

Coin door must be open to change settings.

1. In game over mode, set toggle switch to AUTO-UP and depress ADVANCE pushbutton. Test 04 is indicated in number of credits display, Function 00 in ball in play display, and game identification in Player 1 display.
2. To **raise** Function number in ball in play display, operate ADVANCE pushbutton with switch set to AUTO-UP. To **lower** Function number operate ADVANCE with it set to MANUAL-DOWN.
3. With desired Function indicated in ball in play display, **raise** value in player 1 display by operating credit button with switch set to AUTO-UP; **lower** value by operating credit button with it set to MANUAL-DOWN. Value left of Player 1 display is new setting. For values see Table 1 and (for pricing) Table 2.
4. Repeat steps 2 and 3 until all required adjustments have been made.
5. Turn game OFF and back ON to return to game over mode.
6. To restore factory settings **and** zero audit totals, see page 7.

DIAGNOSTIC PROCEDURES

(Display Digits, Lamp, Solenoid, and Switch Tests)

1. In game over mode, set toggle switch to MANUAL-DOWN and depress ADVANCE. All displays should go blank.
2. Momentarily depress ADVANCE and set toggle switch to AUTO-UP. Display Digits test is performed.
3. Momentarily depress ADVANCE. Test 01 is indicated on number of credits display and Lamp Test is performed.
4. Set toggle switch to MANUAL-DOWN and momentarily depress ADVANCE. Test 02 is indicated on number of credits display and solenoid 01 on the ball in play display; solenoid 01 is pulsed by driver board.
5. Operate ADVANCE to pulse each solenoid (see Figure 3).
6. Set toggle switch to AUTO-UP and momentarily depress ADVANCE. Test 03 is indicated on number of credits display and stuck switches on ball in play display.
7. See Figure 4 . Operate switches; switch number is indicated on ball in play display.
8. Turn game OFF and back ON to return to game over mode.
9. To set up Auto-Cycle Mode (Display Digits, Lamp, and Solenoid Tests) see page 7.

Table 1. Game Adjustments

| FUNCTION | DESCRIPTION | NOTES | FACTORY SETTING |
|----------|---|-------|-----------------|
| 00 | Game Identification | 1 | 1496 1 |
| 01 | Coins, Left Chute (Closest to coin door hinge) | 1 | — |
| 02 | Coins, Center Chute | 1 | — |
| 03 | Coins, Right Chute | 1 | — |
| 04 | Total Paid Credits | 1 | — |
| 05 | Total Specials | 1 | — |
| 06 | Total Replay (Extra Ball) Scores | 1 | — |
| 07 | Match and High Score to Date Credits | 1 | — |
| 08 | Total Credits | 1,2 | — |
| 09 | Total Extra Balls | 1,3 | — |
| 10 | Total Ball Time in Minutes | 1 | — |
| 11 | Total Number of Balls Played | 1 | — |
| 12 | Current High Score to Date | 4 | 500,000 |
| 13 | Backup High Score to Date | 5 | 500,000 |
| 14 | Replay 1 Score | 6 | 300,000 |
| 15 | Replay 2 Score | 6 | 430,000 |
| 16 | Replay 3 Score | 6 | 550,000 |
| 17 | Replay 4 Score | 6 | 0 |
| 18 | Maximum Credits | 7 | 20 |
| 19 | Standard and Custom Pricing Control (00-07) | 8 | 05 |
| 20 | Left Coin Slot Multiplier | 8 | 01 |
| 21 | Center Coin Slot Multiplier | 8 | 04 |
| 22 | Right Coin Slot Multiplier | 8 | 01 |
| 23 | Coin Units Required for Credit | 8 | 01 |
| 24 | Coin Units Bonus Point | 8 | 04 |
| 25 | High Score Credits | 5 | 03 |
| 26 | Match (00=ON, 01=OFF) | — | 00 |
| 27 | Special | — | 00 |
| | 00 = Awards Credit | | |
| | 01 = Awards Extra Ball | | |
| | 02 = Awards Points | | |
| 28 | Scoring Awards | — | 00 |
| | 00 = Credits at Replay Score | | |
| | 01 = Extra Ball at Replay Score | | |
| 29 | Maximum Plumb Bob Tilts (1-9) | — | 03 |
| 30 | Number of Balls (03 or 05) | 9 | 03 |
| 31 | Outlane Special Control | — | 01 |
| | 00 = Top and Bottom Jet Bumpers and "G-A-R" 5000 Lit Together | | |
| | 01 = Top and Bottom Jet Bumpers Lit Together | | |
| | 02 = All Features Lit Separately | | |
| 32 | Eject Hole Control | — | 00 |
| | 00 = Lamps Restore, 10,000 Not Lit Initially | | |
| | 01 = Lamps Restore, 10,000 Lit Initially | | |
| | 02 = Lamps do not Restore, 10,000 Not Lit Initially | | |
| | 03 = Lamps do not Restore, 10,000 Lit Initially | | |
| 33 | Extra Ball and "1-4" Lamps | 9 | 00 |
| | 00 = Extra Ball Allowed, Lamps Spotted Randomly | | |
| | 01 = No Extra Ball, Lamps Spotted Randomly | | |
| | 02 = Extra Ball Allowed, Lamps Spotted in Sequence | | |
| | 03 = No Extra Ball, Lamps Spotted in Sequence | | |
| 34 | "1-4" Target Special Control | 9 | 00 |
| | 00 = Star Lamps Restore, Star 1 Not Lit Initially | | |
| | 01 = Star Lamps Restore, Star 1 Lit Initially | | |
| | 02 = Star Lamps do not Restore, Star 1 Not Lit Initially | | |
| | 03 = Star Lamps do not Restore, Star 1 Lit Initially | | |
| 35 | Heartbeat Background Sound | — | 01 |
| | 00 = Sound OFF | | |
| | 01 = Sound ON | | |

Notes:

1. Functions 00-11 cannot be changed from the coin door; however, Functions 01-11 can be set to zero as described on page 7.
2. Total Credits (Function 08) is the sum of Function 04 and as applicable, Functions 05, 06, and 07.
3. Total Extra Balls (Function 09) is the sum of the game extra ball feature and Functions 15 and 06, as applicable.
4. Current High Score to Date (Function 12) can be changed to the value of the Backup High Score to Date (Function 13) by operating the HIGH SCORE RESET switch while in the game over mode.
5. Function 13 may be set to any multiple of 10,000 points. Setting Function 25 to zero with Function 13 set to any score but zero permits the High Score to Date feature to operate but no credits are awarded.
6. Functions 14-17 (Replay Scores) may be set to any multiple of 10,000 points. Setting a function to zero disables the replay score point. **Always disable the Replay 4 level first, the Replay 3 level second, etc. The replay levels must be set with ascending values.**
7. Setting Maximum Credits (Function 18) to zero places the game in a **free play mode**.
8. With Function 19 set to 00, Functions 20-24 must be set manually. Refer to Table 2 for seven standard pricing schemes (selected by values of 01-07 for Function 19) and custom pricing values.
9. For 5-Ball play, it is recommended that Function 33 be set to 02 and Function 34 be set to 01.

RECOMMENDED SCORE LEVELS

| Levels | Score Card |
|----------------------------|------------|
| CREDIT GAMES | |
| 3-Ball: | |
| *300,000; 430,000; 550,000 | 496-14 |
| or 290,000; 410,000 | 496-33 |
| 5-Ball: | |
| (See Note 9) | |
| 480,000; 630,000 | 496-50 |
| EXTRA BALL | |
| 3-Ball: | |
| 160,000; 290,000 | 496-66 |
| 5-Ball: | |
| 200,000; 330,000 | 496-68 |
| *Factory setting | |

Table 2. Standard and Custom Price Settings

| COIN DOOR MECHANISM | CREDITS | FUNCTION | | | | | | |
|--|---|----------|----------|----------|----------|----------|----------|--|
| | | 19 | 20 | 21 | 22 | 23 | 24 | |
| Twin-Quarter Quarter, Dollar, Quarter | 1/25c, 3/50c, 7/1\$1 | 00 | 03 | 12 | 03 | 02 | 12 | |
| | 1/25c, 3/50c, 7/1\$1 coin only | 00 | 03 | 14 | 03 | 02 | 00 | |
| | 1/25c, 7/1\$1 coin only | 00 | 01 | 07 | 01 | 01 | 00 | |
| | •1/25c, 3/50c, 6/1\$1 | 01 | 01 | 04 | 01 | 01 | 02 | |
| | 1/25c, 6/1\$1 coin only | 00 | 01 | 06 | 01 | 01 | 00 | |
| | •1/25c, 5/1\$1 | 05 | 01 | 04 | 01 | 01 | 04 | |
| | 1/25c, 5/1\$1 coin only | 00 | 01 | 05 | 01 | 01 | 00 | |
| | •1/25c, 4/1\$1 | 02 | 01 | 04 | 01 | 01 | 00 | |
| | 1/50c, 3/1\$1 | 00 | 01 | 04 | 01 | 02 | 04 | |
| | 1/50c | 00 | 01 | 04 | 01 | 02 | 00 | |
| 1DM, 5DM, 2DM | •2/1DM, 5/2DM, 14/5DM 1/1DM, 3/2DM, 10/5DM | 03 00 | 13 09 | 65 45 | 26 18 | 05 05 | 65 45 | |
| 20-Cent, 50-Cent | 1/20c, 3/50c | 00 | 06 | 00 | 15 | 05 | 00 | |
| 1 Franc, 5 Franc | •1/1F, 6/5F | 04 | 01 | 00 | 05 | 01 | 05 | |
| | 1/1F, 7/5F | 00 | 06 | 00 | 30 | 05 | 30 | |
| 25 Cent, 1 Guilder, | •1/25c, 4/1G | 06 | 01 | 00 | 04 | 01 | 00 | |
| | 1/25c, 5/1G | 00 | 01 | 00 | 04 | 01 | 04 | |
| 50 Yen, 100 Yen | •1/50Y, 2/100Y | 07 | 01 | 00 | 02 | 01 | 00 | |
| 1 Franc or Twin-1 Franc | 1/1F, 3/2F | 00 | 01 | 01 | 01 | 01 | 02 | |
| | 1/1F | 00 | 01 | 01 | 01 | 01 | 00 | |
| 5 Franc, 10 Franc | •1/5F, 2/10F | 07 | 01 | 00 | 02 | 01 | 00 | |
| | 1/10F | 00 | 01 | 00 | 02 | 02 | 00 | |
| Twin-2 Franc | •1/2F | 02 | 01 | 04 | 01 | 01 | 00 | |
| 10, 20 Franc | •1/10F, 2/20F | 07 | 01 | 00 | 02 | 01 | 00 | |
| Twin-1 Sucre | 1/3S, 2/5S | 00 | 02 | 00 | 02 | 05 | 00 | |

•Indicates standard price settings by adjusting only Function 19. For other price settings, set Function 19 to 00 and set Functions 20 through 24 to the values indicated in the chart.

RESETTING AUDIT TOTALS AND ADJUSTMENTS; INITIATING AUTO-CYCLE MODE

1. In game over mode, set the AUTO-UP/MANUAL-DOWN switch to MANUAL-DOWN and momentarily depress the ADVANCE pushbutton. All displays should go blank.
2. Remove the backglass and unlatch and open the insert door.
3. Set all switches on the MASTER COMMAND slide switch to OFF (move to the right).
4. Set switch on MASTER COMMAND switch to ON (move to left):
 - a. To zero audit totals (Functions 01-11) set switch 8 to ON.
 - b. To restore factory settings **and** zero audit totals, set switch 7 to ON. *Coin Door must remain open to restore factory settings.*
 - c. For Auto-Cycle Mode set switch 6 to ON.
5. Momentarily depress MASTER COMMAND ENTER pushbutton. The LEDs should blink once.
6.
 - a. After zeroing audit totals turn game OFF and ON to return to game over mode.
 - b. After restoring factory settings, turn game OFF and on **twice** to return to game over mode.
 - c. To initiate Auto-Cycle Mode, set toggle switch to AUTO-UP and momentarily depress the ADVANCE pushbutton. Each cycle of this mode sequences through display digits test, flashes all multiplexed lamps 64 times and pulses each solenoid. To terminate the Auto-Cycle mode and go to game over, turn the game OFF and ON.

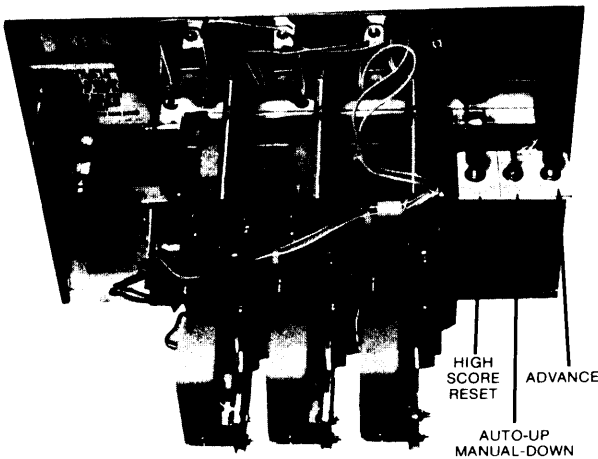


Figure 1. Coin Door Diagnostic Switches


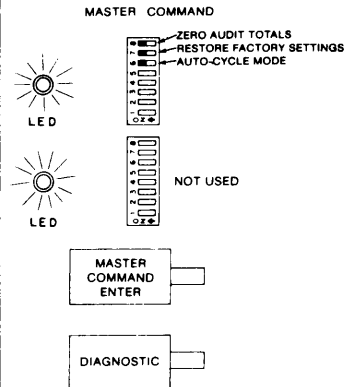


Figure 2.
Master Command
Settings Switch

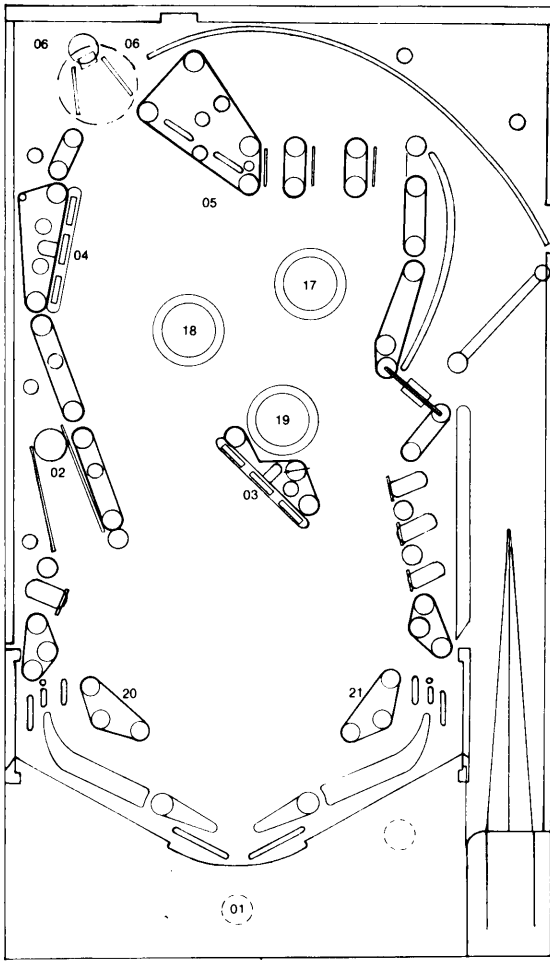

Sol. No. Description

- 01 Ball Release
- 02 Eject Hole
- 03 "G-A-R" Drop Targets Reset
- 04 "G-O-R" Drop Targets Reset
- 05 Magnet Relay
- 06 Magnet Lamps
- 07 Not Used
- 08 Not Used
- 09 Sound
- 10 Sound
- 11 Sound
- 12 Sound
- 13 Sound
- 14 Credit Knocker
- 15 Not Used
- 16 Coin Lockout
- 17 Top Jet Bumper
- 18 Left Jet Bumper
- 19 Bottom Jet Bumper
- 20 Left Kicker
- 21 Right Kicker
- 22 Not Used

Figure 3. Playfield Solenoid Locations and Solenoid Chart


Table 3. Solenoid Connections


| SOL. NO. | FUNCTION | WIRE COLOR | CONNECTIONS | DRIVER TRANS. | SOLENOID PART NO. |
|----------|----------------------------|------------|----------------------|---------------|-------------------------|
| 01 | Ball Release | GRY-BRN | 2P11-4, 8P3-17 | Q15 | SA-23-850-DC |
| 02 | Eject Hole | GRY-RED | 2P11-5, 8P3-18 | Q17 | SG-23-850-DC |
| 03 | "G-A-R" Drop Targets Reset | GRY-ORN | 2P11-7, 8P3-19 | Q19 | SA3-23-850-DC |
| 04 | "G-O-R" Drop Targets Reset | GRY-YEL | 2P11-8, 8P3-20 | Q21 | SA3-23-850-DC |
| *05 | Magnet Relay | GRY-GRN | 2P11-9, 8P3-21 | Q23 | SM-35-4000-DC |
| 06 | Magnet Lamps | GRY-BLU | 2P11-3, 8P3-22 | Q25 | Type 89 Bulbs |
| 07 | Not Used | GRY-VIO | 2P11-2, 8P3-23 | Q27 | -- |
| 08 | Not Used | GRY-BLK | 2P11-1, 8P3-24 | Q29 | -- |
| 09 | Sound | BRN-BLK | 2P9-9, 10P3-3 | Q31 | -- |
| 10 | Sound | BRN-RED | 2P9-7, 10P3-2 | Q33 | -- |
| 11 | Sound | BRN-ORN | 2P9-1, 10P3-5 | Q35 | -- |
| 12 | Sound | BRN-YEL | 2P9-2, 10P3-4 | Q37 | -- |
| 13 | Sound | BRN-GRN | 2P9-3, 10P3-7 | Q39 | -- |
| 14 | Credit Knocker | BRN-BLU | 2P9-4, 7P1-16 | Q41 | SA2-23-850-DC |
| 15 | Not Used | BRN-VIO | 2P9-5, 7P1-17 | Q43 | -- |
| 16 | Coin Lockout | BRN-GRY | 2P9-6, 7P1-18, 7P2-4 | Q45 | SM-35-4000-DC |
| *17 | Top Jet Bumper | BLU-BRN | 2P12-7, 8P3-11 | Q2 | SG-23-850-DC |
| *18 | Left Jet Bumper | BLU-RED | 2P12-4, 8P3-12 | Q4 | SG-23-850-DC |
| *19 | Bottom Jet Bumper | BLU-ORN | 2P12-3, 8P3-13 | Q6 | SG-23-850-DC |
| *20 | Left Kicker | BLU-YEL | 2P12-6, 8P3-14 | Q8 | SG-23-850-DC |
| *21 | Right Kicker | BLU-GRN | 2P12-8, 8P3-15 | Q10 | SG-23-850-DC |
| *22 | Not Used | BLU-BLK | 2P12-9, 8P3-16 | Q12 | -- |
| * | Right Flipper | BLU-VIO | 7P1-8, 8P3-3 | -- | SF1-20-300 30-800-DC |
| * | Left Flipper | BLU-GRY | 7P1-10, 8P3-4 | -- | SF1-20-300 30-800-DC |

***NOTES:**

- Contacts of solenoid 05 switch ground to magnet (Part No. 20-8991).
- Special switch connections for solenoids 17 through 22 are as follows:
 17 -- ORN-BRN -- 2P13-5, 8P3-5
 18 -- ORN-RED -- 2P13-3, 8P3-6
 19 -- ORN-BLK -- 2P13-2, 8P3-7
 20 -- ORN-YEL -- 2P13-4, 8P3-8
 21 -- ORN-GRN -- 2P13-8, 8P3-9
 22 -- ORN-BLU -- 2P13-9, 8P3-10
- Flipper button connections are as follows:
 Right -- ORN-VIO -- 2P12-1, 7P1-7
 Left -- ORN-GRY -- 2P12-2, 7P1-9

4. Typical wiring for solenoids and special switches:

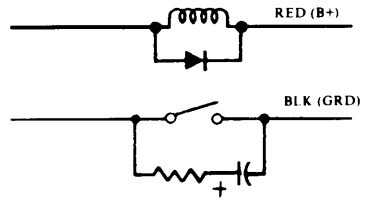

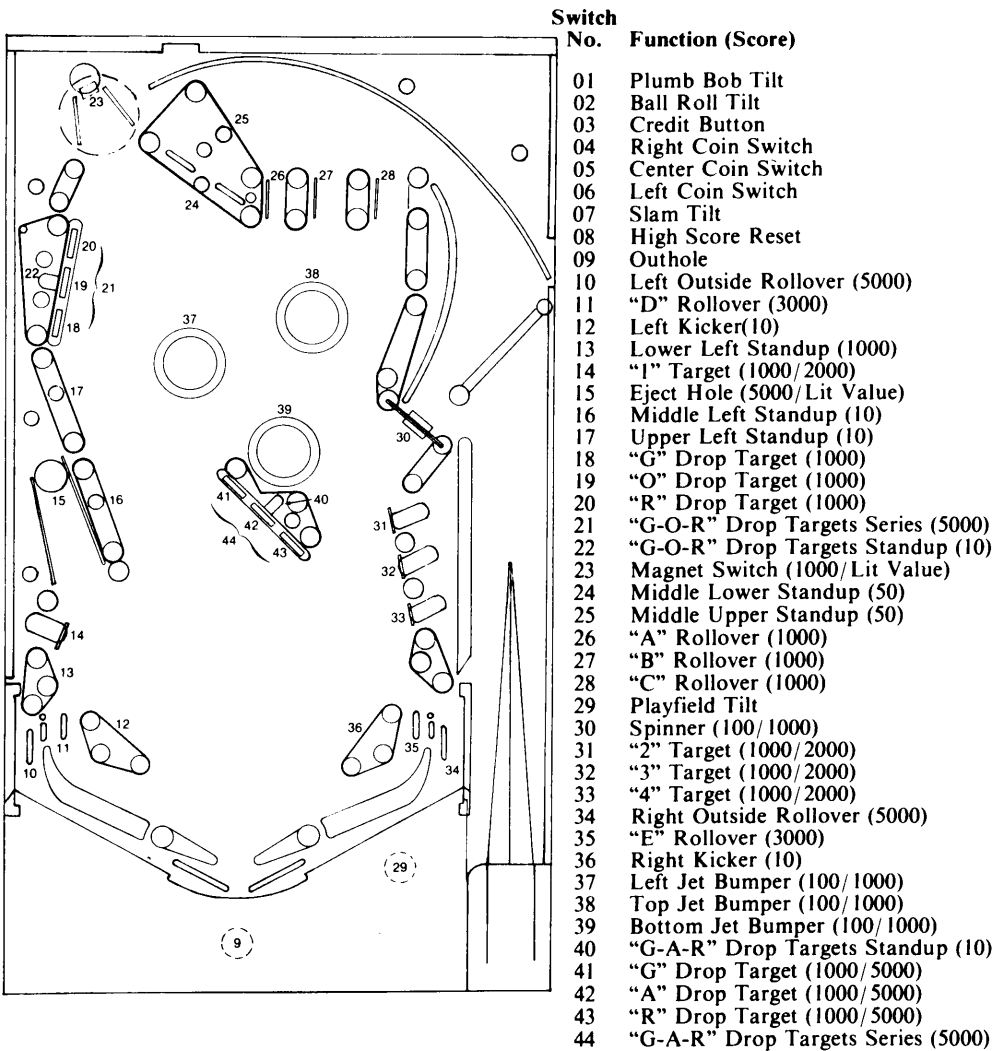

Note: Second score value is lit or flashing value.

Figure 4. Playfield Switch Locations and Switch Chart

| ROW | COLUMN | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|-----|---------|-------------------------|-----------------------------|-----------------------------------|----------------------------|------------------------------------|-----------------------------------|----------------|----------------|
| | | GRN-BRN | GRN-RED | GRN-ORN | GRN-YEL | GRN-BLK | GRN-BLU | GRN-VIO | GRN-GRY |
| 1 | WHT-BRN | PLUMB BOB TILT 1 | OUTHOLE 9 | UPPER LEFT STANDUP 17 | MIDDLE UPPER STANDUP 25 | "4" TARGET 33 | "G" DROP TARGET 41 | NOT USED 49 | NOT USED 57 |
| 2 | WHT-RED | BALL ROLL TILT 2 | LEFT OUTSIDE ROLLOVER 10 | "G" DROP TARGET 18 | "A" ROLLOVER 26 | RIGHT OUTSIDE ROLLOVER 34 | "A" DROP TARGET 42 | NOT USED 50 | NOT USED 58 |
| 3 | WHT-ORN | CREDIT BUTTON 3 | "D" ROLLOVER 11 | "O" DROP TARGET 19 | "B" ROLLOVER 27 | "E" ROLLOVER 35 | "R" DROP TARGET 43 | NOT USED 51 | NOT USED 59 |
| 4 | WHT-YEL | RIGHT COIN SWITCH 4 | LEFT KICKER 12 | "R" DROP TARGET 20 | "C" ROLLOVER 28 | RIGHT KICKER 36 | "G-A-R" DROP TARGETS SERIES 44 | NOT USED 52 | NOT USED 60 |
| 5 | WHT-GRN | CENTER COIN SWITCH 5 | LOWER LEFT STANDUP 13 | "G-O-R" DROP TARGETS SERIES 21 | PLAYFIELD TILT 29 | LEFT JET BUMPER 37 | NOT USED 45 | NOT USED 53 | NOT USED 61 |
| 6 | WHT-BLU | LEFT COIN SWITCH 6 | "1" TARGET 14 | "G-O-R" DROP TARGETS 22 | SPINNER 30 | TOP JET BUMPER 38 | NOT USED 46 | NOT USED 54 | NOT USED 62 |
| 7 | WHT-VIO | SLAM TILT 7 | EJECT HOLE 15 | MAGNET SWITCH 23 | "2" TARGET 31 | BOTTOM JET BUMPER 39 | NOT USED 47 | NOT USED 55 | NOT USED 63 |
| 8 | WHT-GRY | HIGH SCORE RESET 8 | MIDDLE LEFT STANDUP 16 | MIDDLE LOWER STANDUP 24 | "3" TARGET 32 | "G-A-R" DROP TARGETS STANDUP 40 | NOT USED 48 | NOT USED 56 | NOT USED 64 |

Figure 5. Switch Matrix

| ROW | COLUMN | 1 YEL-BRN | 2 YEL-RED | 3 YEL-ORN | 4 YEL-BLK | 5 YEL-GRN | 6 YEL-BLU | 7 YEL-VIO | 8 YEL-GRY |
|-----|---------|-------------------------------------|--------------|--------------|----------------|-------------------|-----------------------|---------------------|-----------------------------------|
| 1 | RED-BRN | SAME PLAYER SHOOT AGAIN (PLAYFIELD) | 2,000 BONUS | NOT USED | 1 TARGET | MAGNET 5,000 | "GAR" 5,000 WHEN LIT | NOT USED | #1 PLAYER UP |
| 2 | RED-BLK | LEFT SPECIAL | 3,000 BONUS | 10,000 BONUS | 2 TARGET | MAGNET 10,000 | GOR | 1 CAN PLAY | #2 PLAYER UP |
| 3 | RED-ORN | RIGHT SPECIAL | 4,000 BONUS | 20,000 BONUS | 3 TARGET | MAGNET 20,000 | GAR | 2 CAN PLAY | #3 PLAYER UP |
| 4 | RED-YEL | 2X | 5,000 BONUS | "A" | 4 TARGET | MAGNET 30,000 | EJECT HOLE 10,000 | 3 CAN PLAY | #4 PLAYER UP |
| 5 | RED-GRN | 3X | 6,000 BONUS | "B" | 1 TARGET ARROW | MAGNET 50,000 | EJECT HOLE 15,000 | 4 CAN PLAY | TILT |
| 6 | RED-BLU | STAR 1 | 7,000 BONUS | "C" | 2 TARGET ARROW | TOP JET BUMPER | EJECT HOLE EXTRA BALL | MATCH | GAME OVER |
| 7 | RED-VIO | STAR 2 | 8,000 BONUS | "D" | 3 TARGET ARROW | LEFT JET BUMPER | NOT USED | BALL IN PLAY | SAME PLAYER SHOOT AGAIN (BACKBOX) |
| 8 | RED-GRY | 1,000 BONUS | 9,000 BONUS | "E" | 4 TARGET ARROW | BOTTOM JET BUMPER | SPINNER 1,000 | CREDITS (PLAYFIELD) | HIGH SCORE TO DATE |

Figure 6. Lamp Matrix