

GAME 1161-E
FO 633

Bally®



HARLEM
GLOBETROTTERS

Bally

MANUFACTURING CORPORATION

2640 Belmont Avenue · Chicago, Illinois, 60618, U.S.A.

TELEPHONE (312) 267-6060/TELEX NO 253076/CABLE ADDRESS: Balfan

© BALLY MFG. CORP. 1979
ALL RIGHTS RESERVED


GAME #1161-E HARLEM GLOBETROTTERS

Installation and General Game Operation Instructions

INDEX

	PAGE
I. INSTALLATION	1
II. GENERAL GAME OPERATION	2
III. BOOKKEEPING FUNCTIONS	3
IV. FEATURE OPERATION AND SCORING	4
V. GAME ADJUSTMENTS	5
A. PLAYFIELD ADJUSTMENTS	5
B. BACKBOX ADJUSTMENTS	5
CREDITS/COIN	5
MAXIMUM CREDITS	6
BALLS/GAME	6
MATCH FEATURE OPTION	6
CREDIT DISPLAY	6
HIGH SCORE FEATURE OPTION	6
HIGH SCORE TO DATE	6
GAME FEATURE OPTIONS	7
SOUND OPTION	7
C. FRONT DOOR GAME ADJUSTMENTS	
HIGH SCORE FEATURE	8
HIGH SCORE TO DATE FEATURE	8
VI. RECOMMENDED SCORE CARDS	11
VII. RECOMMENDED SETTINGS	12
VIII. ROUTINE MAINTENANCE ON LOCATION	13
IX. TROUBLE SHOOTING ON LOCATION	13
X. SERVICE/PARTS	19
XI. PARTS LIST	20-30

BLOCK DIAGRAM—ELECTRONIC PINBALL GAME

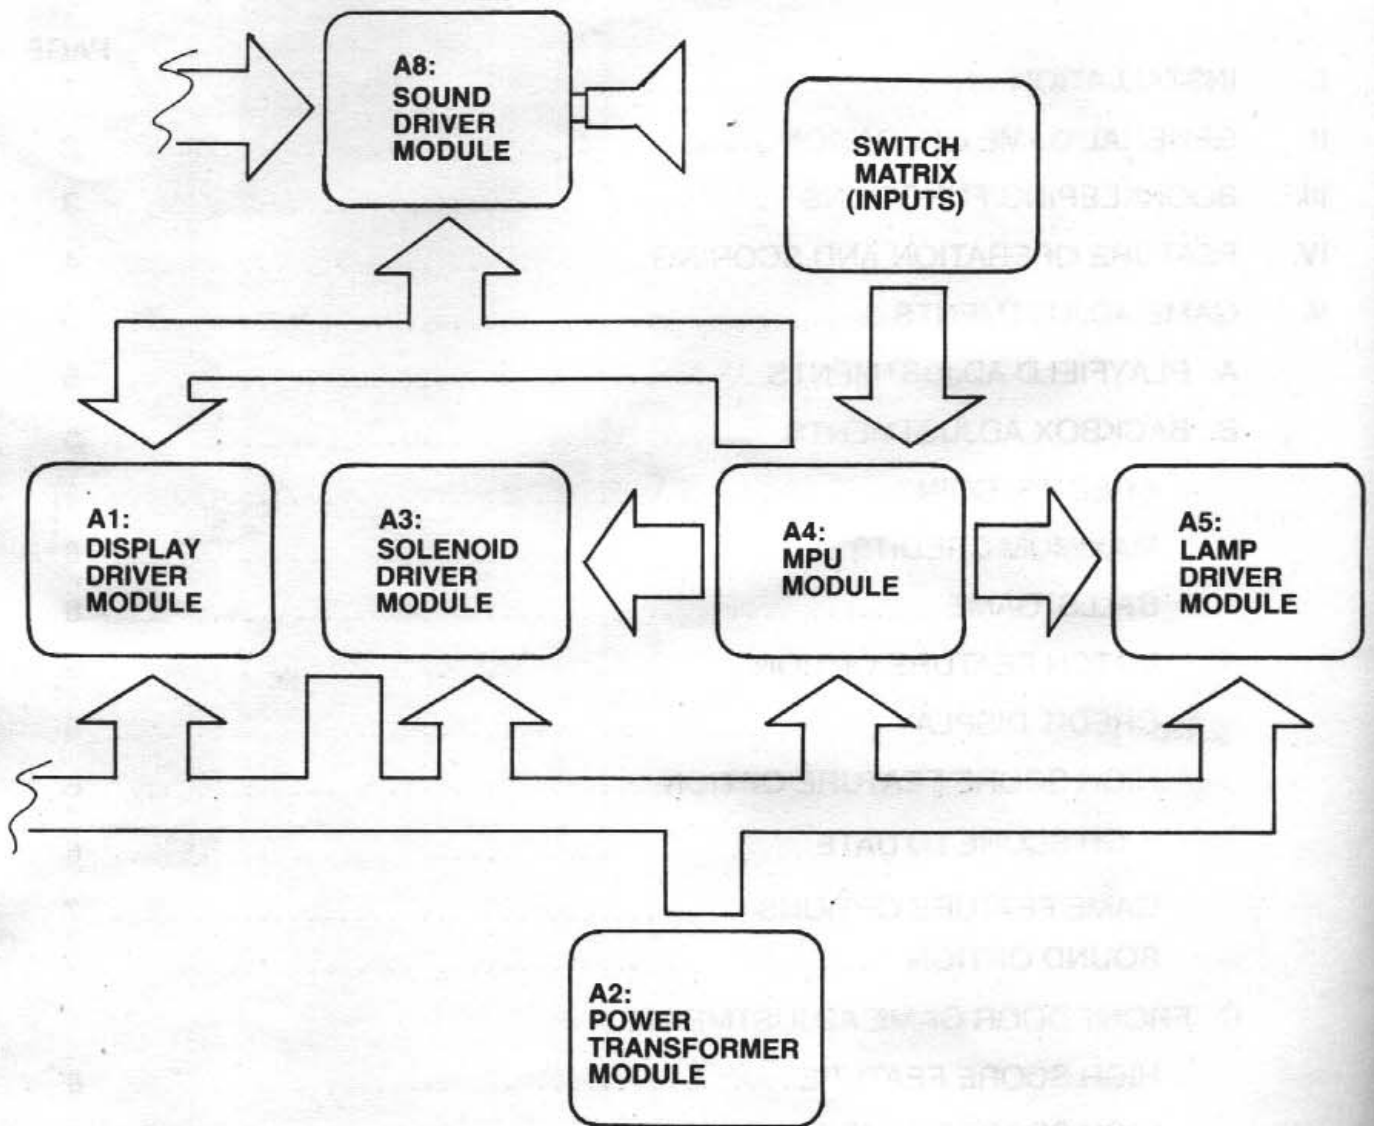

I. INSTALLATION

Assemble the game as follows:

Bolt legs to cabinet. Bolt back box to cabinet. Use flat washers under bolt heads. Gently feed cable connectors and ground braid through cable port in back box. Screw ground braid to braid in back box. Carefully and fully insert connectors on printed circuit assemblies.

On all games there are certain items that should be checked after shipment. These are visual inspections which may avoid time consuming service work later. Minor troubles caused by abusive handling in shipment are unavoidable. Cable connectors may be loosened, switches (especially tilt switches) may go out of adjustment. Plumb bob tilt switch should always be adjusted after game is set on location and leg levelers are adjusted.

Visual inspections before plugging in line cord:


1. Check that all cable connectors are completely seated on printed circuit assemblies.
2. Check that cables are clear of all moving parts.
3. Check for any wires that may have become disconnected.
4. Check switches for loose solder or other foreign material that may have come loose in shipment and could cause shorting of contacts.
5. Check wires on coils for proper soldering. Cold solder connections may not show up in factory inspection, but vibration in shipment may break contact.
6. Check that fuses are firmly seated and making good contact.
7. Check the transformer for any foreign material shorting across wiring lugs.
8. Check wiring of transformer to correspond to location voltage. See figure 1.

Check adjustment of the three (normally open) tilt switches:

1. Panel tilt on bottom of playfield panel.
2. Plumb bob tilt on left side of cabinet near front door.
3. Ball tilt above plumb bob tilt. Insert the smaller ball (15/16" dia.) into the ball tilt assembly, and adjust the bracket so the ball will roll free to contact the switch blade, if front of cabinet is raised.

TRANSFORMER CONNECTION INSTRUCTIONS

E-122-125 TRANSFORMER WIRING FOR 220/240 V.,
50/60 CYCLE INPUT.

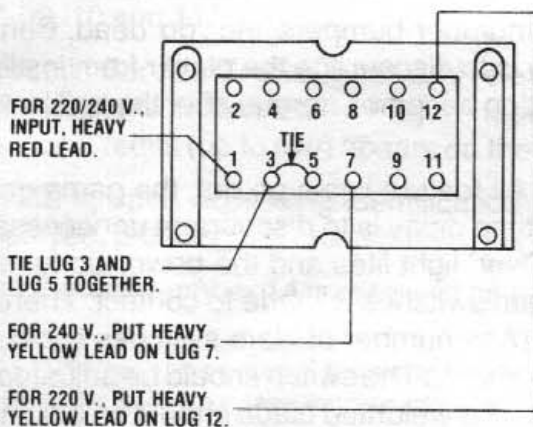

FOR 220/240 V.,
INPUT, HEAVY
RED LEAD.


TIE LUG 3 AND
LUG 5 TOGETHER.

FOR 240 V., PUT HEAVY
YELLOW LEAD ON LUG 7.

FOR 220 V., PUT HEAVY
YELLOW LEAD ON LUG 12.

VARISTOR, BALLY PART NO. E-713-1,
LOCATED IN CABINET, MUST BE USED
FOR OPERATION AT 220 V. OR 240 V.A.C.

E-122-125 TRANSFORMER WIRING FOR 115/120 V.,
50/60 CYCLE INPUT.

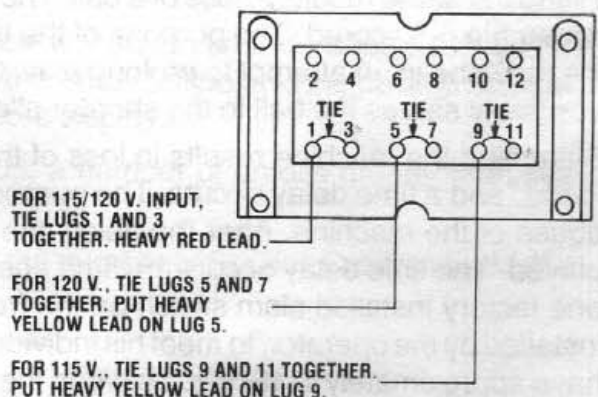

FOR 115/120 V. INPUT,
TIE LUGS 1 AND 3
TOGETHER. HEAVY RED LEAD.

FOR 120 V., TIE LUGS 5 AND 7
TOGETHER. PUT HEAVY
YELLOW LEAD ON LUG 5.

FOR 115 V., TIE LUGS 9 AND 11 TOGETHER.
PUT HEAVY YELLOW LEAD ON LUG 9.

VARISTOR, BALLY PART NO. E-713,
LOCATED IN CABINET, MUST BE USED
FOR OPERATION AT 115 OR 120 V.A.C.

FIGURE I. TRANSFORMER

(PART OF POWER—TRANSFORMER MODULE A2, LOCATED IN BACK BOX).

II. GENERAL GAME OPERATION

Place ball into playfield by outhole.

Coin game. Coin should be rejected. Plug in line cord. Move power ON-OFF master switch at bottom right front corner of cabinet to 'ON' position. The game will play a power-up tune to announce game-readiness. Drop targets are reset, scores are set to zero, alternating with the 'High Score to Date', and the game is ready for play. Coin game. The game should accept the coin and post credits* for coins accepted (adjustable). Pressing the credit button on the door will cause the outhole kicker to serve the ball to the shooter alley. The 1st player-up lite is lit. A game-up tune* is played to announce play-readiness. The bonus score is advanced to 1000 points.

One player is posted each additional time the credit button is pressed (one to four can play). The credits are reduced by one each time the credit button is pressed until the credits are reduced to zero.

Shooting the ball initiates play. Rebound switches score 10 points. Thumper-bumpers, when not lit, score 10 points.

The game awards all points earned by the player. If spinner is turning and scoring when the ball hits a target, the spinner and the target scores are awarded.

When the ball enters the outhole, the bonus score is added to the total score. The player-up and/or ball in play on the back box is advanced one position. The bonus score is advanced to 1000 points. The outhole kicker serves the ball to the shooter alley and play is resumed. This continues until each player has played the allowable number of balls per game (adjustable). At this time the 'Game Over' light is lit. A random Match* number appears and the 'Match' light is lit. If the number is the same as the last two digits in a player's score, a free game is awarded.

Extra balls won during the course of the game are played immediately after the player's regular ball enters the outhole. The player-up and/or ball in play on the back box are not advanced for extra ball play. Bonus score is added to the player's score and the bonus is set to 1000 points before the game serves the extra ball for play.

Scoring over 1,000,000 gives "High Score to Date" award.

At the end of the game, a 'High Score to Date' is alternately flashed with all 4 player scores. If the 'High Score to Date' is beat, this feature* awards free games.


Tilting the game results in loss of a ball. The flippers, thumper-bumpers, etc., go 'dead.' Bonus points are not scored. The purpose of the tilt penalty is to discourage the player from jostling the machine in an attempt to prolong play. Game action becomes normal after the ball kicker assembly serves the ball to the shooter alley.

Slamming the machine results in loss of the game. All feature lights go out, the game goes 'dead,' and a time delay occurs. The purpose of the time delay is to discourage unnecessary abuse of the machine. After the delay, the 'Game Over' light lites and the power-up tune is played. The time delay occurs anytime one of the slam switches is made to contact. There is one factory installed slam switch on the front door. (Any number of slam switches could be installed by the operator, to meet his individual requirement.) The switch should be adjusted to have approximately 1/16" gap between the contacts. The weighted blade should be adjusted to attain the desired sensitivity. Decreasing the gap between contacts will make the switch more sensitive. Opening the gap will reduce sensitivity.

*Some tunes and features can be disabled by operator if so desired. See Back Box Adjustments.

Bally®

GAME 1161 - E
FO 633

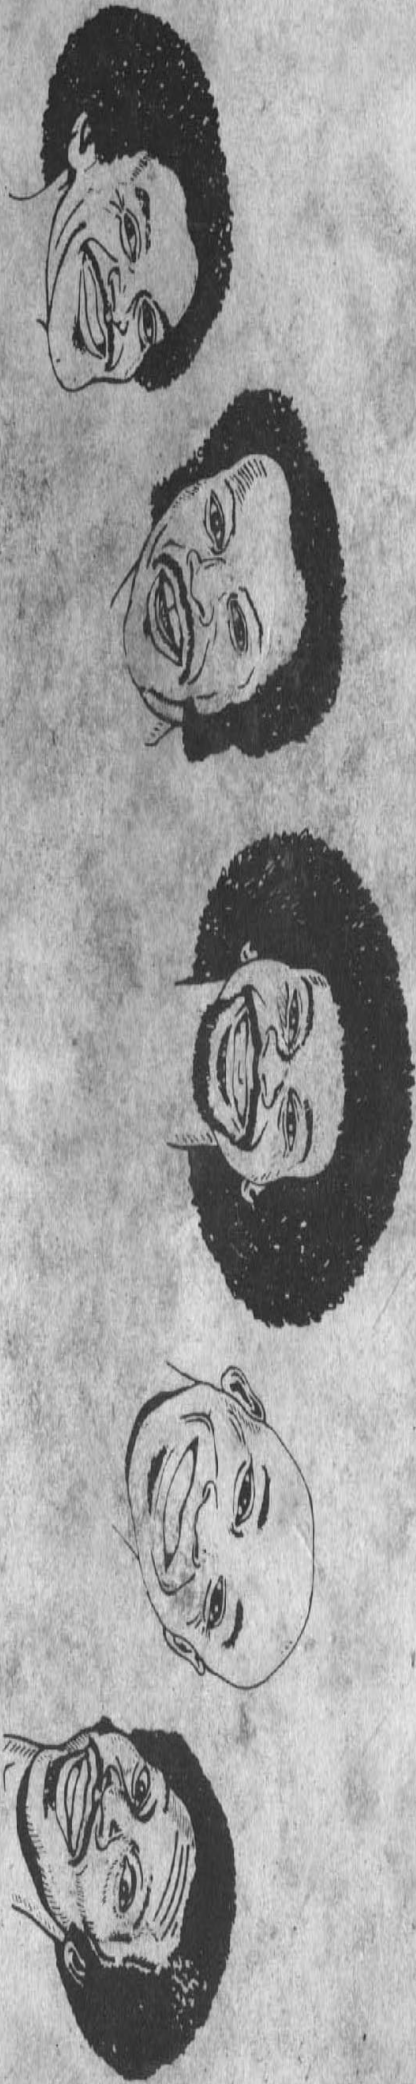

**FLAVORFUL
GLOBETROTTERS**

Bally

MANUFACTURING CORPORATION

2640 Belmont Avenue - Chicago, Illinois, 60618, U.S.A.
TELEPHONE (312) 267-6060/TELEX NO. 253076/CABLE ADDRESS: BALLYAN

© BALLY MFG. CORP. 1979
ALL RIGHTS RESERVED

III. BOOKKEEPING FUNCTIONS

The game is designed to help the operator perform certain accounting functions. The game can display the number of total plays and replays (free games). It can display the number of coins dropped down each coin chute. The bookkeeping functions are displayed on all player score displays simultaneously. An identification number, 05 to 14, appears on the Match/Ball in Play window as follows:

- 05— 00 to— 40=Current Credits
- *06—10000 to—99999=Total Plays (Paid & Free Games)
- *07—10000 to—99999=Total Replays (Free Games)
- 08— 00 to—99999=Total times 'High Score to Date' is beat
- *09—10000 to—99999=Coins Dropped thru Coin Chute #1
- *10—10000 to—99999=Coins Dropped thru Coin Chute #2**
- *11—10000 to—99999=Coins Dropped thru Coin Chute #3**
- *12— 00 to—99999=Number of Specials awarded from Panel Specials Only
- *13— 00 to—99999=Number of minutes of Game Play
- *14— 00 to—99999=Number of Service Calls

The game displays the first bookkeeping entry if the Self-Test button (See Fig. III) on the inside of the front door is pressed ten times. Alternately push and release the Self-Test button at one second intervals. The number 05 appears in the 'Match/Ball in Play' window. Current credits appear on the player score displays. Each additional press of the button causes the next entry to be displayed.

After the data in each bookkeeping register is recorded, it can be set to zero simply by pressing switch button S33, located on A4, the MPU module in the back box (See Fig. III), or by pressing the Coin Chute #3 switch. Any or all registers can be cleared by alternating between the Self-Test button and the switch button S33 on the MPU module or Coin Chute #3 switch. The operator is given this option as a possible convenience and can elect to use or not use it as his needs direct.

Pressing the button once more with the 14th entry displayed causes the game to play the power-up tune and light the Game Over light.

Service credits are designed to allow the serviceman to test the game under actual play conditions without disturbing the bookkeeping records that reside at identification numbers 06, 07, 09, 10 and 11.

To obtain Service Credits, push and release the Self-Test switch until identification number 05 appears in the 'Match/Ball in Play' window. Hold in the Credit button until the desired number of Service Credits (up to five) appears on the player score displays.

NOTE: If, upon accessing identification number 05, a number of credits greater than five is displayed, pressing the credit button has no effect.

Identification number 14 is reserved as a record of the number of Service Credits used.

*The 10,000 level is pre-set at the factory; can be set to zero, initially, if desired.

**If Coin Chute is not used in game, number displayed (if other than 00) on Player Score displays has no significance.

HARLEM GLOBETROTTERS #1161-E FEATURE OPERATION & SCORING

A. TOP BASKET "GLOBE" SAUCER FEATURE:

Each time the ball goes into the top G-L-O-B-E saucer, 3,000 points are scored and the letter that is lit there, is spotted at the corner of the playfield and the player's total score and bonus score advance before the ball is ejected back onto the playing surface. When all of the letters of G-L-O-B-E are spotted in the center of the playfield, the ball will score and flash 50,000 points and light a feature lite or score a SPECIAL (see below) and reset all of the G-L-O-B-E letters in the center of the playfield, enabling this sequence to be repeated. Also, the FREE THROW IN LINE TARGETS spot the lit top saucer G-L-O-B-E letters. G-L-O-B-E in the center of the playfield is remembered from ball to ball.

Fixed Data SW. #32 controls the G-L-O-B-E Specials.

	SW. #32 OFF	SW. #32 ON
Spotting G-L-O-B-E 1st time	lites left outlane 25,000 lite.	lites left outlane, 25,000 lite and G-L-O-B-E Special w/1 lite.
Spotting G-L-O-B-E 2nd time	lites G-L-O-B-E Special w/1 lite	scores Special
Spotting G-L-O-B-E 3rd and each additional time.	scores Special	scores Special

Fixed Data SW. #14 controls the scanning mode of the top saucer.

ON —(cons)—letters *scan*
 OFF —(lib) —letters step one at a time.

B. FREE THROW IN-LINE (4) DROP TARGET FEATURE:

There are four in-line drop targets. Each target advances the player's total score and bonus score and advances the TROTTER FAST BREAK SPINNER value. Target #1 scores points and advances the bonus score; target #2 additionally awards the 2X bonus multiplier; target #3 additionally awards the 3X bonus multiplier; target #4 additionally awards the 5X bonus multiplier. The FREE THROW SAUCER awards 25,000 points when the ball enters it for the first time during any one particular ball-in-play; this same saucer awards a SPECIAL when the ball enters it for the second time during any one particular ball-in-play. All (4) targets may be reset the first time the ball enters the FREE THROW SAUCER so that they have to be knocked down again during that same particular ball-in-play to collect a SPECIAL.

Fixed data switch #8 controls the reset of these targets:

ON —(lib) —resets on new ball, only one Special per ball.
 OFF —(cons)—resets on new ball and every time the ball enters the saucer, Special stays lit.

C. Left Side "Players" (5) Target Feature:

Each target scores 300 points. Knocking out all (5) lites scores 10,000 points and advances the SLAM DUNK TARGET value (see "D" below). The "PLAYERS" TARGET value may be remembered from ball to ball.

Fixed data switch #24 controls the "Players" target value:

ON —(lib) —target lites *in memory*
 OFF —(cons)—target lites *not in memory*.

D. Right Side Slam Dunk Target Feature:

Each time the ball hits the SLAM DUNK TARGET, 300 points or the lit value is scored. The value is advanced by knocking out all (5) left side PLAYERS TARGETS lites (see "C" above) as follows:

X-BALL—SPECIAL—5,000

NOTE: if X-Ball or Special is made before target value sequence reaches 5,000 the lite automatically jumps to 5,000.

This target also opens the Free-Ball Gate when the light is lit.

Fixed data switch #23 controls the SPECIAL on this target:

ON —(lib) —Special stays on once lit for remainder of ball.

OFF —(cons)—After making Special, 5 left targets must be made to lite Special again.

E. Bonus Score Feature:

A bonus of 1,000 to 49,000 may be scored. The game starts with a bonus of 1,000. The bonus score advances 3 steps whenever the ball goes through the right flipper return lane and one step each time either of the (2) center spinners sequences is completed; also see sec's A & B for bonus advance. When a bonus score of 20,000 or higher is achieved, the 20,000-30,000 or 40,000 SUPER BONUS LITES may remain in memory and be lit with the start of each new ball for that player (see fixed data switch #15 below). A tilt nullifies the bonus score.

Fixed data switch #15 controls the Super Bonus Memory:

ON —(lib) —20,000-30,000 and 40,000 in memory.

OFF —(cons)—not in memory.

Fixed data switch #16 controls the center spinner feature:

ON —(lib) —Both spinners on (adv bonus).

OFF —(cons)—Spinners alternate on multiple 300 or 3,000 score. (only lit one advances bonus).

F. FREE BALL GATE FEATURE:

The FREE BALL GATE opens when a ball hits the SLAM DUNK TARGET when lit. A ball entering the bottom right outlane when the gate is open scores 3,000 points and is directed onto the right flipper offering extended play which closes the gate. The gate is re-opened by hitting the SLAM DUNK TARGET again. A tilt closes the FREE BALL GATE.

G. THUMPER BUMPER FEATURE:

Each lit thumper bumper scores 1,000 points. All bumpers are lit on a 3-ball game. The bumpers alternate (like the spinner lite) on a 5-ball game.

H. SPECIAL REPLAY/X-BALL/NOVELTY MODES

Switch #6 and #7 give the operator flexibility to award a replay, extra ball or score (Novelty) when a special is scored (Saucer target, Dunk shot target and G-L-O-B-E). The following chart explains the settings.

SWITCH	SW. 6 ON SW. 7 ON	SW. 6 OFF SW. 7 ON	SW. 6 ON SW. 7 OFF
Positons	REPLAY	X-BALL	NOVELTY
Saucer Target Special	REPLAY	X-BALL*	50,000
Dunk Shot Target Spec.	REPLAY	*	50,000
G-L-O-B-E Special	REPLAY	X-BALL*	50,000
Dunk Shot Target (X-BALL)	X-BALL	X-BALL**	25,000
Scoring Thresholds	REPLAY	X-BALL**	NO AWARD

*50,000 if Same Player Shoot Again is lit.

**25,000 if Same Player Shoot Again is lit.

V. GAME ADJUSTMENTS

A. Playfield Panel Post Adjustments:

Posts that control left and right outlane opening on panel can be moved to make access to outlanes easier or harder for ball to enter. See Figure II.

Easier entry will decrease playing time and scoring (conservative).

Harder entry will increase playing time and scoring (liberal).

B. Back Box Game Adjustments:

Each game has thirty-two switches located on A4, the MPU module, located in the back box, that allow play to be customized to the location. See Figure III. Credits per coin, maximum credits, credit display, balls per game, match feature, high game feature, special award and melody are selectable by means of the switches. The switches are contained in four-sixteen lead packages numbered S1-8, S9-16, S17-24 and S25-32 for easy identification. The "ON" toggle position is marked on the assembly. **Turn off power before making adjustments.**

Credits/Coin Adjustments:

The credits per coin are selectable by means of S17-S20 for coin chute #2. The switch settings and resultant credits/coin are as follows:

S20	S19	S18	S17	Credits/Coin
OFF	OFF	OFF	OFF	Same as Coin Chute #1 Settings
OFF	OFF	OFF	ON	1/1 Coin
OFF	OFF	ON	OFF	2/1 Coin
OFF	OFF	ON	ON	3/1 Coin
OFF	ON	OFF	OFF	4/1 Coin
OFF	ON	OFF	ON	5/1 Coin
OFF	ON	ON	OFF	6/1 Coin
OFF	ON	ON	ON	7/1 Coin
ON	OFF	OFF	OFF	8/1 Coin
ON	OFF	OFF	ON	9/1 Coin
ON	OFF	ON	OFF	10/1 Coin
ON	OFF	ON	ON	11/1 Coin
ON	ON	OFF	OFF	12/1 Coin
ON	ON	OFF	ON	13/1 Coin
ON	ON	ON	OFF	14/1 Coin
ON	ON	ON	ON	15/1 Coin

The credits given per coin are selectable by means of switches 1-5 incl., for coin chute #1 and switches 9-13 incl., for coin chute #3. Thirty-one different credit ratios are available for each coin chute. The switch settings and resultant credits/coin are listed below.

CREDITS/COIN ADJUSTMENTS

COIN CHUTE #1 (HINGE SIDE) OR #3	SWITCHES					CREDITS/COIN
	5 13	4 12	3 11	2 10	1 9	
	OFF	OFF	OFF	OFF	OFF	3/2 COINS**
	OFF	OFF	OFF	OFF	ON	3/2 COINS**
	OFF	OFF	OFF	ON	OFF	1/COIN
	OFF	OFF	OFF	ON	ON	1/2 COINS*
	OFF	OFF	ON	OFF	OFF	2/COIN
	OFF	OFF	ON	OFF	ON	2/2 COINS*
	OFF	OFF	ON	ON	OFF	3/COIN
	OFF	OFF	ON	ON	ON	3/2 COINS*
	OFF	ON	OFF	OFF	OFF	4/COIN
	OFF	ON	OFF	OFF	ON	4/2 COINS*
	OFF	ON	OFF	ON	OFF	5/COIN
	OFF	ON	OFF	ON	ON	5/2 COINS*
	OFF	ON	ON	OFF	OFF	6/COIN
	OFF	ON	ON	OFF	ON	6/2 COINS*
	OFF	ON	ON	ON	OFF	7/COIN
	OFF	ON	ON	ON	ON	7/2 COINS*
	ON	OFF	OFF	OFF	OFF	8/COIN
	ON	OFF	OFF	OFF	ON	8/2 COINS*
	ON	OFF	OFF	ON	OFF	9/COIN
	ON	OFF	OFF	ON	ON	9/2 COINS*
	ON	OFF	ON	OFF	OFF	10/COIN
	ON	OFF	ON	OFF	ON	10/2 COINS*
	ON	OFF	ON	ON	OFF	11/COIN
	ON	OFF	ON	ON	ON	11/2 COINS*
	ON	ON	OFF	OFF	OFF	12/COIN
	ON	ON	OFF	OFF	ON	12/2 COINS*
	ON	ON	OFF	ON	OFF	13/COIN
	ON	ON	OFF	ON	ON	13/2 COINS*
	ON	ON	ON	OFF	OFF	14/COIN
	ON	ON	ON	OFF	ON	14/2 COINS*
	ON	ON	ON	ON	OFF	15/ COIN
	ON	ON	ON	ON	ON	15/2 COINS*

*No Credits until second coin is dropped.

**One Credit for first coin. Two Credits for second coin provided that no scoring occurred between 1st and 2nd coin drops. If scoring occurred, second coin gives one credit.

MAXIMUM CREDITS:

The maximum credits accepted by the machine limits the number of games that can be accumulated by coining, by winning replays or both. The maximum number of credits is selectable by means of switches 25 and 26. Four credit limits are available. Switch settings are listed below.

MAXIMUM CREDITS	SWITCHES	
	26	25
10	OFF	OFF
15	OFF	ON
25	ON	OFF
40	ON	ON

BALLS PER GAME:	# BALLS/GAME	SWITCH 31
	5	ON
	3	OFF

MATCH FEATURE:

When the Match Feature is ON, a random number appears in the Match/Ball in Play window and the word MATCH is illuminated. If the number matches the tens digit in a player's score, a free game is awarded. The Match feature creates an incentive to play.

CREDIT DISPLAY:	MATCH	SWITCH 28
		ON
	OFF	OFF
CREDITS DISPLAYED	CREDITS DISPLAYED	SWITCH 27
		ON
	YES	OFF
	NO	OFF

HIGH SCORE FEATURE:

The game is designed to award an Extra Ball or Free Game at each of the three score levels. See Front Door Game Adjustments.

AWARD	SWITCH 7	SWITCH 6
REPLAY	ON	ON
EXTRA BALL	ON	OFF
NO AWARD	OFF	OFF

HIGH SCORE TO DATE OR OVER 1,000,000 SCORE FEATURE:

The game is designed to award free games as an option if high score to date is beat or player exceeds 1,000,000 points. Each time this happens, the winning score becomes the new high score to beat. This score is displayed on all 4 player score displays at the end of each game as an incentive to play. Recommended setting is underlined.

HIGH SCORE TO DATE FEATURE	SWITCH 22	SWITCH 21
No Award	OFF	OFF
One Credit	OFF	ON
Two Credits	ON	OFF
<u>Three Credits</u>	<u>ON</u>	<u>ON</u>

State and local laws may regulate the use of the above features, and they have been designed to allow for appropriate adjustment in order to conform to such requirements.

#1161-E HARLEM GLOBETROTTERS

SOUND OPTION

The game is designed to play several melodies to announce power-up, game-up, etc. The tunes are intended to attract attention to the game and increase game usage. The tunes are controlled by switch settings as shown below:

	S29	OFF	OFF	ON	ON
	S30	OFF	ON	OFF	ON
POWER UP		NOISE	NOISE	NOISE	NOISE
COIN (NO CREDIT)		NOISE	NOISE	NOISE	NOISE
COIN (WITH CREDIT)		NOISE	NOISE	NOISE	NOISE
PLAYER-UP		NOISE	NOISE	TUNE	CHIME
SCORE (10, 100, 1K)		CHIME	CHIME	CHIME	NOISE
SCORE (25K)		NOISE	NOISE	NOISE	NOISE
REPLAY CREDIT		KNOCKER	KNOCKER	KNOCKER	KNOCKER
TILT		NOISE	NOISE	NOISE	NOISE
OUTHOLE		NOISE	NOISE	NOISE	NOISE
GAME OVER		NOISE	NOISE	NOISE	NOISE

GAME FEATURE OPTIONS:

Saucer targets reset adjustment:

Liberal	SW. 8 ON	Targets reset on next ball in play.
Conservative	SW. 8 OFF	Targets reset when ball enters target saucer.

20,000-30,000 or 40,000 Bonus adjustment:

Liberal	SW. 15 ON	20,000-30,000 or 40,000 are held in memory.
Conservative	SW. 15 OFF	20,000-30,000 or 40,000 are not held in memory.

Center left and right spinner adjustment:

Liberal	SW. 16 ON	Left and right spinner lite on.
Conservative	SW. 16 OFF	Left spinner only which alternates.

Dunk shot target special adjustment:

Liberal	SW. 23 ON	Special can be collected more than one time per ball.
Conservative	SW. 23 OFF	After making Special, 5 left targets must be made to lite Special again.

5 side target lite adjustment:

Liberal	SW. 24 ON	Any side target made is held in memory for next ball.
Conservative	SW. 24 OFF	Any side target made is not held in memory.

Globe Special lite adjustment:

Liberal	SW. 32 ON	Left out 25,000 and Globe Special lites.
Conservative	SW. 32 OFF	Left out 25,000 only lites.

Globe saucer scanning adjustment:

Liberal	SW. 14 OFF	Globe lites do not scan.
Conservative	SW. 14 ON	Globe lites keep scanning.

C. FRONT DOOR GAME ADJUSTMENTS

High Score Feature Adjustments:

The game is designed to award an extra ball (option) or a free game at each of three score levels. The recommended levels are on the score card in the game.

Any level from 10,000 to 990,000 can be set, as desired. It is also possible to reset or turn off (00) any or all of the levels, if desired.

1. Push and release Self-Test button (See Figure III) at one second intervals approximately six times or until identification number 01 appears on the 'Match/Ball in Play' display.
2. The number on the Player Score Displays is the score level.* It can be increased, if desired, by holding the credit button in. To decrease the score level, hold the credit button in and depress and release the Self-Test button. Release the credit button when the desired number appears. Note that the level changes 10,000 points at a time. If the number '00' is left on the displays, the high score feature is eliminated for that level.
3. Repeat steps 1 and 2 for the second and third score levels. The identification numbers '02' and '03' on the Match/Ball in Play display are for the second and third levels, respectively.

High Score to Date and 1,000,000 Feature:

The game is designed to award free games when 'High Score to Date' is beat, or if the player exceeds 1,000,000 points.

It is recommended that the level, which will build with play, be periodically reset to the factory recommended level to encourage game play. The adjustment procedure is the same as for the High Score Feature Adjustment, Steps 1 and 2. Continue pushing the Self-Test button until the identification number '04' appears on the 'Match/Ball in Play' display and then do Step 2.

Any level from '00' to 990,000 can be set as described. It is to be noted that '00' does NOT turn off the feature, as it does on High Score feature. The feature is turned off by positioning switches as discussed under 'Back Box Game Adjustments.'

*Can be quickly set to '00' by pressing S33 on the MPU assembly in the back box or Coin Chute switch #3. (See Figure III).

#1161-E
HARLEM GLOBETROTTERS

RUBBER RINGS


A. R-521-3	2" Dia.	(2)
B. R-521-2	1½" Dia.	(3)
C. R-521	¾" Dia.	
D. R-521-4	2½" Dia.	(2)
E. R-406-3	FLIPPERS	(3)
F. R-243	5/16" Dia.	(8)
G. R-243-2	5/16" Dia.	(2)

PANEL TOP PARTS

1. Arch Rail	M-1774
2. Rail Post (3)	C-907
3. Rail Post Cap (3)	C-908
4. Bottom Arch	P-5871-70
5. Shooter Gauge	P-6359-36
6. Ball Gate (L)	A-1475-12
7. Ball Gate (R)	A-1475-13
8. Ball Gate & Wire	ASE-2250-18
9. Screened Plastics (set)	M-1330-164
10. Ball Guide Wire	M-121-35
11. Ball Guide Wire	M-121-46
12. Ball Guide Wire	M-121-44
13. Thumper Cap (3)	A-3713-53
14. Spinner Gate Assy. (2)	ASE-2250-70
15. Spinner Gate Assy.	ASE-2250-71
16. In-Line Drop Target Assy.	ASE-2993-1
17. Target Assembly (red) (5)	ASE-2911-31
18. Target Assembly (red)	ASE-2911-3
19. Ball guide wire	M-121-24
20. Roll over wire & bracket	ASE-2806
21. Roll over wire & bracket	ASE-2806-2
22. Ball Guide Wire	M-121-56
23. Free Gate Wire	M-1335-1
24. Flipper & Shaft (3)	ASE-2214-24
25. Buffer Wires (3)	M-121-53
26. Outhole Wire & Bracket	ASE-2806-21
27. Minipost assy. (10)	ASE-2836-1
28. Ball Guide Wire	M-121-30
29. Roll Over Wire & Bracket	ASE-2806-1

CONS.—Conservative
MED.—Medium
LIB.—Liberal

Indicates moveable posts and scoring adjustments.

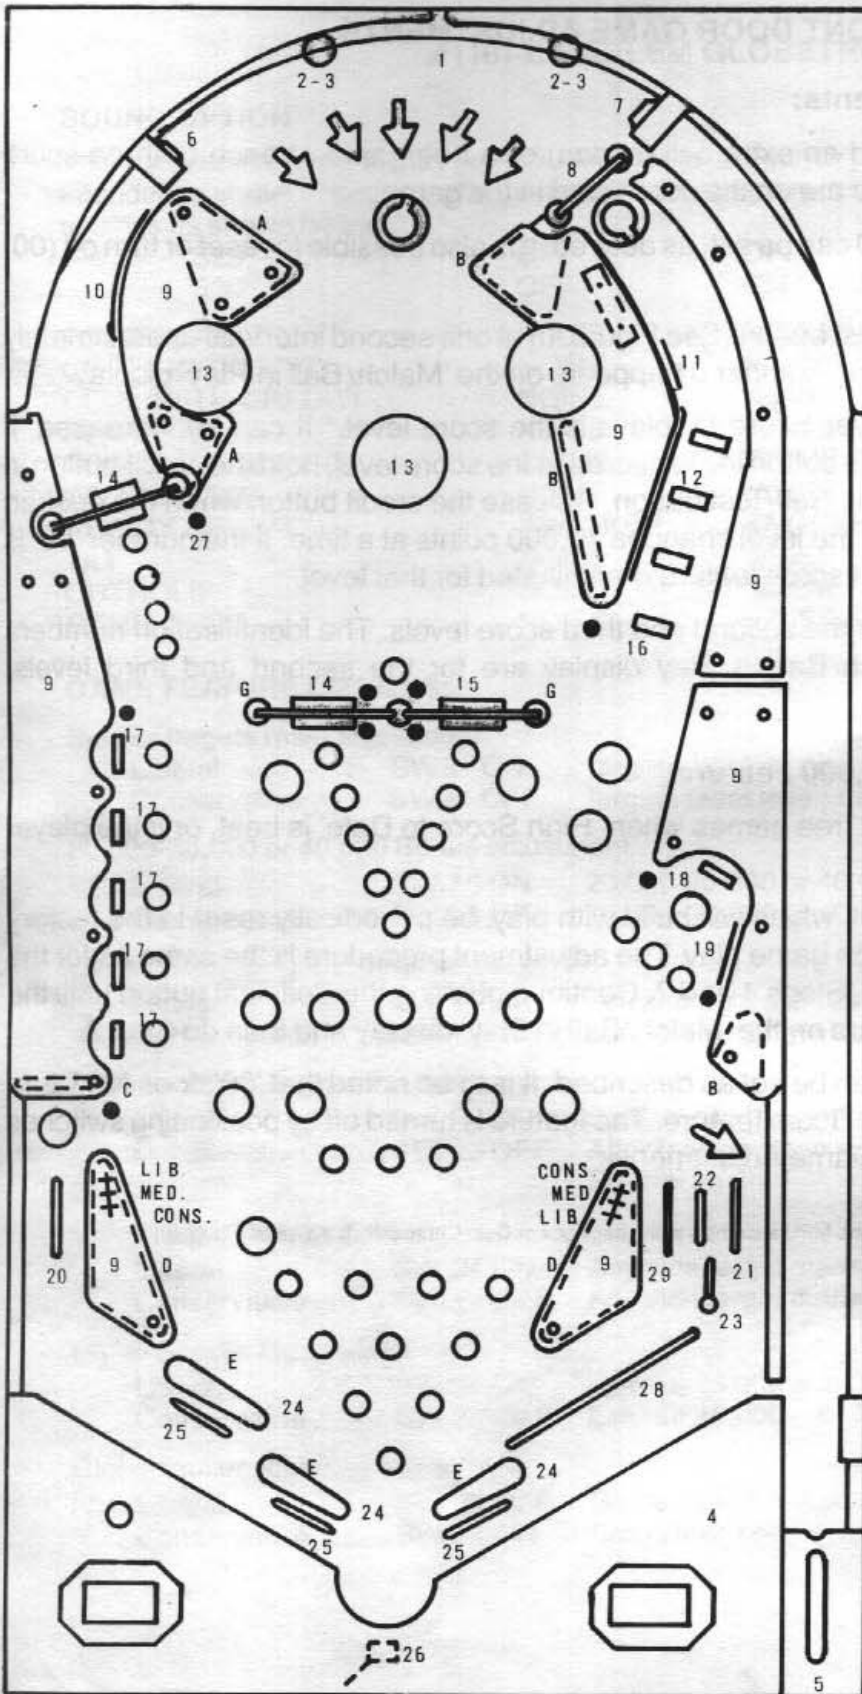

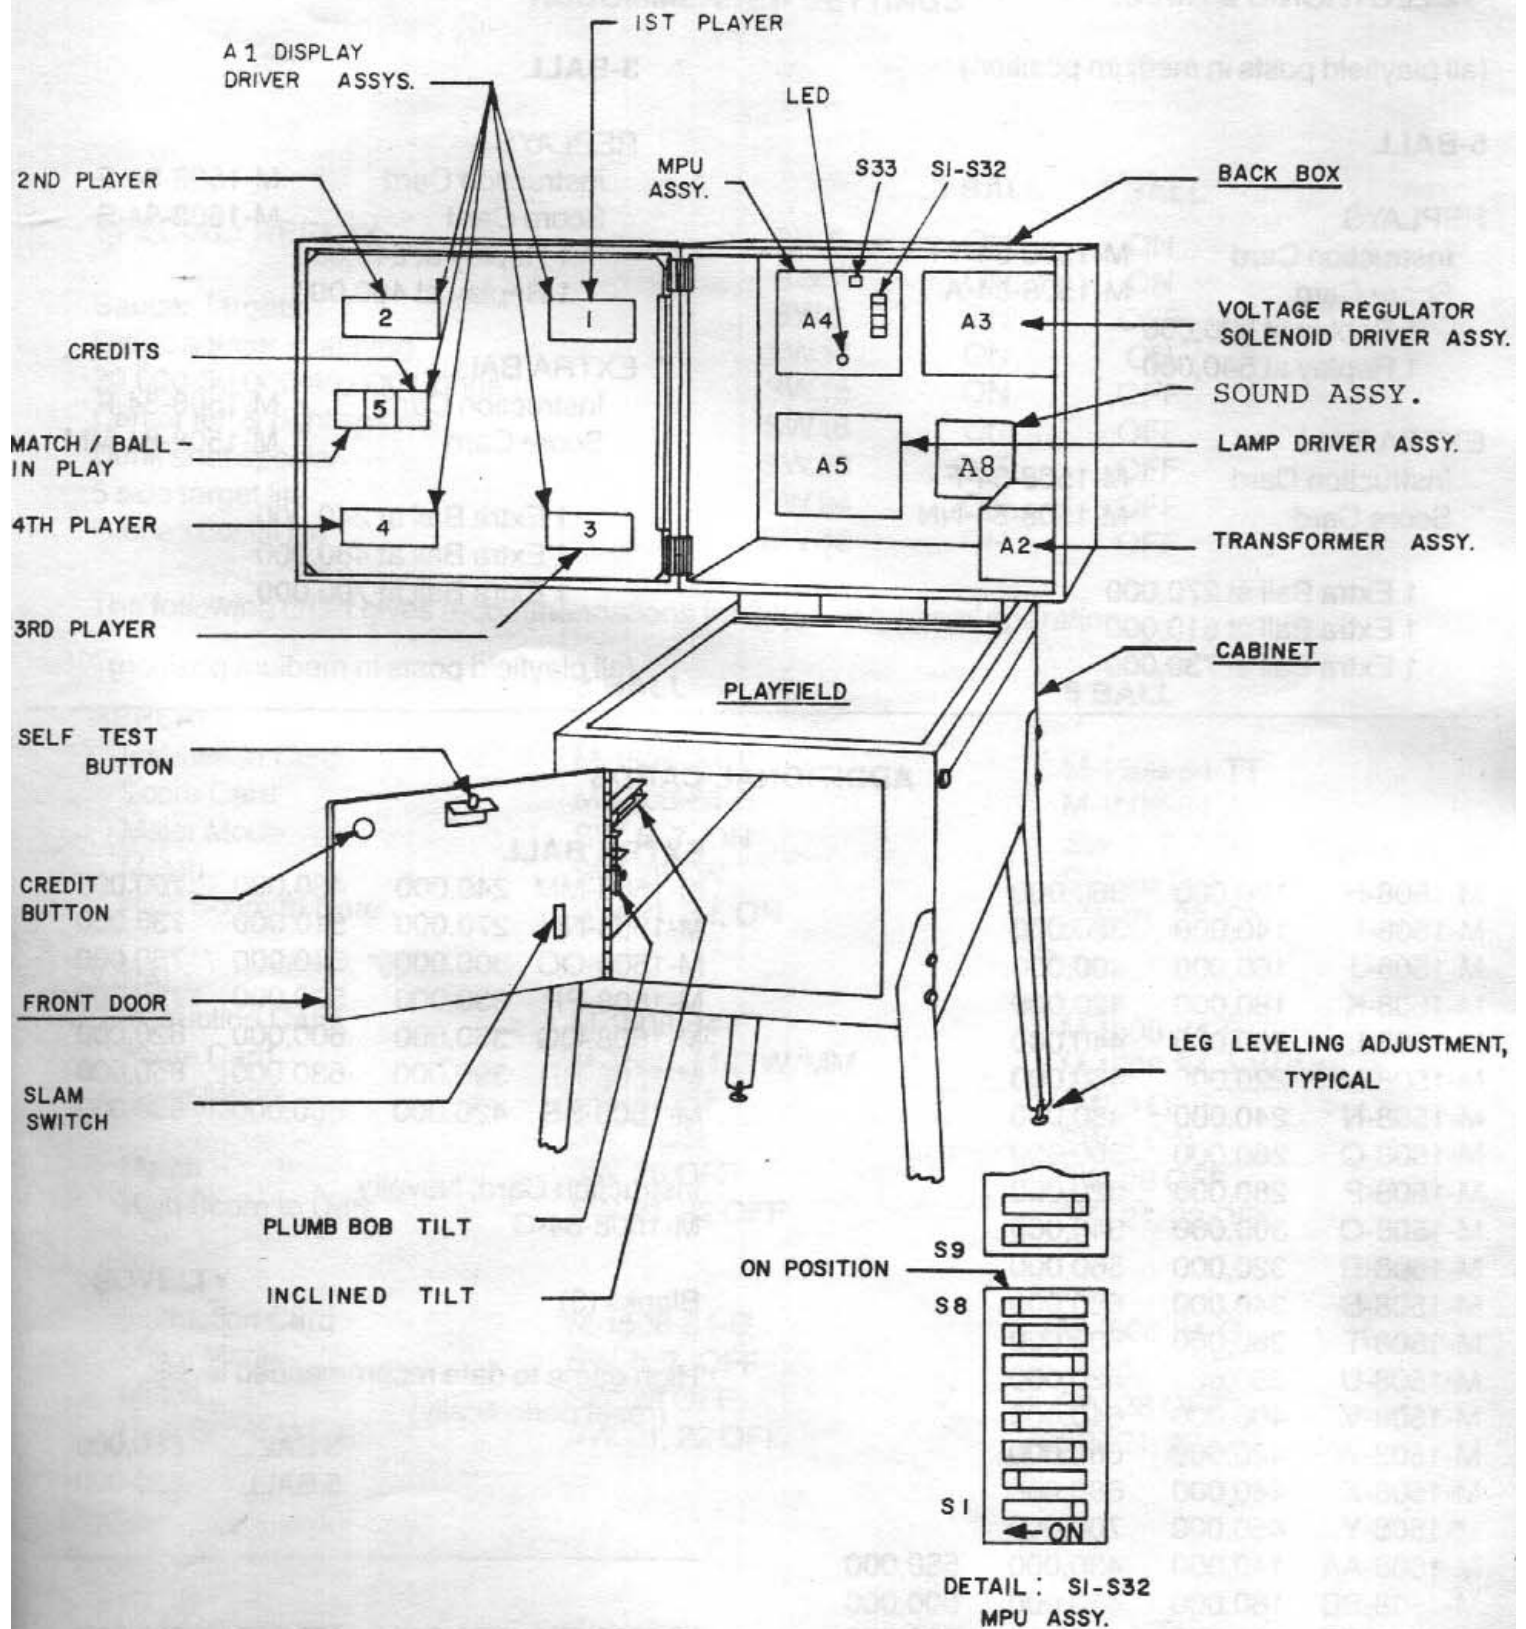


FIGURE III. ELECTRONIC PIN BALL MACHINE

Instruction, Score Cards and High Score feature settings to be used on HARLEM GLOBETROTTERS ELECTRONIC #1161-E.

(all playfield posts in medium position)

5-BALL

REPLAYS

Instruction Card M-1508-84-TT
 Score Card M-1508-84-A
 1 Replay at 300,000
 1 Replay at 540,000

EXTRA BALL

Instruction Card M-1508-84-F
 Score Card M-1508-84-NN

 1 Extra Ball at 270,000
 1 Extra Ball at 510,000
 1 Extra Ball at 730,000

3-BALL

REPLAYS

Instruction Card M-1508-84-E
 Score Card M-1508-84-B
 1 Replay at 240,000
 1 Replay at 480,000

EXTRA BALL

Instruction Card M-1508-84-F
 Score Card M-1508-84-MM

 1 Extra Ball at 240,000
 1 Extra Ball at 480,000
 1 Extra Ball at 700,000

(all playfield posts in medium position)

ADDITIONAL CARDS

REPLAYS

M-1508-H	120,000	360,000	
M-1508-I	140,000	380,000	
M-1508-J	160,000	400,000	
M-1508-K	180,000	420,000	
M-1508-L	200,000	440,000	
M-1508-M	220,000	460,000	
M-1508-N	240,000	480,000	
M-1508-O	260,000	500,000	
M-1508-P	280,000	520,000	
M-1508-Q	300,000	540,000	
M-1508-R	320,000	560,000	
M-1508-S	340,000	580,000	
M-1508-T	360,000	600,000	
M-1508-U	380,000	620,000	
M-1508-V	400,000	640,000	
M-1508-W	420,000	660,000	
M-1508-X	440,000	680,000	
M-1508-Y	460,000	700,000	
M-1508-AA	140,000	430,000	580,000
M-1508-BB	160,000	450,000	600,000
M-1508-CC	180,000	470,000	620,000
M-1508-DD	200,000	490,000	640,000
M-1508-EE	220,000	510,000	660,000
M-1508-FF	240,000	530,000	680,000
M-1508-GG	260,000	550,000	700,000

EXTRA BALL

M-1508-MM	240,000	480,000	700,000
M-1508-NN	270,000	510,000	730,000
M-1508-OO	300,000	540,000	760,000
M-1508-PP	330,000	570,000	790,000
M-1508-QQ	360,000	600,000	820,000
M-1508-RR	390,000	630,000	850,000
M-1508-SS	420,000	660,000	880,000

Instruction Card, Novelty
 M-1508-84-G

Blanks (3)

High game to date recommended levels:
 (reset periodically)

3 BALL	560,000
5 BALL	620,000

M-1508-HH	280,000	570,000	720,000
M-1508-II	300,000	590,000	740,000
M-1508-JJ	320,000	610,000	760,000
M-1508-KK	340,000	630,000	780,000
M-1508-LL	360,000	650,000	800,000

**#1161-E HARLEM GLOBETROTTERS
RECOMMENDED SETTINGS**

		3 BALL	5 BALL
SPECIAL: REPLAY	SW.6	ON	ON
	SW.7	ON	ON
Saucer Targets	SW.8	ON	OFF
Globe saucer scanning	SW.14	ON	ON
20,000-30,000-40,000 Bonus	SW.15	ON	OFF
Center left & right spinner	SW.16	ON	OFF
Dunk shot special	SW.23	OFF	OFF
5 side target lite	SW.24	ON	OFF
Globe special lite	SW.32	ON	OFF

The following chart gives recommendations for 3 typical types of operation.

	3 BALL	5 BALL
REPLAY		
Instruction Card	M-1508-84-E	M-1508-84-TT
Score Card	M-1508-84-B	M-1508-84-A
Major Mode	SW. 6, 7, ON	SW. 6, 7, ON
Match	SW. 28 ON	SW. 28 ON
High Score to Date	SW. 21, 22, ON	SW. 21, 22, ON
X-BALL		
Instruction Card	M-1508-84-F	M-1508-84-F
Score Card	M-1508-84-B W/MM	M-1508-84-A W/NN
Major Mode	SW. 6 OFF	SW. 6 OFF
	SW. 7 ON	SW. 7 ON
Match	SW. 28 OFF	SW. 28 OFF
High Score to Date	SW. 21, 22 OFF	SW. 21, 22 OFF
NOVELTY		
Instruction Card	M-1508-84-G	M-1508-84-G
Major Mode	SW. 6, 7, OFF	SW. 6, 7, OFF
Match	SW. 28 OFF	SW. 28 OFF
High Score to Date	SW. 21, 22 OFF	SW. 21, 22 OFF

VIII. ROUTINE MAINTENANCE ON LOCATION:

Self-Test routines are written into the game design. They are particularly useful for routine maintenance. The tests are described below. The first test is automatic and occurs on power-up. This test causes the MPU module A4 to examine itself for failures. Seven flashes of an LED indicates proper operation. The second series of self-diagnostic tests causes the MPU to 'exercise' each of the other modules in such a way as to make their faults, if any, obvious. See Figure III and Page ii.

It is recommended that these tests be used several times a week to check out the games before play. If faults are discovered, they may be corrected on location if the operator has a stock of replacement modules. See "Trouble Shooting on Location."

MPU Module Self-Test:

At power on, the LED on the MPU module flashes once. (Flicker-Flash). After a pause, it flashes six more times and goes out. A power-up tune is played to announce game readiness. This indicates proper MPU operating condition and successful completion of the power-up test.

Game Self-Diagnostic Tests:

1. Pressing the Self-Test button inside the door initiates the Self-Test routine. See Figures III and IV. All switched lamps flash off and on continuously.
2. Pressing the Self-Test button again causes each digit on each display to cycle from 0 thru 9, and repeat continuously.
3. Pressing the Self-Test button again causes each solenoid to be energized, one at a time, in a continuous sequence. Hold both flipper buttons 'in' during this test. The number appearing on the Player Score displays is the same as the number assigned to the solenoid. The sound of a solenoid pulling-in as a number appears indicates proper operation. The absence of sound is improper. If sound is absent, see Page 17 for help in Solenoid identification.
4. Pressing Self-Test button again causes the sound module to play the "Game Over" tune repeatedly.
5. Pressing the Self-Test button again causes the MPU to search each switch assembly for stuck contacts. If any are found, the number of the first set encountered is flashed on the Player Score displays. The number remains until the fault is cleared. See Page 17 for help in Stuck Switch identification. Other numbers may follow if more stuck contacts are present. If there are no stuck switches, the Match/Ball in Play display flashes '0'.
6. Pressing the Self-Test button 14 more times causes the MPU to step thru the threshold and bookkeeping functions described previously and finally to repeat the power-up test. For more rapid exit to power-up, turn the game off, then on. The game is now ready to play.


After successful completion of the Self Diagnostic Test procedure, set the game up for play. Exercise each rollover, thumper-bumper, slingshot, etc., by hand until each switch assembly on the playfield has been checked for proper operation. If actuating a switch assembly results in intermittent or no response, clean contacts by gently closing them on a clean business card or piece of paper and wiping until they wipe clean. Regap, if necessary, to 1/16". **Do not burnish or file Gold Plated Switch Contacts.**

IX. TROUBLESHOOTING ON LOCATION

The game is designed to make troubleshooting easy. Several simple procedures are given herein that cover the greatest percentage of game failures. They are written for an operator on location and require module replacement. (See Figure III) Symptoms and the action to be taken are given for each type of problem.

If the problem is more complicated and is not solved by following this procedure, more detailed procedures are available from Bally. See the Parts List for ordering information.

FIGURE IV SELF DIAGNOSTIC TEST

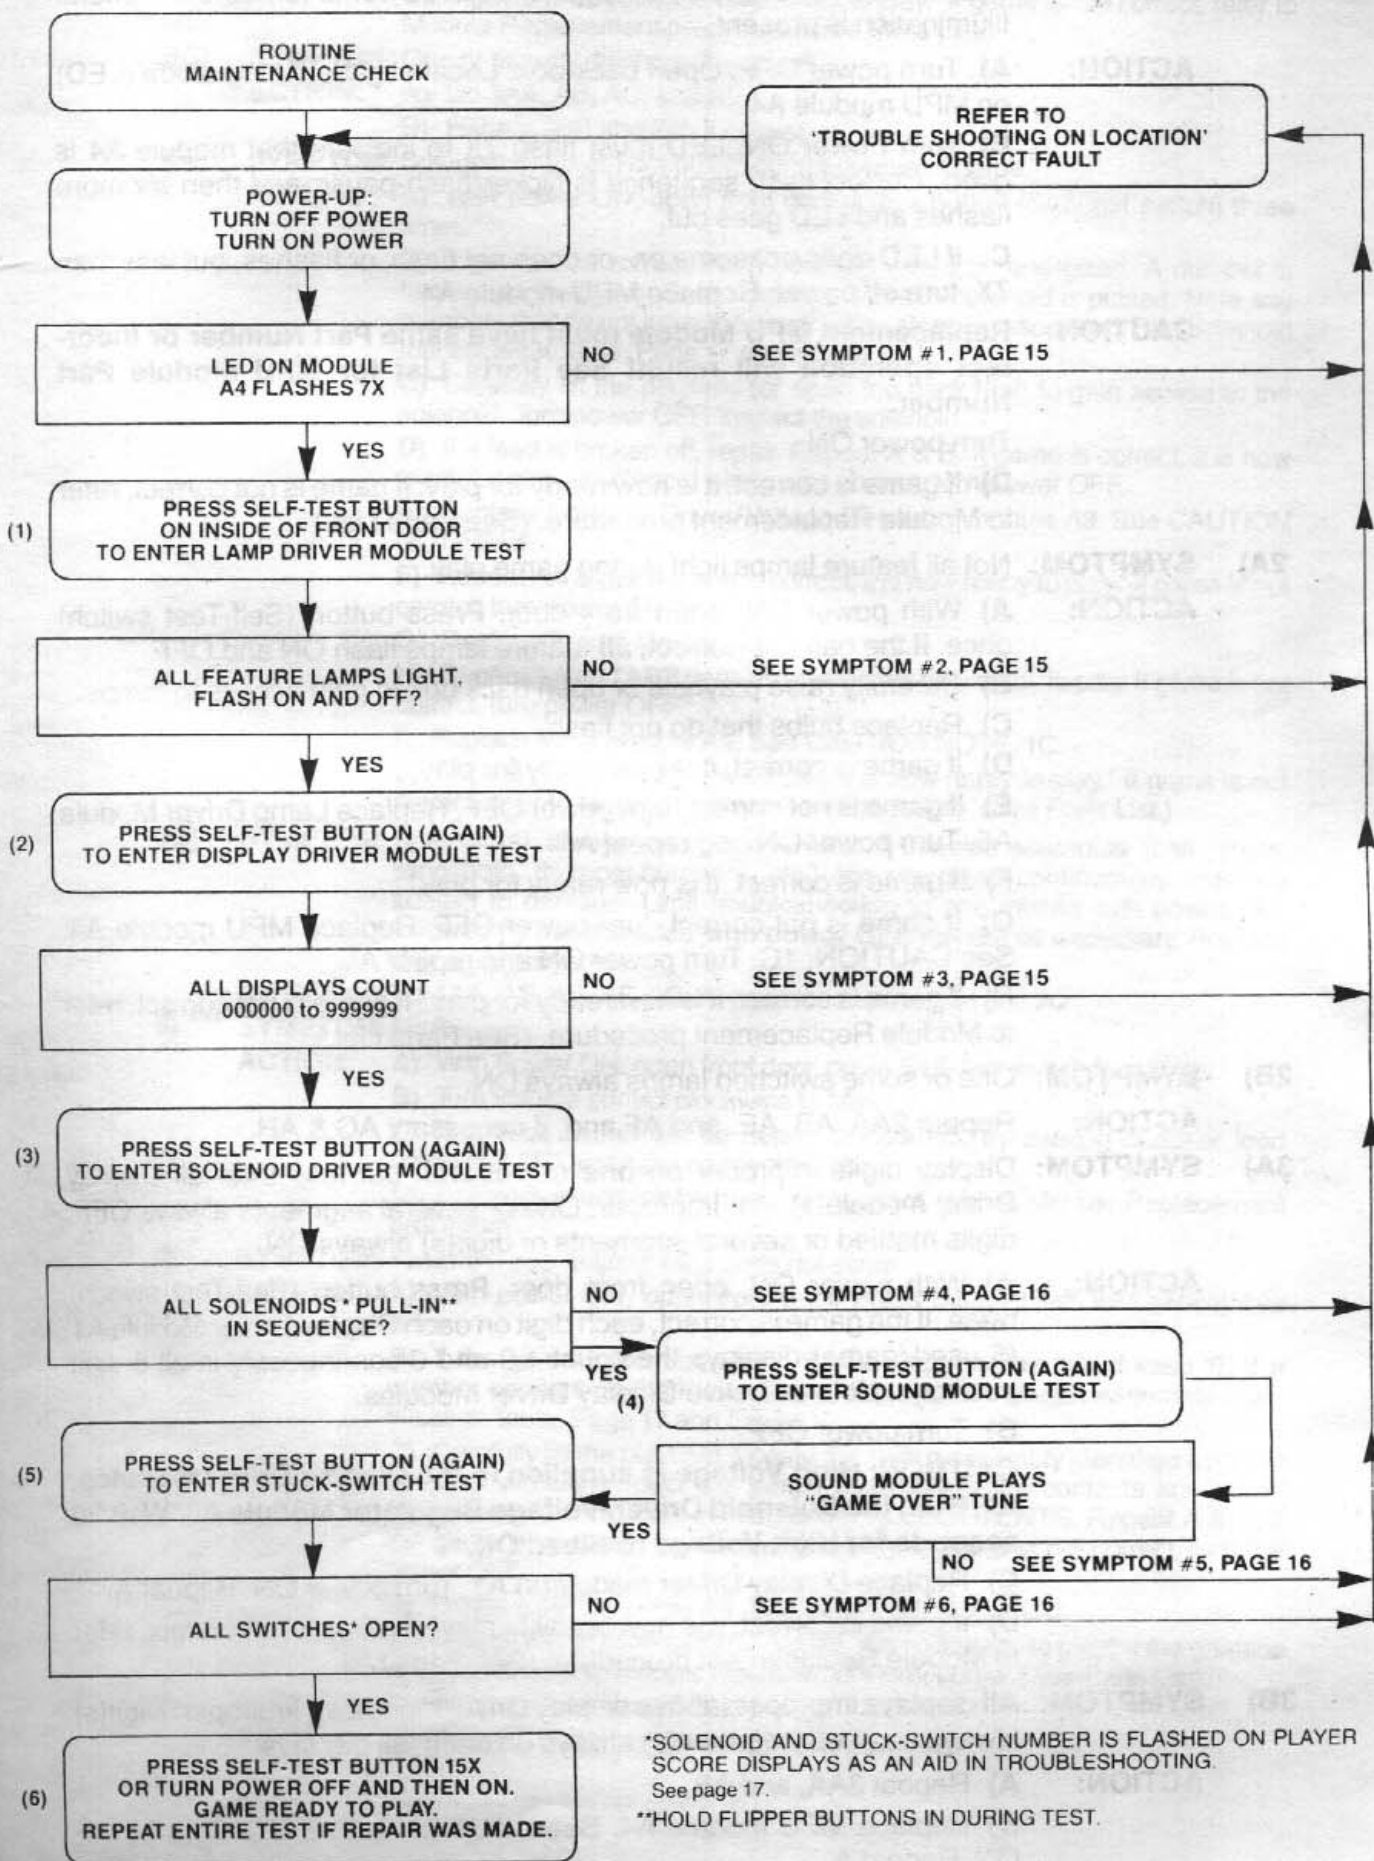

- 1A) SYMPTOM:** Game does not play power-up tune when power is turned on. General Illumination is present.
- ACTION:**
- A)** Turn power OFF. Open back box. Locate light emitting diode (LED) on MPU module A4.
 - B)** Turn Power ON. LED must flash 7X to indicate that module A4 is good. Correct flash sequence is flicker/flash-pause-and then six more flashes and LED goes out.
 - C.** If LED does not come on, or does not flash, or flashes, but less than 7X, turn off power. Replace MPU module A4.
- CAUTION:** **Replacement MPU Module must have same Part Number or incorrect operation will result! See Parts List for MPU Module Part Number.**
- Turn power ON.
- D)** If game is correct, it is now ready for play. If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 2A) SYMPTOM:** Not all feature lamps light during game play.
- ACTION:**
- A)** With power ON, open front door. Press button (Self-Test switch) once. If the game is correct, **all** feature lamps flash ON and OFF.
 - B)** Carefully raise playfield or open back box to gain access to lamps.
 - C)** Replace bulbs that do not flash.
 - D)** If game is correct, it is now ready for play.
 - E)** If game is not correct, turn power OFF. Replace Lamp Driver Module A5. Turn power ON and repeat A.
 - F)** If game is correct, it is now ready for play.*
 - G)** If game is not correct, turn power OFF. Replace MPU module A4. See CAUTION, 1C. Turn power ON and repeat A.
 - H)** If game is correct, it is now ready for play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 2B) SYMPTOM:** One or some switched lamps always ON.
- ACTION:** Repeat 2AA, AB, AE, and AF and, if necessary AG & AH.
- 3A) SYMPTOM:** Display digits improper on **one** or **several**, but less than all Display Driver module(s), A1. Improper: One or several segments always OFF, digits mottled or several segments or digit(s) always ON.
- ACTION:**
- A)** With power ON, open front door. Press button (Self-Test switch) twice. If the game is correct, each digit on each Display Driver Module A1 (5 used/game) displays the count 1-9 and 0 continuously in all 6 digit positions. Note defective Display Driver modules.
 - B)** Turn power OFF.
- CAUTION: High Voltage is supplied to the Display Driver Modules, A1, from the Solenoid Driver/Voltage Regulator Module A3. Wait 30 seconds for High Voltage to Bleed Off.**
- C)** Replace Display Driver module(s) A1. Turn power ON. Repeat A.
 - D)** If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 3B) SYMPTOM:** **All** displays improper (all five display Driver modules). Improper: Digit(s) always on or off/segment(s) always on or off, all displays.
- ACTION:**
- A)** Repeat 3AA, and AB.
 - B)** Replace MPU module A4. See CAUTION NOTE, 1C. Turn power ON. Repeat A.

- C) If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 3C) **SYMPTOM:** One or several displays always off.
ACTION: A) Do 3AA, AB, AC, and AD.
 B) Repeat 3BB and BC, if necessary.
- 4A) **SYMPTOM:** Solenoid(s) do(es) not pull-in during course of game.
ACTION: A) With power ON, open front door. Press button (Self-Test switch) three times.
 B) If game was correct, each solenoid would be energized. A number is flashed on the Player Score displays as each solenoid is pulsed. Note any numbers that do not have the sound of a solenoid associated. See Solenoid Identification Table, Page 17 and Figure V.
 C) Carefully lift the playfield (or open the back box) to gain access to the solenoid. Turn power OFF. Inspect the solenoid.
 D) If a lead is broken off, repair. Repeat A & B. If game is correct, it is now ready for play.* If solenoid wiring was correct, turn power OFF.
 E) Replace Solenoid Driver/Voltage Regulator module A3. See CAUTION NOTE 3AB.
 F) Repeat AA & AB. If game is correct, it is now ready to play.* If game is not correct, turn power OFF.
 G) Replace Sound Module A8.
 H) Repeat AA and AB if game is correct. It is now ready to play. If game is not correct, turn power OFF."
 I) Replace MPU module A4. See CAUTION NOTE, 1C.
 J) Repeat A & B. If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement Procedure. (See Parts List.)
- 4B) **SYMPTOM:** Solenoid(s) always energized—Note: if impulse solenoids (ball ejects, slingshots, thumper-bumpers, etc.) are energized continuously, they are subject to damage. Limit troubleshooting to one minute with power ON, followed by **five minutes with power OFF**. Repeat as necessary. Replace damaged solenoids.
ACTION: Do 4AA, AB, AE, AF, AG, AH and if necessary, AI and AJ.
- 5) **SYMPTOM:** No Sound.
ACTION: A) With Power ON, open front door, press Self-Test switch four times.
 B) Turn volume control clockwise to Max.
 C) If correct, sound will be heard. If incorrect, try seating speaker lead connector (J2) and input connector (J1).
 D) If correct, sound will be heard. If incorrect, refer to Module Replacement procedure."
- 6) **SYMPTOM:** Feature (Drop Targets, etc.) does not score.
ACTION: A) With power ON, open front door. Press button (Self-Test switch) five times.
 B) If the game is correct, Match/Ball in Play display would flash '0'. If a number appears on the Player Score displays, see Switch Assembly Identification Table, Page 17 and Figure V.
 C) Carefully lift the playfield. Locate the switch assembly identified from the number. Visually inspect the switch assembly. If the contacts are 'stuck', regap them to 1/16". See section under ADJUSTMENTS. Repeat A & B. If the game is correct, it is now ready to play.* If game is not correct, turn the power OFF.
 D) Replace MPU module A4. See CAUTION NOTE 1, C.
 E) Repeat A & B. If the game is correct, it is now ready to play.* If the game is not correct, refer to Module Replacement Procedure. (See Parts List).
- 7) **SYMPTOM:** Game blows fuse(s) repeatedly.
ACTION: See Module Replacement Procedure. F.O. 560

*Turn power On-Off switch OFF and then ON.

GAME #1161-E HARLEM GLOBETROTTERS (figure V)

SOLENOID IDENTIFICATION TABLE


Self-Test#	SOLENOID IDENTIFICATION	Self-Test#	SOLENOID IDENTIFICATION
01	OUTHOLE KICKER	08	RIGHT THUMPER BUMPER
02	KNOCKER	09	BOTTOM THUMPER BUMPER
03	GLOBE SAUCER	10	DROP TARGET RESET
04	TARGET SAUCER	11	COIN LOCKOUT DOOR
05	RIGHT SLINGSHOT	12	K1 RELAY (flipper enable)
06	LEFT SLINGSHOT	13	RIGHT GATE
07	LEFT THUMPER BUMPER		

SWITCH ASSEMBLY SELF-TEST DISPLAY NUMBERS

Self-Test #	SWITCH DESCRIPTION	Self-Test #	SWITCH DESCRIPTION
01	DROP TARGET (D) TOP	21	
02	DROP TARGET (C)	22	FLIP/FEED LANE (RT)
03	DROP TARGET (B)	23	RIGHT OUTLANE
04	DROP TARGET (A) BOTTOM	24	GLOBE SAUCER
05		25	CENTER RIGHT SPINNER
06	CREDIT BUTTON	26	TARGET "1" (BOTTOM)
07	TILT (3)	27	TARGET "2"
08	OUTHOLE	28	TARGET "3"
09	COIN III (RIGHT)	29	TARGET "4"
10	COIN I (LEFT)	30	TARGET "5" (TOP)
11	COIN II (MIDDLE)	31	LEFT OUTLANE
12		32	TARGET SAUCER
13		33	CENTER LEFT SPINNER
14		34	300 PT. REBOUND (2)
15		35	DUNK SHOT TARGET
16	SLAM (2)	36	RIGHT SLINGSHOT
17	LEFT SIDE SPINNER	37	LEFT SLINGSHOT
18		38	BOTTOM THUMPER BUMPER
19		39	RIGHT THUMPER BUMPER
20		40	LEFT THUMPER BUMPER

NOTE: SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

#1161-E
HARLEM GLOBETROTTERS

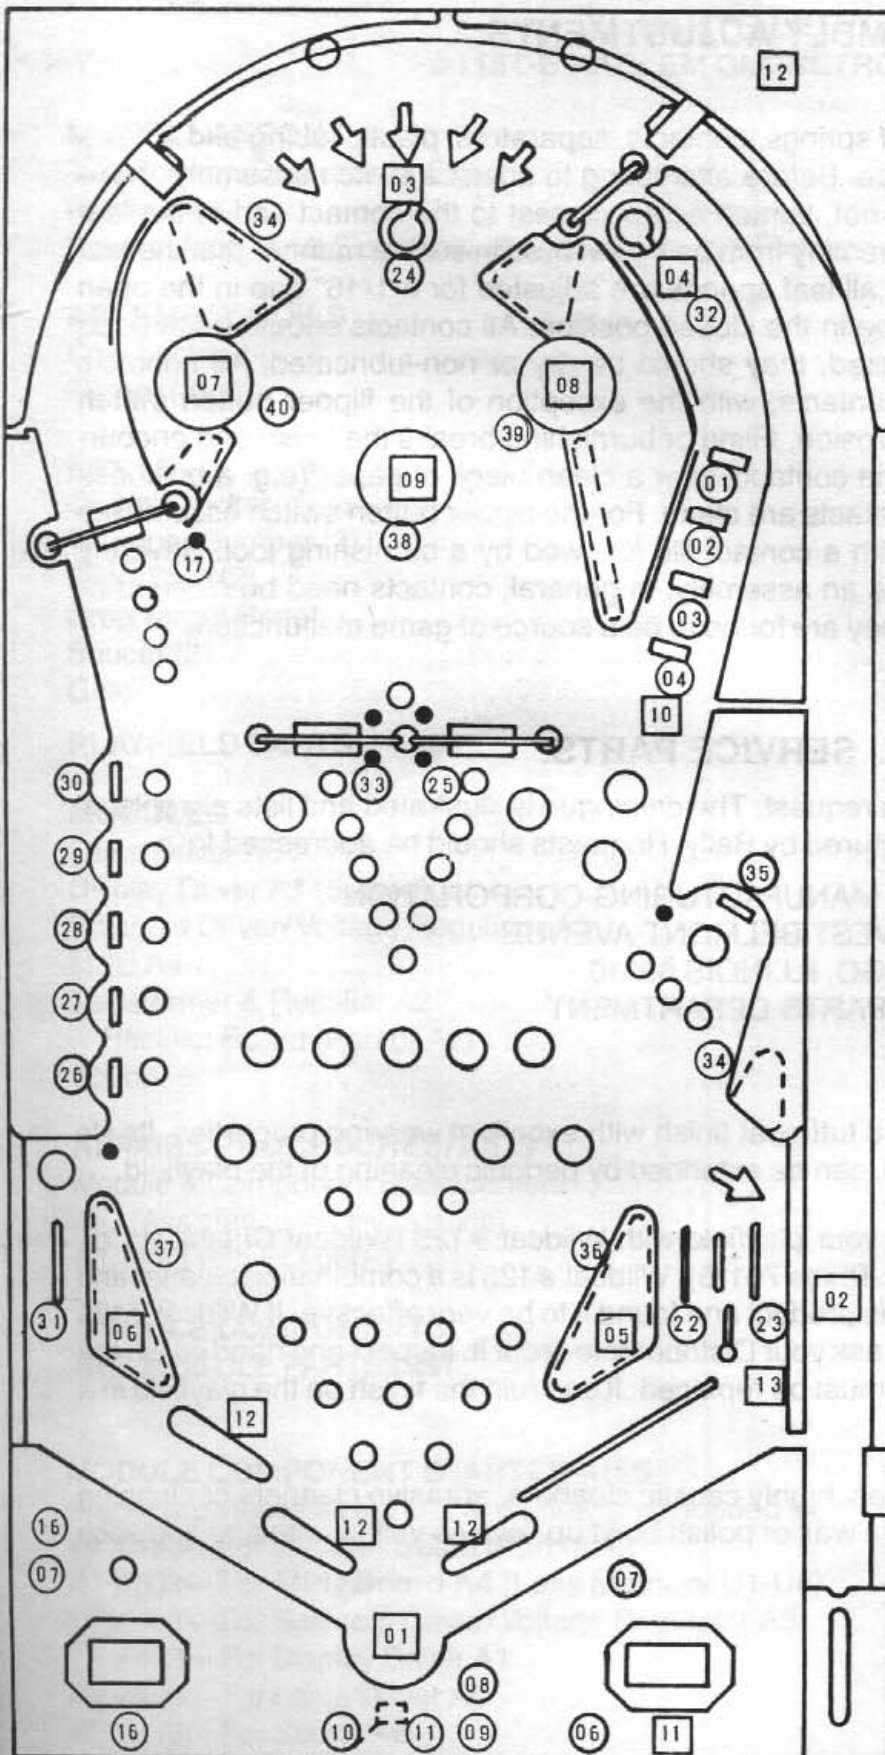

○ INDICATES SWITCH ASSEMBLY IDENTIFICATION NUMBERS.

NOTE: CABINET: 07, 16

DOOR: 06, 09,

10, 11, 16

□ INDICATES SOLENOID IDENTIFICATION NUMBERS.

NOTE: DOOR: 11

BACKBOX: 12

CABINET: 02

FIGURE V

ASSEMBLY ADJUSTMENTS:

GENERAL:

All switch assemblies consist of leaf springs, contacts, separators, plastic tubing and screws to hold them to the mounting surface. Before attempting to adjust a switch assembly, make sure that these screws are tight. If not, tighten screw closest to the contact end of the leaf spring first. This will prevent the assembly from being secured in such a manner that the leaf springs tend to fan out. In general, all leaf springs are adjusted for a 1/16" gap in the open position and .010" overtravel or wipe in the closed position. All contacts should be in good condition. Unless otherwise instructed, they should be dry or non-lubricated. All contacts should be free of dust and dirt. Contacts, with the exception of the flipper button switch assemblies, are plated to resist corrosion. Filing or burnishing breaks the finish and encourages corrosion. Clean by closing the contacts over a clean piece of paper (e.g. a business card) and wiping gently until the contacts are clean. For the flipper button switch assemblies **ONLY**: Tarnish can be removed with a contact file followed by a burnishing tool. Severely pitted contacts must be replaced as an assembly. In general, contacts need be cleaned or replaced and adjusted only when they are found to be a source of game malfunction.

X. SERVICE PARTS:

A parts catalogue is available upon request. The catalogue is illustrated and lists all replacement parts for each game manufactured by Bally. Requests should be addressed to:

BALLY MANUFACTURING CORPORATION
2640 WEST BELMONT AVENUE
CHICAGO, ILLINOIS 60618
ATTN: PARTS DEPARTMENT

SERVICE HINTS:

The Bally playfield has an improved tuff-coat finish with excellent wearing properties. Its life expectancy, as well as play appeal, can be extended by periodic cleaning of the playfield.

DO: Bally recommends you clean your playfield with Wildcat #125 (Wildcat Chemical Co., 1333 W. Seminary Drive, Ft. Worth, Texas 76115). Wildcat #125 is a combination cleaner and polish. Bally has tried and tested this product and found it to be very effective. If Wildcat #125 is not available, Bally suggests you ask your Distributor to order it. Inspect and hand polish the ball in a clean cloth. A chipped ball must be replaced. It can ruin the finish on the playfield in a short period of time.

DON'T: Use water in large quantities, highly caustic cleaners, abrasive cleaners or cleaning pads on the playfield. Do not allow a wax or polish build up. Waxes yellow with age and spoil play appeal.

XI. PARTS LIST
#1161-E HARLEM GLOBETROTTERS

MISCELLANEOUS	PART NUMBER
Transformer (Domestic or Export)	E-122-125
Bulbs, #44	E-125-22
Fuse, 1 Amp. 3 A6 Slow Blow (Playfield Solenoid Protection)	E-133-44

ASSEMBLY COILS

Coin Lockout	FO-36-700
Flipper (3)	AQ-25-500/ 34-4500
Knocker	AR-26-1200
Outhole Kicker	AN-26-1200
Thumper-Bumper (3)	AN-26-1200
Sling-Shot (2)	AN-26-1200
Drop Target Reset	NO-26-1900
Saucer (2)	AO-27-1300
Gate	GA-34-4000

PLAYFIELD PARTS

See Figure II

MODULES

Lamp Driver A5	AS-2518-23
Display Driver A1 (5 used)	AS-2518-21
Solenoid Driver/Voltage Regulator A3	AS-2518-22
MPU A4	AS-2962-10
Transformer & Rectifier A2	AS-2877-1
Rectifier Board (Part of A2)	AS-2518-18
Sound	AS-2888-4

REPAIRS PROCEDURES/AIDS

Module & Component Replacement	F.O.560-1
AID (Assistance in Diagnostics)	
Kit, used with F.O.560-1	KIT #485-1


MODULE COMPONENTS
SEE MODULE PARTS LIST

MODULE COMPONENT STARTER KITS

(Each Kit contains an assortment of the most needed electronic parts for use in Module repair.)

- Kit #490—For Rectifier Board (Part of A2)
- Kit #503—For MPU Board A4 (Less Memory U1-U6)
- Kit #492—For Solenoid Driver/Voltage Regulator A3
- Kit #493—For Display Driver A1
- Kit #494—For Lamp Driver A5
- Kit #518—For Sound A8

AS-2518-35 MPU MODULE

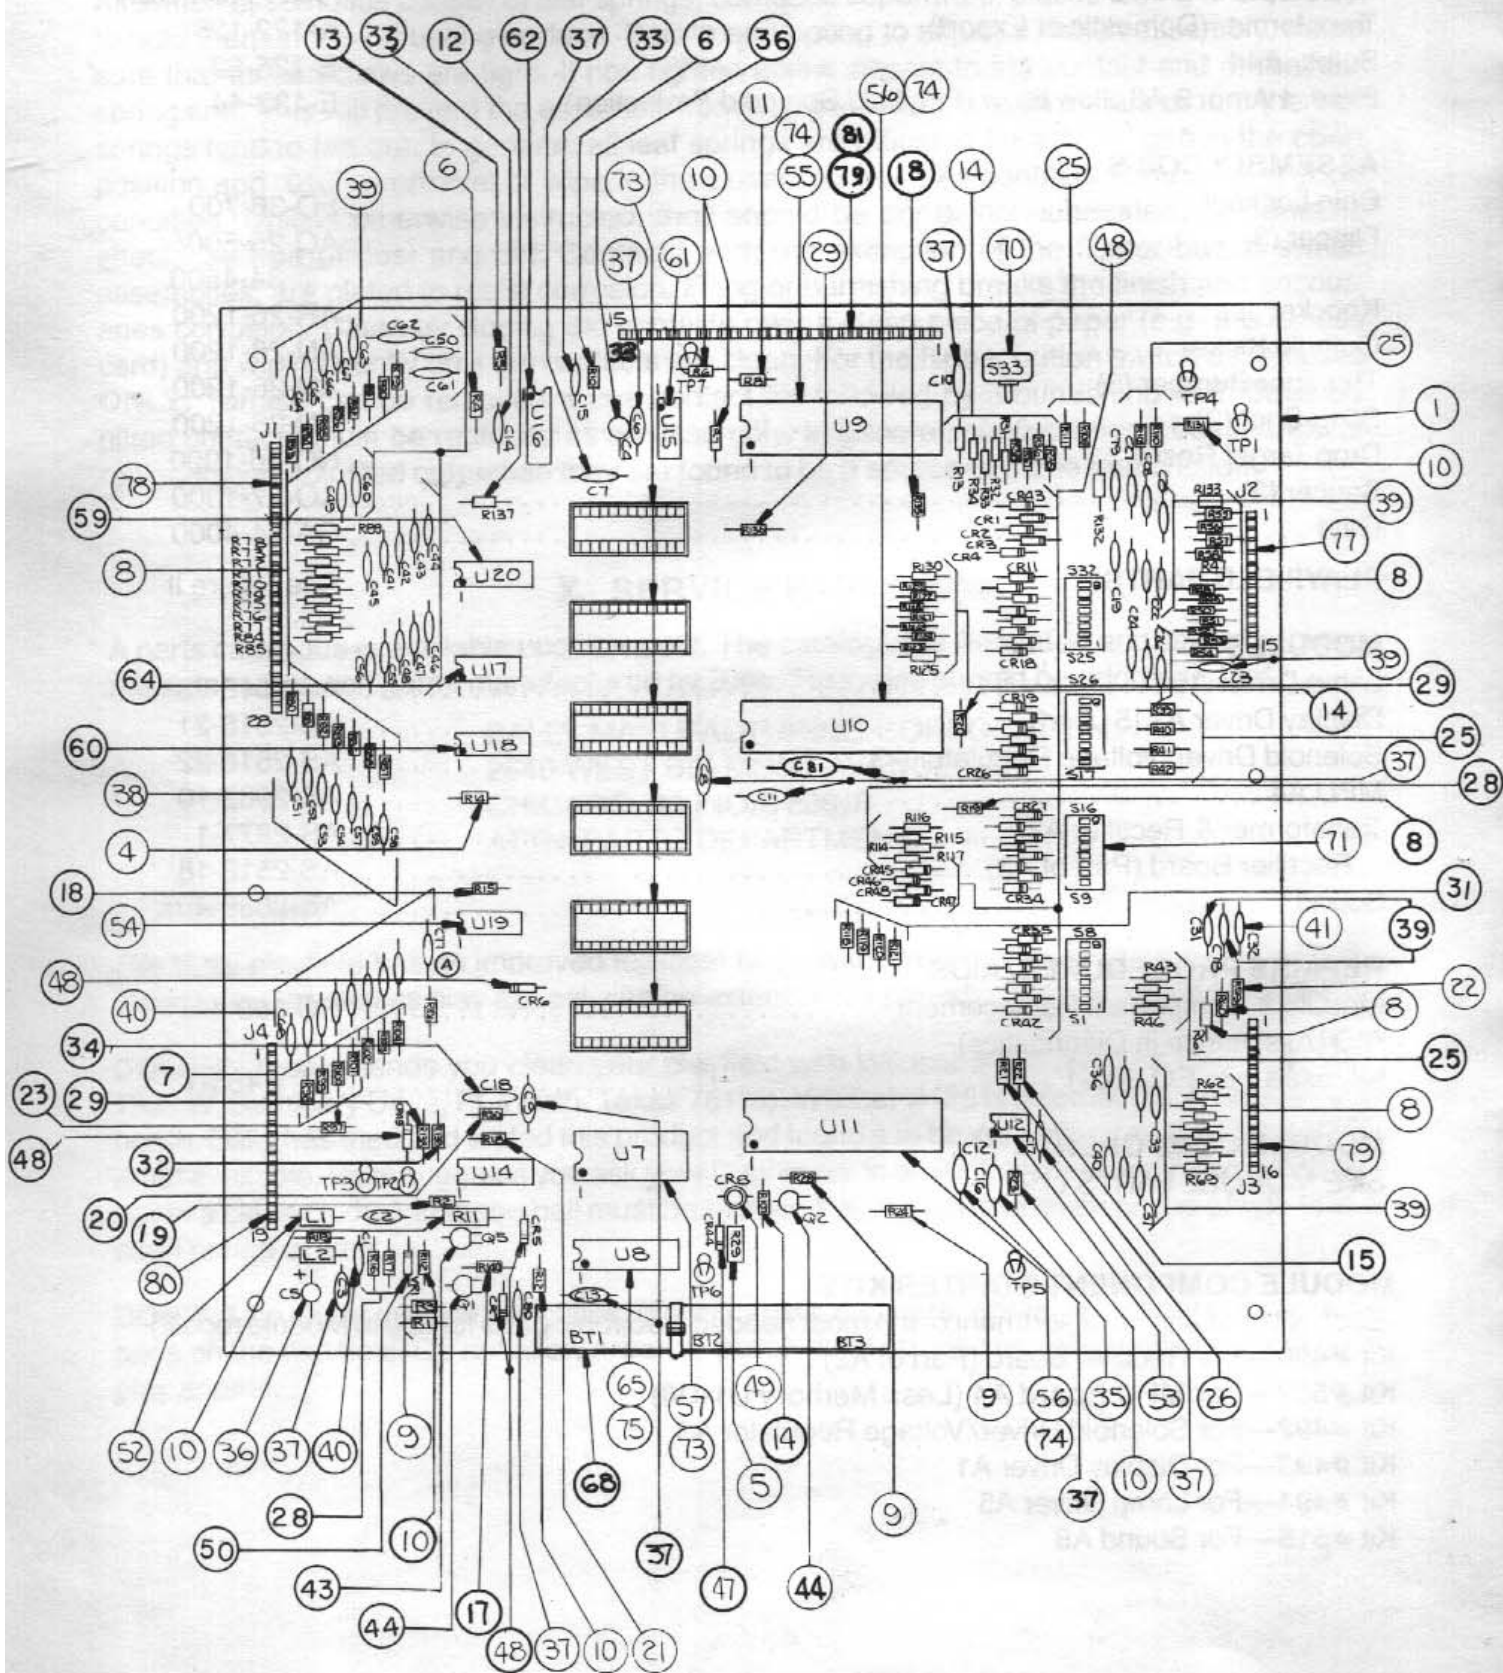

A4: MPU MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A4 (see note 1)	AS-2962-10	MPU Module Complete.
2	A4 (see note 2)	AS-2518-35	Harlem Globe Trotters MPU Module less Program Memory, U1-6 incl.
3-32	See Schematic		Resistors, See schematic for value
33	C14, C15	E-00586-0067	Capacitor, 470 PFD, 1kv
34	C18	E-00586-0088	Capacitor, .05 MFD, 16V
35	C16	E-00586-0081	Capacitor, .1 MFD, 100V
36	C4, C5	E-00586-0073	Capacitor, 4.5 MFD, 25V
37	C3, C6-C13, C17, C81	E-00586-0085	Capacitor, .01 MFD, 25V
38	C79, C41-C67	E-00586-0083	Capacitor, 470 PFD, 50V
39	C19-C31, C78, C33-C40	E-00586-0082	Capacitor, 390 PFD, 50V
40	C1, C2, C68-C77	E-00586-0084	Capacitor, 820 PFD, 50V
41	C32	E-00586-0077	Capacitor, 3000 PF, 1kv
43	Q5	E-00585-0023	Transistor PNP (MPS-3702)
44	Q1, Q2	E-00585-0031	Transistor (2N3904)
47	CR44	E-00587-0006	Diode (IN4004)
48	CR1-CR7, CR11-CR43, CR45-CR49	E-00587-0014	Diode (IN4148)
49	CR8	E-00679	LED (Green)
50	VR1	E-00598-0008	Diode Zener (8.2V, IN9598)
52	L1, L2	E-00604-0003	Inductor, 22 Micro Hy.
53	U12	E-00620-0004	Timer (555)
54	U19	E-00620-0005	Quad 2 Input (4011)
55	U9	E-00620-0028	MPU I.C. (6800)
56	U10, U11	E-00620-0029	PIA I.C. (6820)
57	U7	E-00620-0030	RAM I.C. (6810)
59	U20	E-00620-0032	HEX Buffer I.C. (14502B)
60	U14, U18	E-00620-0033	HEX Inverter (4049B)
61	U15	E-00620-0034	Quad Memory Drive (MC3459L)
62	U16	E-00620-0035	Dual Monostable (9602)
64	U17	E-00620-0041	Quad 2 Inputs (74L00N)
65	U8	E-00620-0042	RAM (C MOS, P5101L-3)
68	BT1, BT2, BT3	E-00628-0003	Battery
70	S33	E-00658-0001	Push Button Switch
71	S1-S8, S9-S16, S17-S24, S25-S32	E-00677	DIP Switch
73		E-00712	24 Pin Socket
74		E-00712-0001	40 Pin Socket
75		E-00712-0003	22 Pin Socket
77	J2	E-00715	15 Pin Wafer Connector
78	J1	E-00715-0004	28 Pin Wafer Connector
79	J3, J5	E-00715-0017	16 Pin Wafer Connector
80	J4	E-00715-0018	19 Pin Wafer Connector
81	J5	E-00715-0024	17 Pin Wafer Connector


NOTE 1:

When ordering, fill in dash number. For example, AS-2962-0: LOST WORLD, AS-2962-2: SIX MILLION DOLLAR MAN, AS-2962-3: PLAYBOY, AS-2962-4: VOLTAN, AS-2962-5: SUPERSONIC, AS-2962-6: STAR TREK, AS-2962-7: KISS, AS-2962-8: PARAGON, AS-2962-9: GROUND SHAKER, AS-2962-10 HARLEM GLOBE-TROTTERS

NOTE 2:

Order replacement memory chips U1-U6, specifying game, socket and part number stamped on chip.


AS-2518-23 LAMP DRIVER MODULE

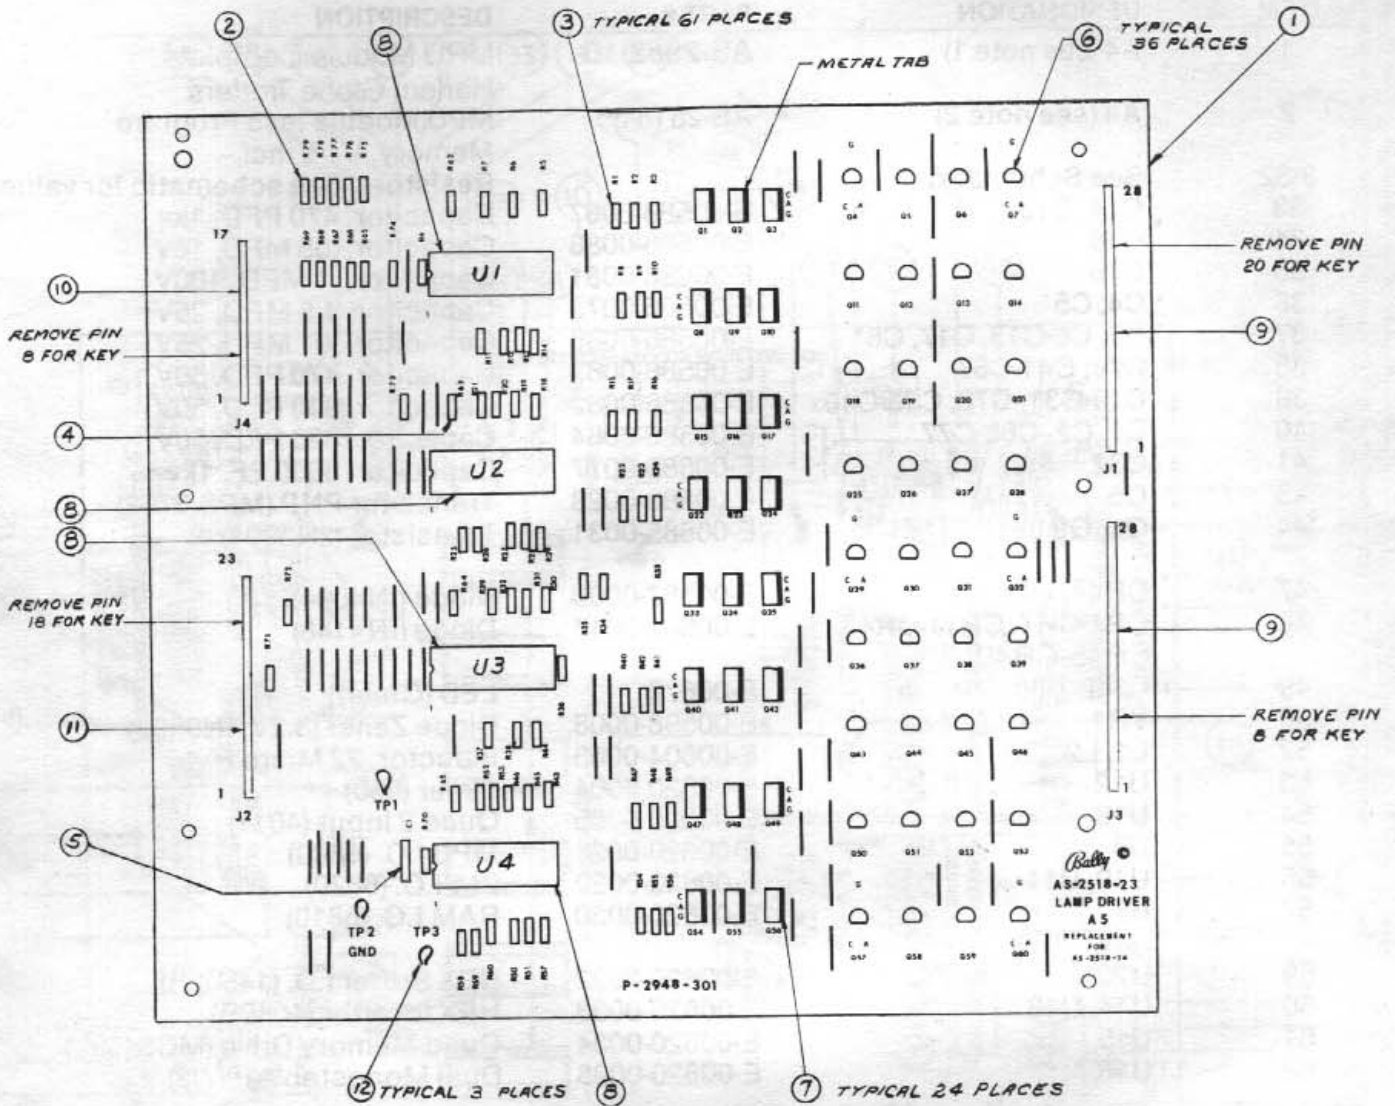

A5: LAMP DRIVER MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A5	AS-2518-23	Lamp Driver Module, Complete
2	R71-R79	E-00105-242	Resistor, 20k Ω , 5%, 1/4 W
3	R1-R60, R70	E-00105-0237	Resistor, 2k Ω , 5%, 1/4 W
4	R61-R69	E-00105-0256	Resistor, 2.2M Ω , 1/4 W
5	C1	E-00586-0065	Capacitor, .01 MFD, 500V
6	Q4-Q7, Q11-Q14, Q18-Q21, Q25-Q32, Q36-Q39, Q43-Q46, Q50-Q53, Q57-Q60	E-00585-0014	SCR, 2N5060
7	Q1-Q3, Q8-Q10, Q15-Q17, Q22-Q24, Q33-Q35, Q40-Q42, Q47-Q49, Q54-Q56	E-00585-0029	SCR, MCR106-1
8	U1-U4	E-00620-0037	I.C., Decoder, 14514B
9	J1, J3	E-00715-0004	28 Pin Wafer Connector
10	J4	E-00715-0024	17 Pin Wafer Connector
11	J2	E-00715-0014	23 Pin Wafer Connector
12	TP1, TP2, TP3	P-05399	Test Clip

AS-2518-21 DISPLAY DRIVER MODULE

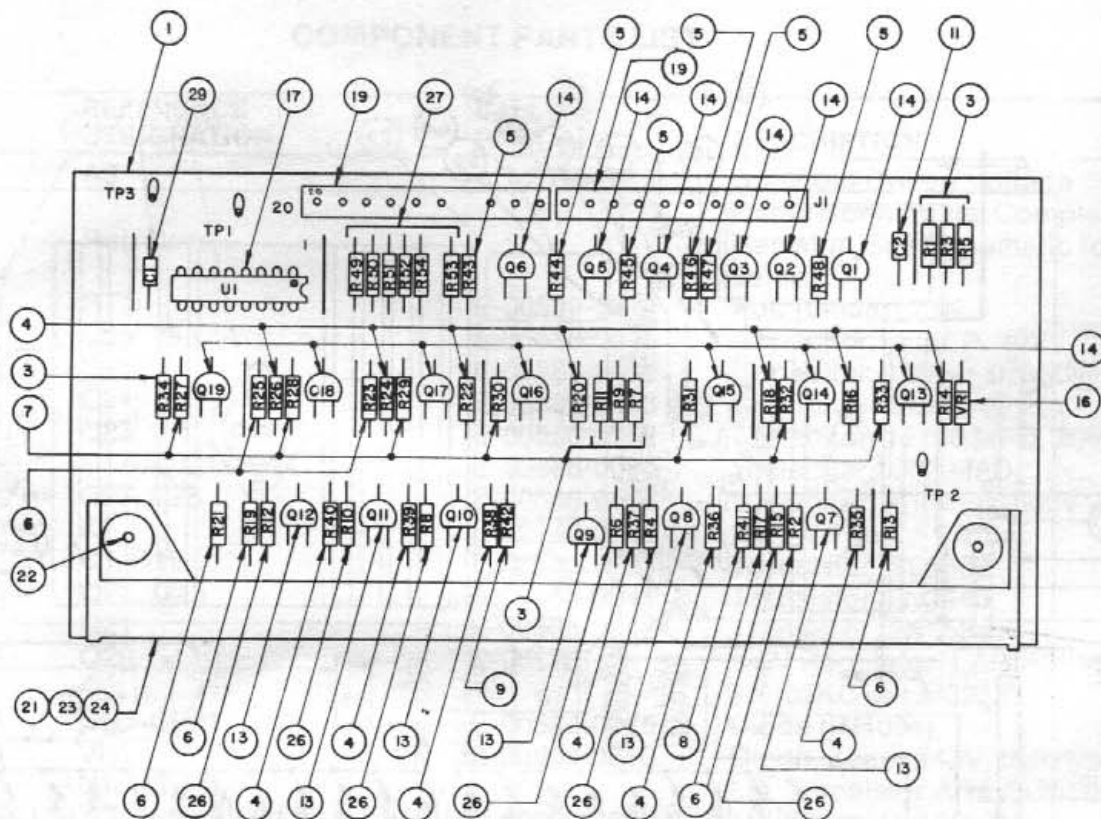


A1: DISPLAY DRIVER MODULE COMPONENT PARTS LIST

ITEM	QTY.	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	1		P-2948-296	P.C. Board, M-645-392
3	7	R1, R3, R5, R7, R9, R11, R34	E-105-226	Resistor, 100K Ω
4	13	R14, R16, R18, R20, R22, R24, R26, R35, R36, R37, R38, R39, R40	E-105-227	Resistor, 300K Ω
5	6	R43, R44, R45, R46, R47, R48	E-105-228	Resistor, 9.1K Ω
6	7	R13, R15, R17, R19, R21, R23, R25	E-105-229	Resistor, 1.5K Ω
7	7	R27, R28, R29, R30, R31, R32, R33	E-105-230	Resistor, 1K Ω
8	1	R41	E-105-231	Resistor, 39K Ω
9	1	R42	E-105-271	Resistor, 240K Ω
10				
11	1	C2	E-586-65	Capacitor, .01 MFD, 500V
13	6	Q7, Q8, Q9, Q10, Q11, Q12	E-585-32	Transistor (2N5401)
14	13	Q1, Q2, Q3, Q4, Q5, Q6, Q13, Q14, Q15, Q16, Q17, Q18, Q19	E-585-33	Transistor (MPS-A42)
16	1	VR1	E-598-7	Zener Diode, 110V
17	1	U1	E-620-38	I.C. Decoder
18				
19	2	J1	E-715-34	10 Pin Wafer Pin Connector
21	1	DS1	E-680	Digital Display Panel
22	2		M-1836	Hi-Lo Screw, W/H
23	1		P-2399	Display Mounting (Top)
24	1		P-2399-1	Display Mounting (Bottom)
26	6	R2, R4, R6, R8, R10, R12	E-105-287	Resistor, 2.2K Ω
27	6	R49, R50, R51, R52, R53, R54	E-105-242	Resistor, 20K Ω
28	As Req'd			Wire Jumper
29	1	C1	E-586-85	Capacitor, .01 MFD, 25V

NOTE: INTERCHANGEABLE WITH AS-2518-15

AS-2518-22 SOLENOID DRIVER/VOLTAGE REGULATOR MODULE

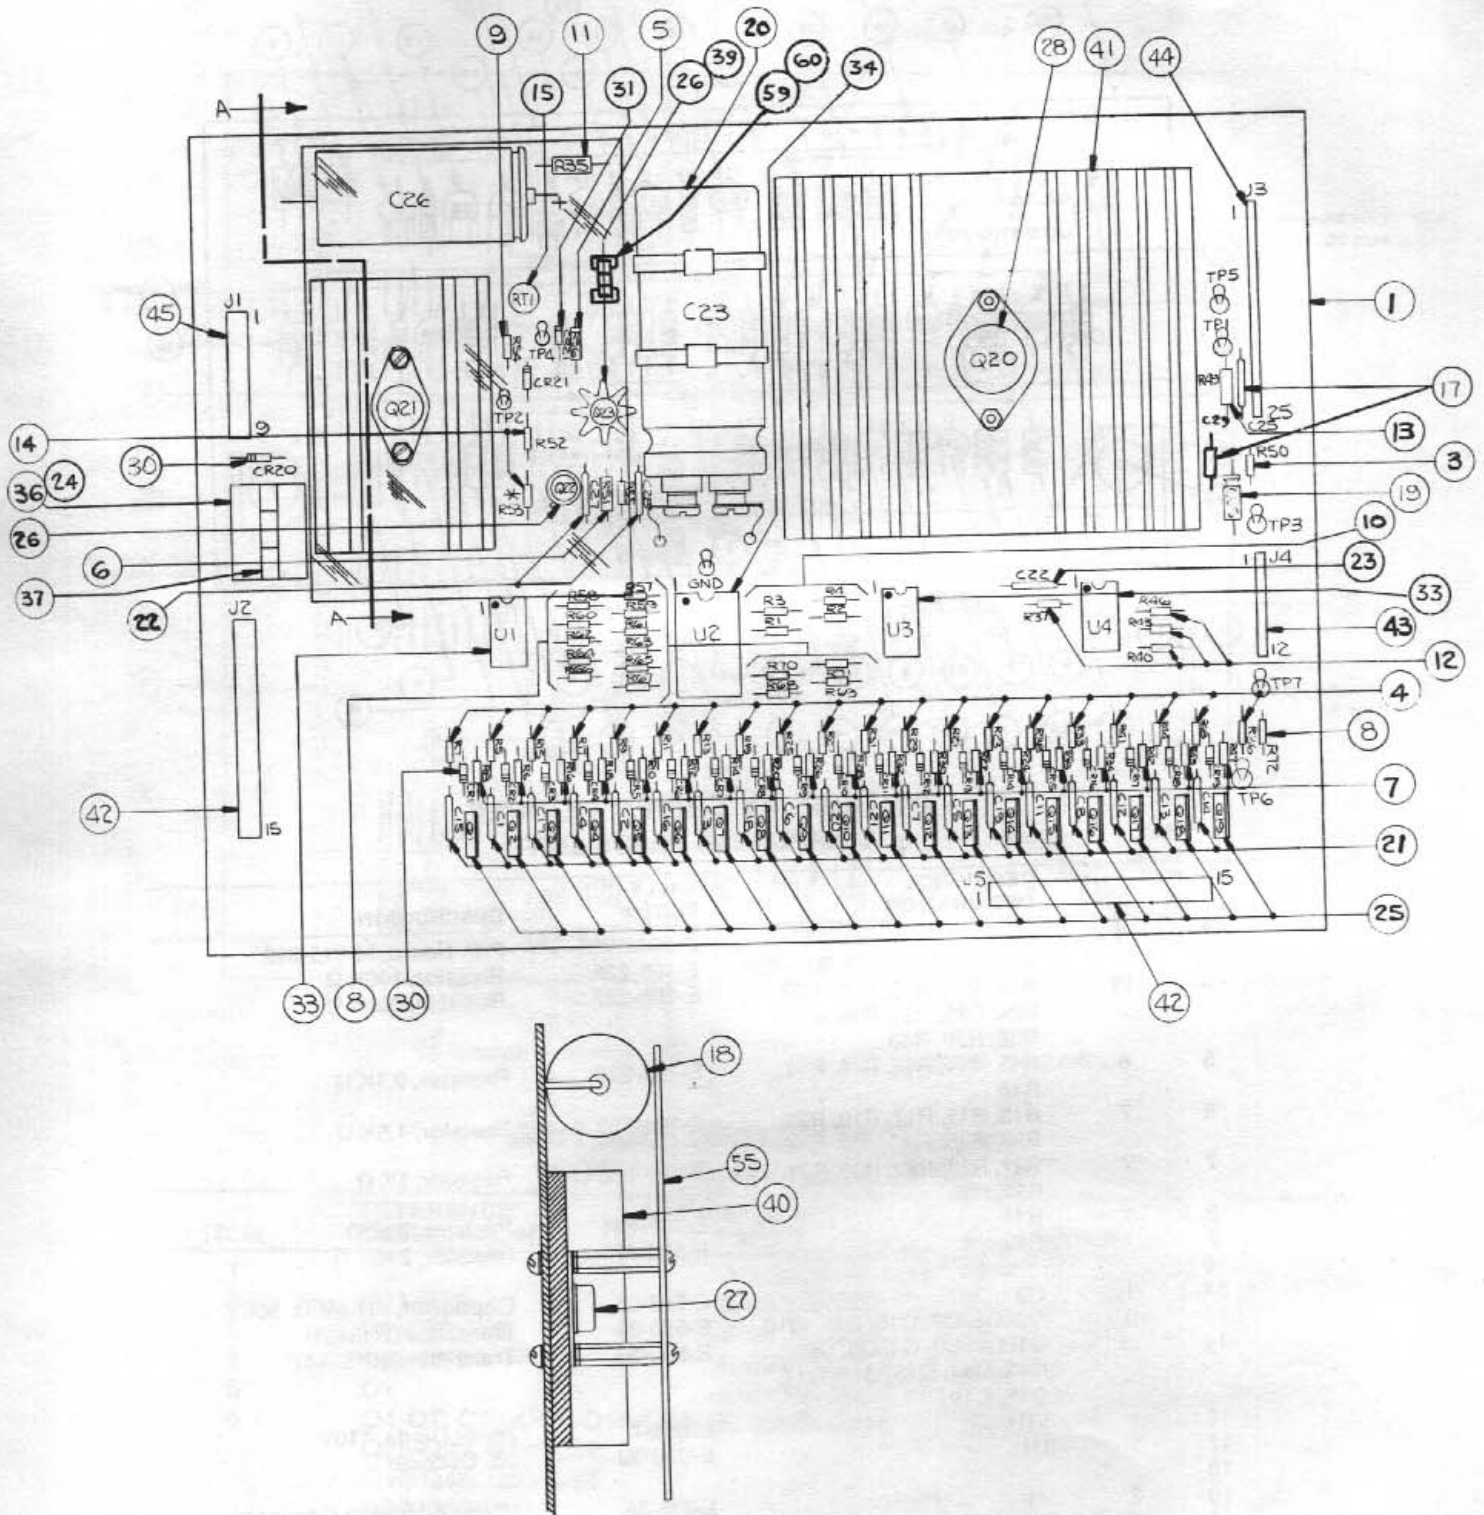


NOTE: INTERCHANGEABLE WITH AS-2518-16

A3: SOLENOID DRIVER/VOLTAGE REGULATOR MODULE

COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A3	AS-2518-22	Solenoid Driver/Voltage Regulator Module, Complete
3-14	Resistors		Resistor, See Schematic for value.
15	RT1	E-00599-0014	Pot. (Linear) 25K
17	C25, 29	E-00586-0014	Capacitor, .1 MFD, 20V
18	C26	E-00586-0059	Capacitor, 160 MFD, 350V
19	C24	E-00586-0063	Capacitor, 2 MFD @ 25V
20	C23	E-00586-0062	Capacitor, 11700 MFD, 20V
21	C1-C8, C11-C21	E-00586-0064	Capacitor, .002 MFD, 1kv
22	C27, C28	E-00586-0065	Capacitor, .01 MFD, 500V
24	K1	E-00146-0795	Relay, Printed Circuit
25	Q1-Q19	E-00585-0034	Transistor, SE9302
26	Q22, Q23	E-00585-0041	Transistor, 2N3440
27	Q21	E-00585-0042	Transistor, 2N3584
28	Q20	E-00710	+5V Regulator, LAS1405 or 78H05KC or LM323K
30	CR1-CR21	E-00587-0015	Diode (IN4004)
31	VR1	E-00598-0010	Diode, Zener 140V, IN5275A
33	U1, U3, U4	E-00681	I.C. Transistor Array, CA3081
34	U2	E-00620-0039	I.C. Binary to 1/16 Decoder, 74L154
36		E-00592-0002*	Relay Socket
37		M-1839*	Relay Holder
39		E-00682	Heat Sink, TO5
40		E-00682-0001	Heat Sink, TO66
41		E-00682-0002	Heat Sink, TO3 Case
42		E-00715-0039	15 Pin Wafer Connector
43		E-00715-0016	12 Pin Wafer Connector
44		E-00715-0020	25 Pin Wafer Connector
45		E-00715-0033	9 Pin Wafer Connector
55		M-1838	Shield-Plexiglass
59		E-00148-0021	Fuse Clips
60	F1	E-00133-0029	Fuse 8 AG-3/16 Amp.
23	C22	E-00586-0085	Capacitor, .01 MFD, 25V


*USED WITH ITEM 24, E-00146-0791, PLUG IN RELAY ONLY

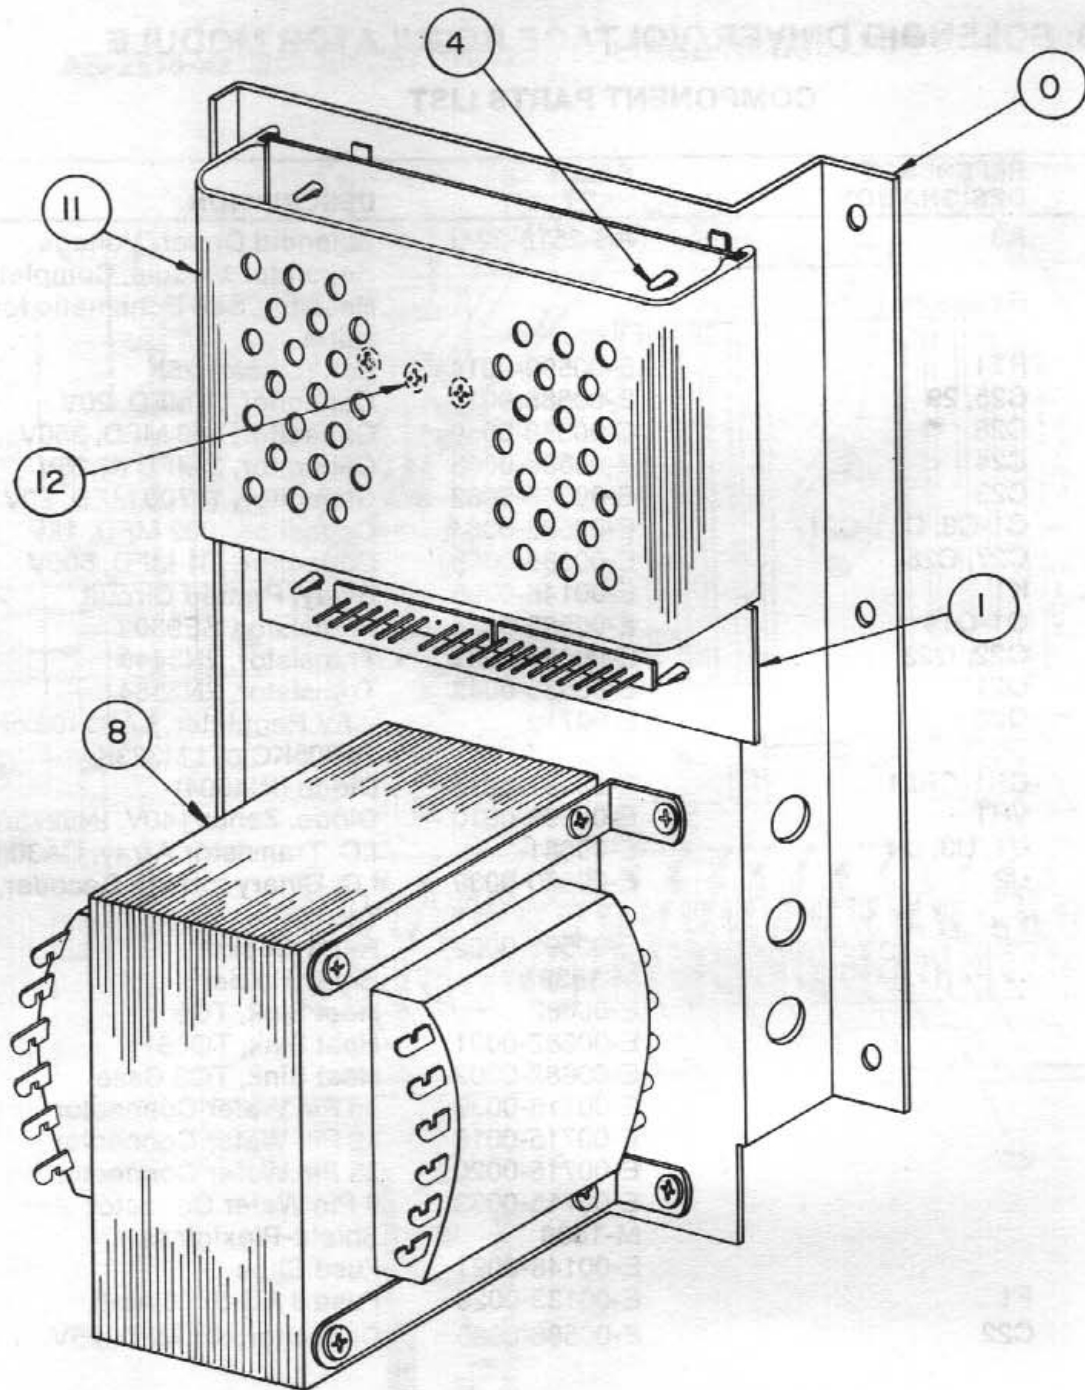

**A2: POWER TRANSFORMER MODULE
COMPONENT PARTS LIST**

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
0	A2	AS-2877-1	Power Transformer Module, Complete
1		AS-2518-18	Rectifier Board Assembly
4		M-1829-2a	Circuit Board Support (4 Req'd.)
8		E-00122-0125c	Transformer 120/240V, 50/60 Hz
11		P-2692b	P.C.B Cover
12		M-1834	Heat Sink Compound

AS-2518-18 RECTIFIER BOARD ASSEMBLY

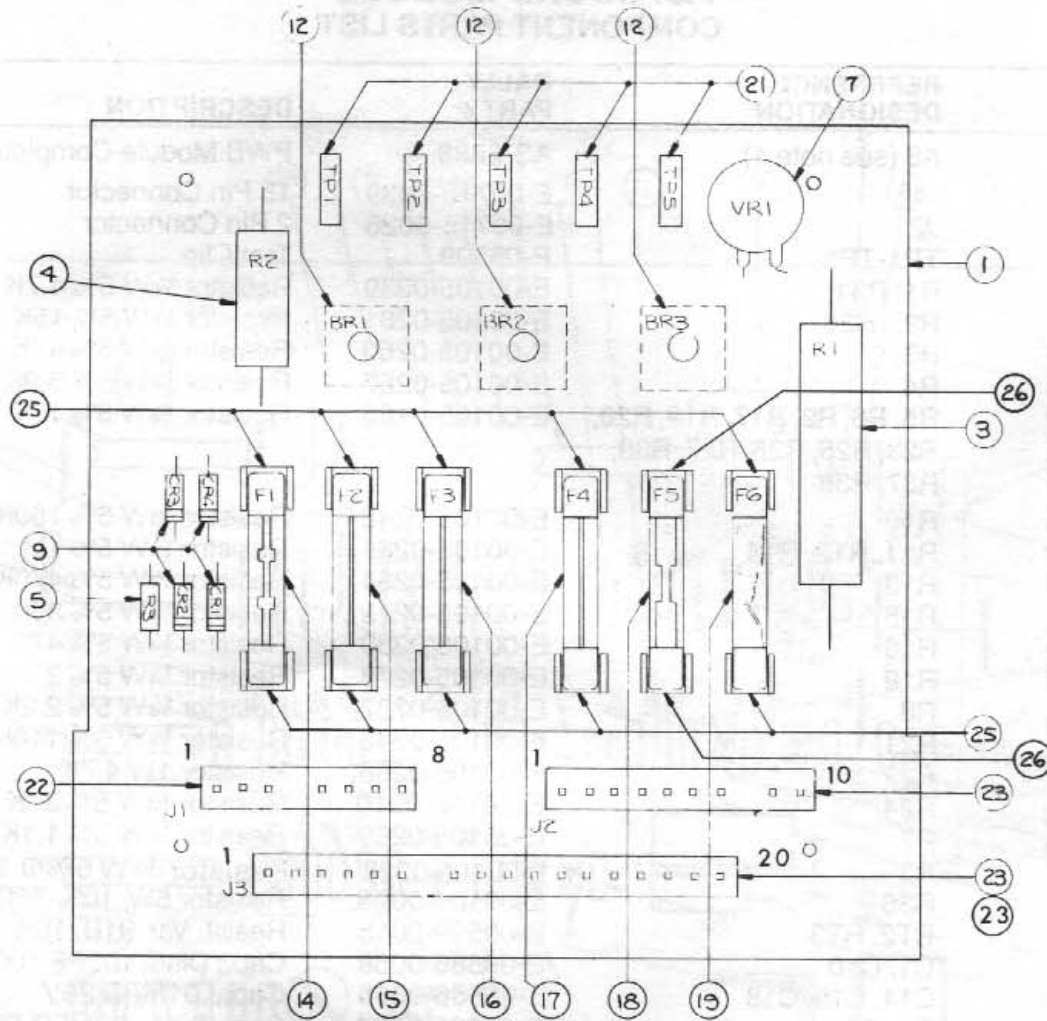

RECTIFIER BOARD ASSEMBLY (Part of) A2: POWER TRANSFORMER MODULE COMPONENT PARTS LIST

ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	P/O A2	AS-2518-18	Rectifier Board Assembly, Complete
3	R1	E-00104-0092	Resistor, 10%, 600 Ohm, 10W
4	R2	E-00104-0091	Resistor, 25 Ohm, 5W
5	R3	E-00105-0226	Resistor, 5%, 100K Ohm, 1/4W
7	VR1	E-00623	Varistor
9	CR1, CR2, CR3, CR4	E-00587-0006	Diode (IN4004)
12	BR1, BR2, BR3	E-00602-0003	Bridge Rectifier (VJ248 VARO)
14	F1	E-00133-0010	Fuse, 10A, 32V, 3AG
15	F2	E-00133-0028	Fuse, 3/4A, 250V, 3AG,
16	F3	E-00133-0004	Fuse, 4A, 32V, 3AG
17	F4	E-00133-0005	Fuse, 5A, 32V, 3AG
18	F5	E-00133-0027	Fuse, 20A, 32V, 3AG
19	F6	E-00133-0024	Fuse, 3A, 3AG, S.B.
21		E-00684	Test Point
22	J1,	E-00715-0032	8 Pin Wafer Connector
23	J2, J3	E-00715-0034	10 Pin Wafer Connector
25		E-00148-0021	Fuse Clips
26		E-00148-0022	Fuse Clips

A8: SOUND MODULE COMPONENT PARTS LIST


ITEM	REFERENCE DESIGNATION	BALLY PART #	DESCRIPTION
1	A8 (see note 1)	AS-2888-4	PWB Module Complete—
2	J1	E-00715-0039	15 Pin Connector
3	J2	E-00715-0026	2 Pin Connector
4	TP1-TP5	P-05399	Test Clip
5	R1, R31	E-00105-0239	Resistor ¼W 5% 4.7K
6	R2, *R28	E-00105-0281	Resistor ¼W 5% 15K
7	R3	E-00105-0263	Resistor ¼W 5% 47K
8	R4	E-00105-0257	Resistor ¼W 5% 3.9K
9	R5, R6, R9, R17, R19, R20, R23, R25, R26, R27, R30, R37, R38	E-00105-0185	Resistor ¼W 5% 10K
10	R10	E-00105-0248	Resistor ¼W 5% 150K
11	R11, R12, R14	E-00105-0285	Resistor ¼W 5% 1M
12	R13	E-00105-0284	Resistor ¼W 5% 470K
13	R15	E-00105-0279	Resistor ¼W 5% 360
14	R16	E-00105-0280	Resistor ¼W 5% 470
15	R18	E-00105-0278	Resistor ¼W 5% 2.7
16	R8	E-00105-0287	Resistor ¼W 5% 2.2K
17	R21	E-00105-0246	Resistor ¼W 5% 110K
18	R22	E-00105-0286	Resistor 1W 4.7K
19	R24	E-00105-0210	Resistor ¼W 5% 27K
20	R7	E-00105-0289	Resistor ¼W 5% 1.1K
21	R35	E-00105-0228	Resistor ¼W 5% 9.1K
22	R36	E-00104-0096	Resistor 5W, 10% 75Ω
23	RT2, RT3	E-00599-0015	Resist. Var. 91B, 10K
24	C1, C10	E-00586-0068	Cap., Disc. 100PF 1000V
25	C14, C15, C18	E-00586-0085	Cap., .01MFD 25V
26	C7, C3	E-00586-0087	Cap., Disc. .02MFD 500V
27	C19, C2, C5, C9, C16, C21, *C22	E-00586-0088	Cap., Disc. .05MFD 16V
28	C4, C12	E-00586-0089	Cap., Disc. .1MFD 25V
29	C8, C11, C23	E-00586-0090	Cap., Elect. 1MFD 25V
30	C6	E-00586-0063	Cap., Elect. 2MFD 25V
31	C13	E-00586-0091	Cap., Elect. 100MFD 25V
32	C17	E-00586-0092	Cap., Elect. 100MFD 100V
33	Q1 (TIP 29)	E-00585-0043	Transistor NPN
34	Q2, Q3 (2N 3904)	E-00585-0031	Transistor NPN
35	CR1, CR2 (1N 4148)	E-00587-0014	Diode
36	CR3 (1N 4004)	E-00587-0015	Diode
37	CR4 (1N 5245)	E-00598-0016	Diode, Zener
38	U1, U8 (MC 14049B)	E-00620-0033	Hex Inverter (I.C.)
39	U4, U5 (MC 14526B)	E-00620-0044	Programmable 4 Bit Counter
40	U2 (MC 14042B)	E-00620-0045	Quad. Latch
41	U7 (555)	E-00620-0004	Timer I.C.
42	U9 (LM 741)	E-00620-0047	Operational Amp.
43	U10 (LM 380N)	E-00620-0048	Audio Amplifier
44	U11 (86 L93)	E-00620-0046	4 Bit Binary
45	C20	E-00586-0064	Cap., Disc. .002
46	A8 (see note 2)	AS-2518-50	PWB Module Less Program Memory U3
47	For Q1	E-00682-0008	Heatsink

NOTE 1: When ordering specify name of game.

NOTE 2: Order replacement memory chip U3 specifying name of game and part no. stamped on chip.

*Removed R28, C22 for AS-2888-4.

AS-2518-50 SOUND MODULE

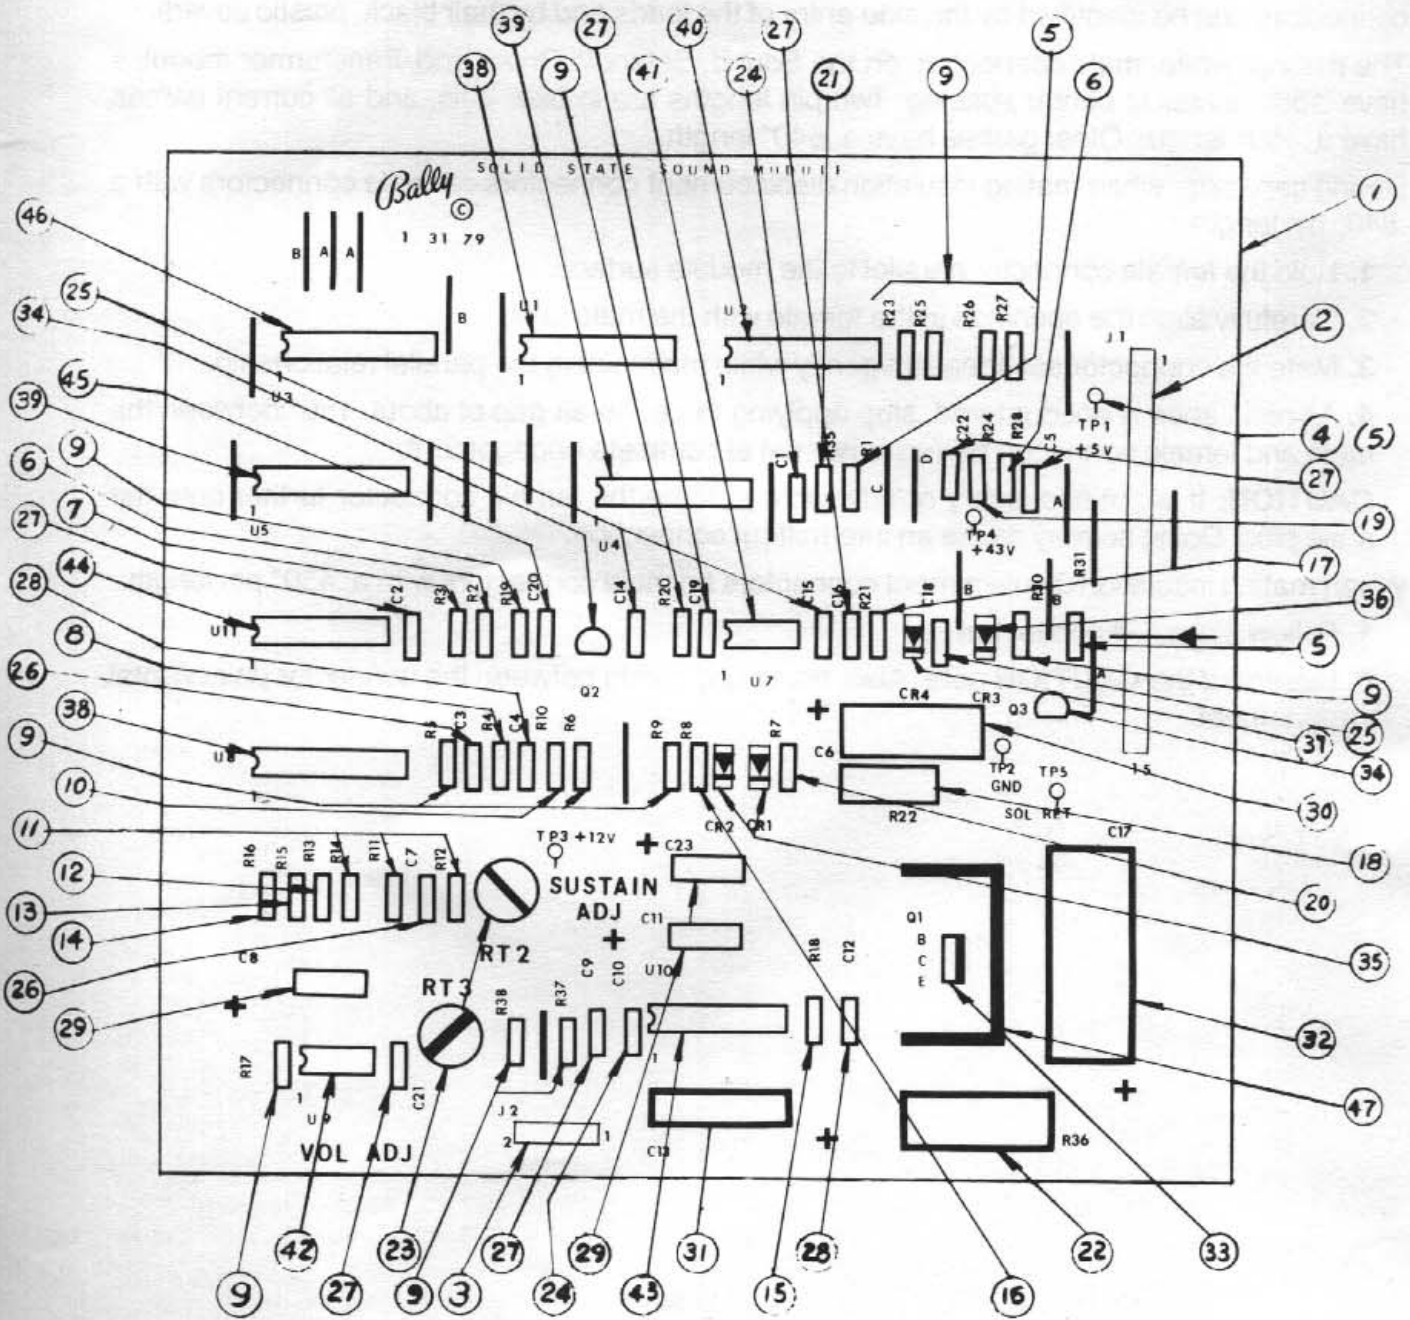

ATTACHMENT II: INSTRUCTION MANUAL

Female insulation displacement connectors are used in the backbox cable harnesses. These connectors can be identified by the side entry of the leads and by their black, plastic covers.

The mating, white, male connectors on the Sound, Solenoid Driver and Transformer modules have .156" center to center spacing. Two pin lengths are in use. This, and all current games have a .450" length. Older games have a .640" length.


During servicing, when mating insulation displacement connectors on male connectors with a .640" pin length:

1. Hold the female connector parallel to the module surface.
2. Carefully align the openings in the female with the male pins.
3. Mate the connector set firmly but gently while maintaining the parallel relationship.
4. As resistance is encountered, stop applying force. An air gap of about .150" between the male and female connector bodies is normal at complete engagement.

CAUTION: It is not necessary or advisable to force the female connector further onto the male pins. Doing so may cause an intermittent connection.

When mating insulation displacement connectors on male connectors with a .450" pin length:

1. Follow steps 1-4 above, but—
2. Disregard the **CAUTION** note. Also, no air gap exists between the connector pair on total engagement.

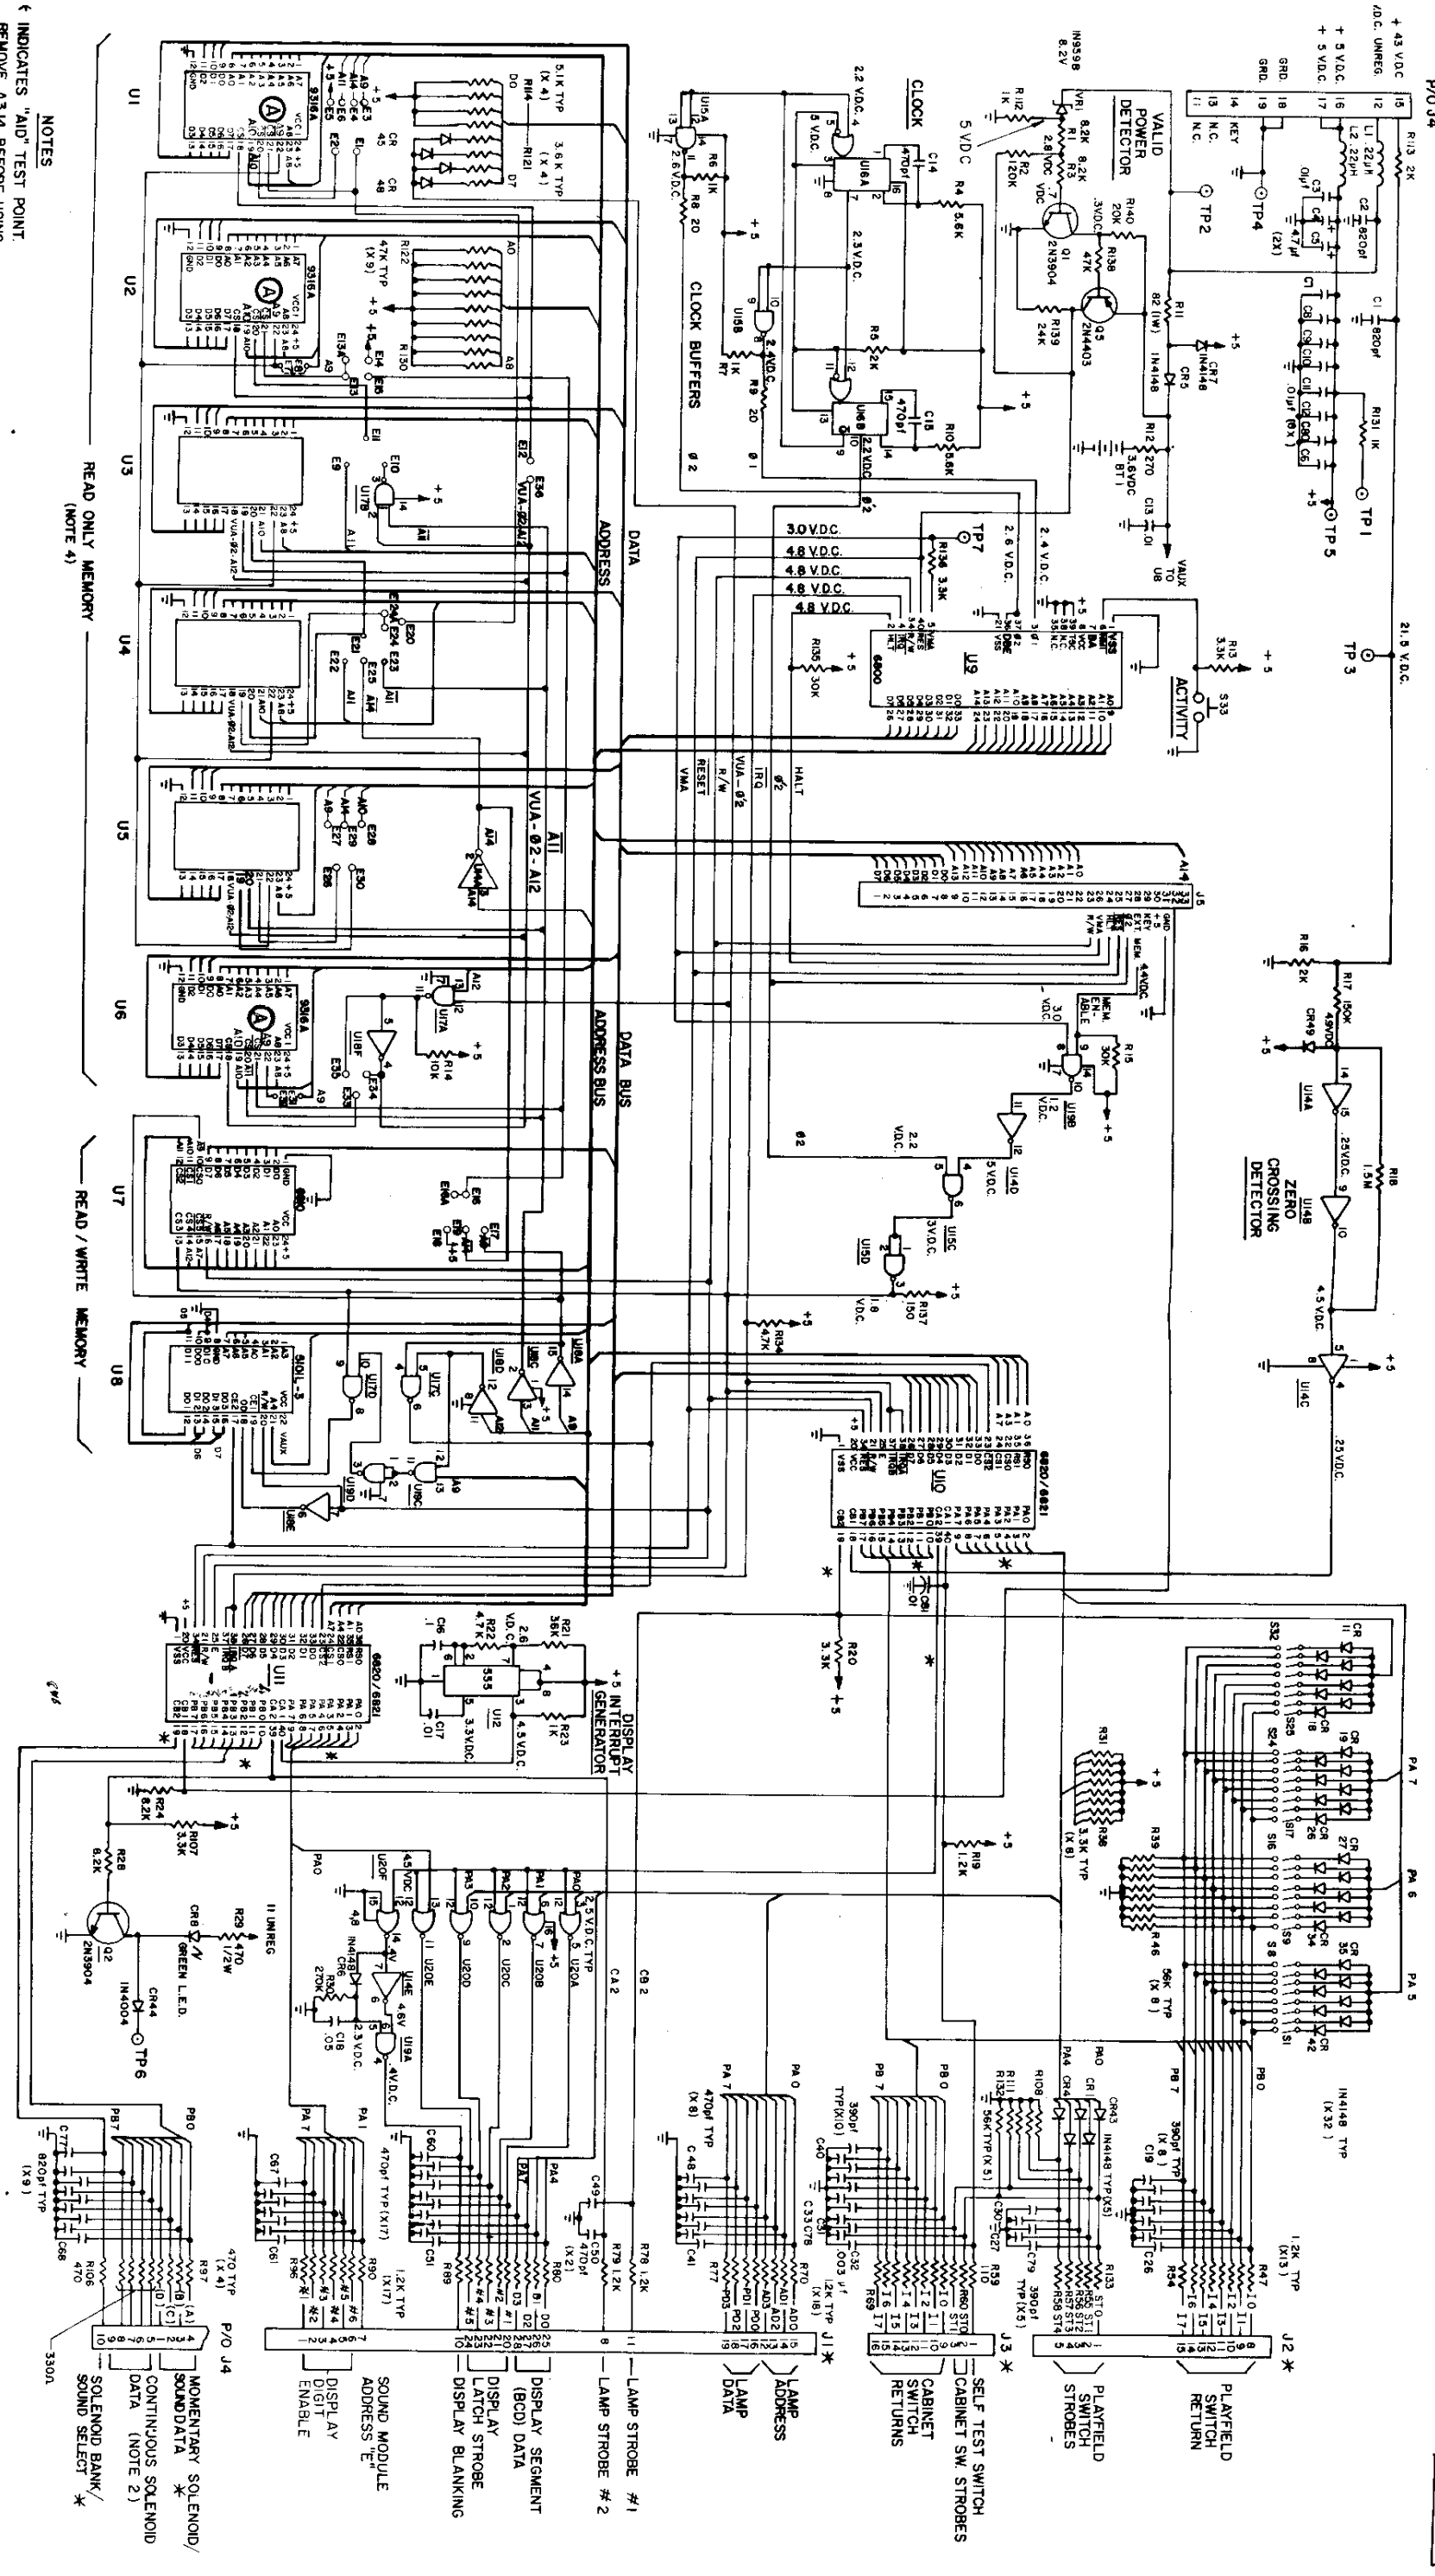

NOTES

- † INDICATES "AID" TEST POINT.
- REMOVE ASJ4 BEFORE USING AS AID TEST POINT
- PREFIX ALL REFERENCE DESIGNATIONS WITH "A4"
- EXACT CHIP COMPLEMENT USED IN SOCKETS U1 THRU U8 CAN VARY FOR DIFFERENT GAMES AND PRODUCTION LOTS.
- JUMPERS FOR DIFFERENT GAMES AVAILABLE FROM BALL FIELD SERVICE DEPARTMENT.

NO.	LET.	CHANGE	DATE	BY	CR.
1	A	A.D.W.S. VCC2 on U1, U2, U6, A.D.W.S. CS	11-78	J.T.	

REWORK ALL SOLDER	DATE	BY
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED ARE FRACTIONS: 1/64 DECIMALS: .001	DATE	BY
DO NOT SCALE DRAWING	DATE	BY

REVISION	DATE	BY	REASON
1	11-78	J.T.	INITIAL DESIGN
2	11-78	J.T.	REVISED FOR PRODUCTION
3	11-78	J.T.	REVISED FOR PRODUCTION
4	11-78	J.T.	REVISED FOR PRODUCTION
5	11-78	J.T.	REVISED FOR PRODUCTION
6	11-78	J.T.	REVISED FOR PRODUCTION
7	11-78	J.T.	REVISED FOR PRODUCTION
8	11-78	J.T.	REVISED FOR PRODUCTION
9	11-78	J.T.	REVISED FOR PRODUCTION
10	11-78	J.T.	REVISED FOR PRODUCTION

REVISION	DATE	BY	REASON
1	11-78	J.T.	INITIAL DESIGN
2	11-78	J.T.	REVISED FOR PRODUCTION
3	11-78	J.T.	REVISED FOR PRODUCTION
4	11-78	J.T.	REVISED FOR PRODUCTION
5	11-78	J.T.	REVISED FOR PRODUCTION
6	11-78	J.T.	REVISED FOR PRODUCTION
7	11-78	J.T.	REVISED FOR PRODUCTION
8	11-78	J.T.	REVISED FOR PRODUCTION
9	11-78	J.T.	REVISED FOR PRODUCTION
10	11-78	J.T.	REVISED FOR PRODUCTION

ALL DESIGN, CONSTRUCTION AND PRICE DATA REMAINING TO THE SERVICE BUREAU OF BALL FIELD SERVICE CORP. IS THE PROPERTY OF BALL FIELD SERVICE CORP. AND IS TO BE KEPT IN CONFIDENTIALITY AND NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF BALL FIELD SERVICE CORP.


Bally Manufacturing Corp.
 1191 E. CHICAGO, ILLINOIS

P.U. CONTROL BOARD SCHEMATIC

PART NO. **W-1181-3-C**

W-1181-3-C

DISPLAY DIGIT ENABLE

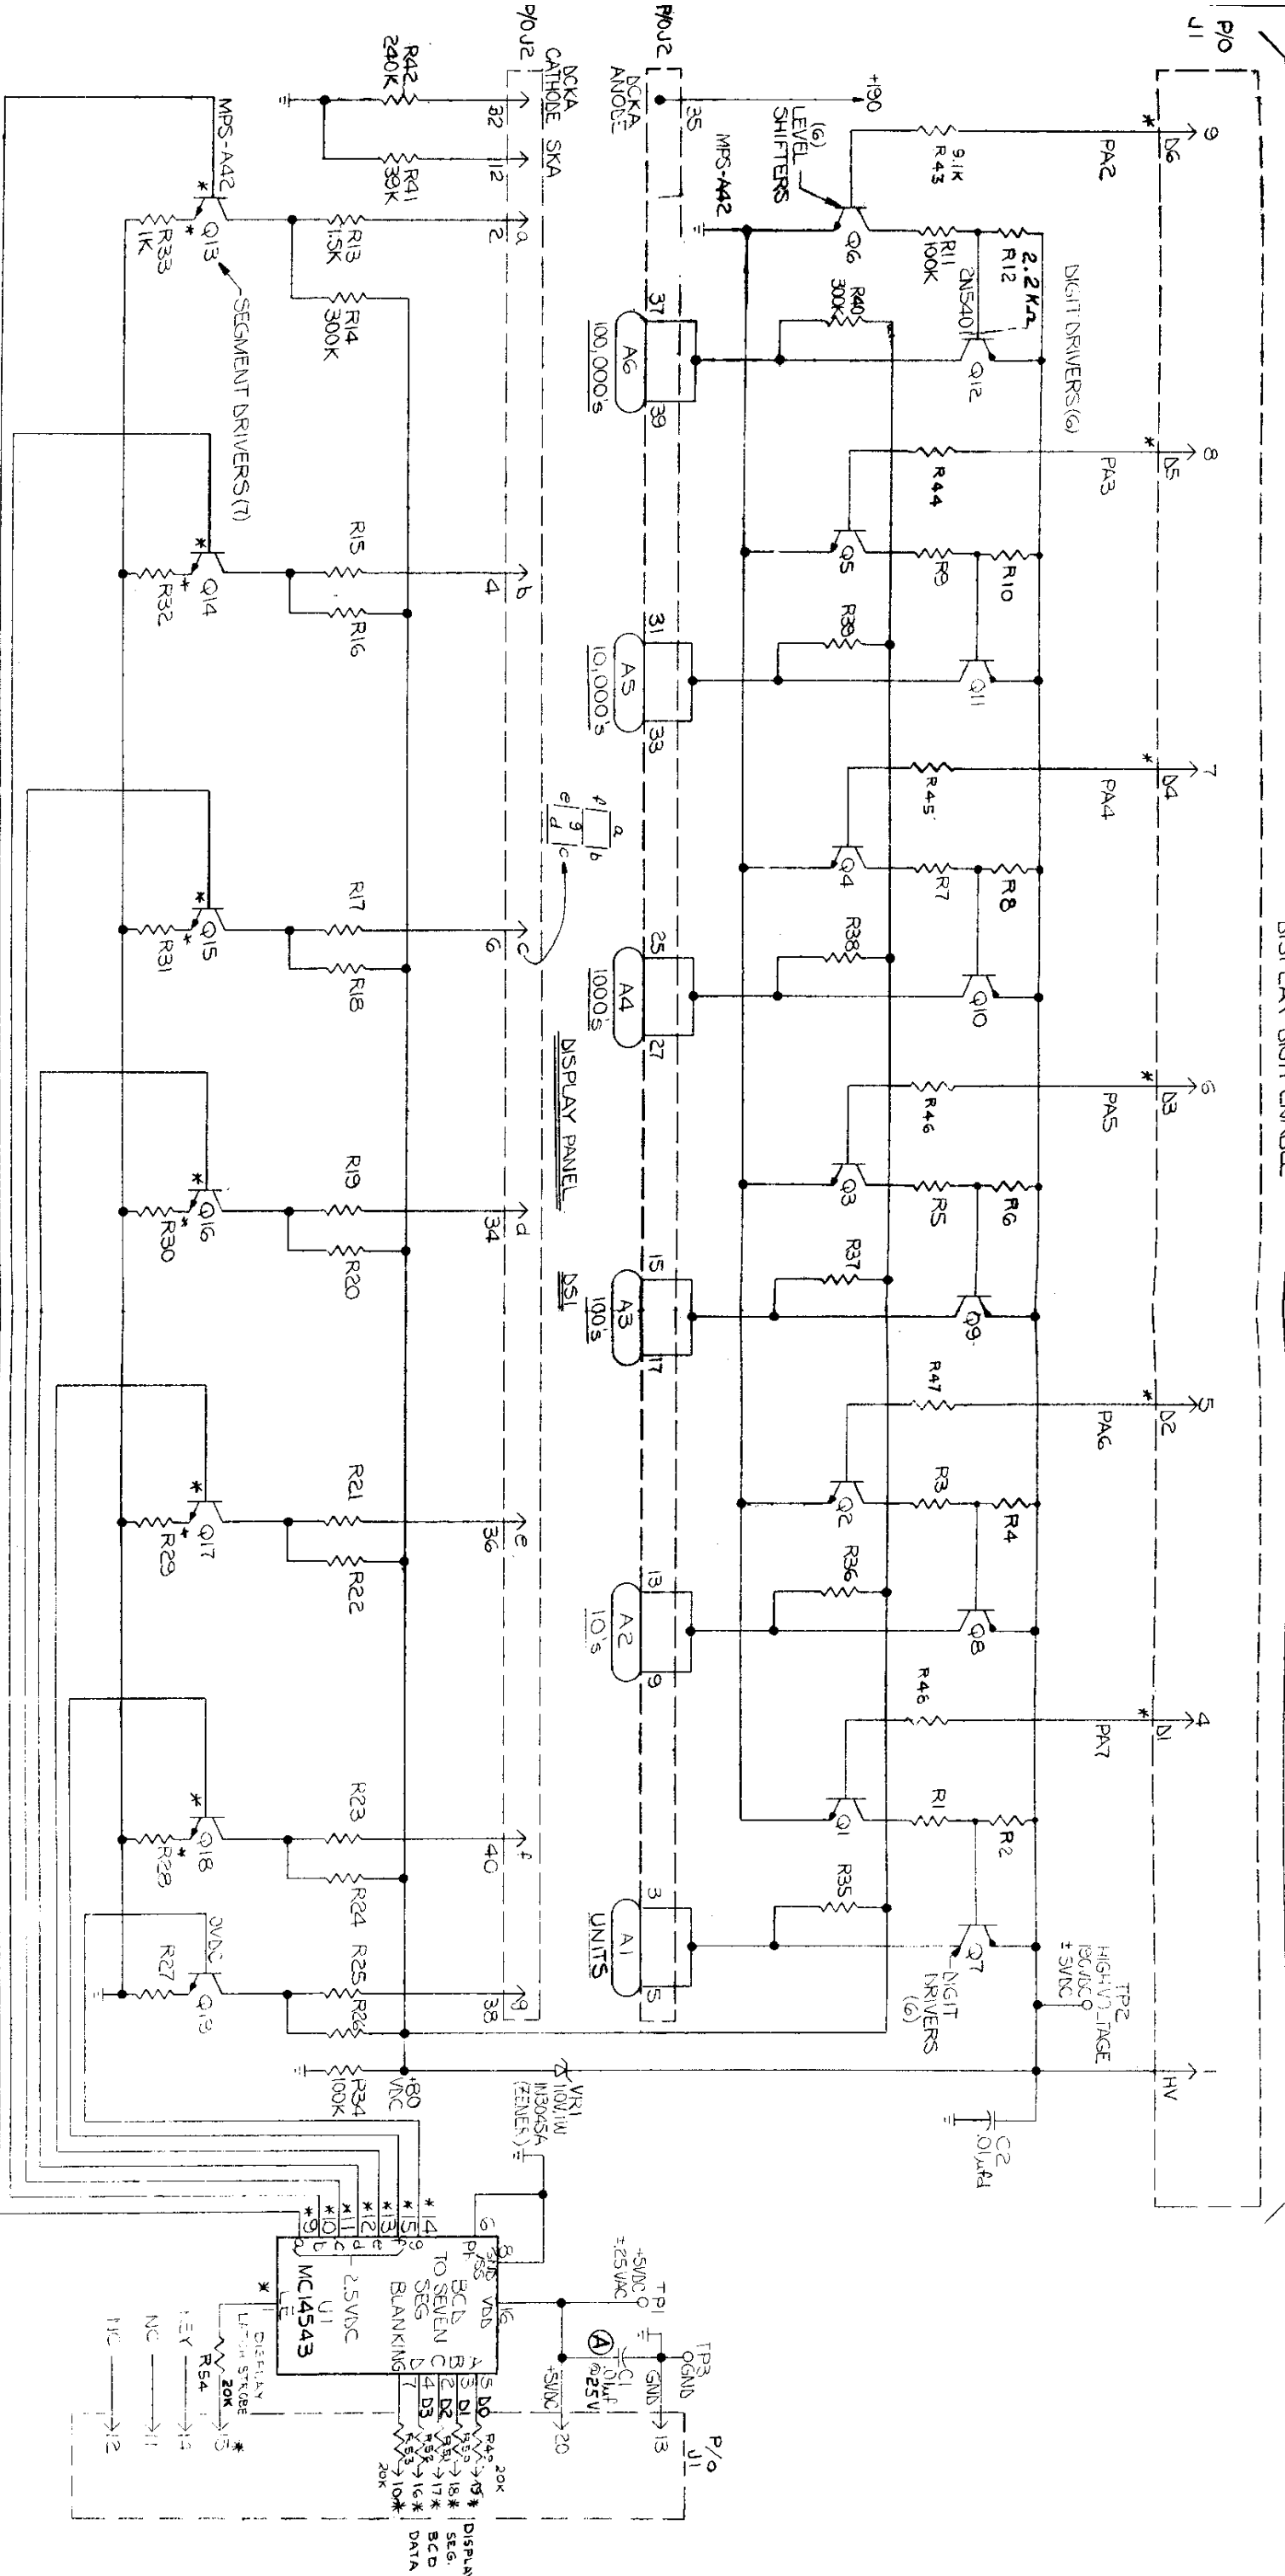

NOTES:

1. UNLESS OTHERWISE SPECIFIED ALL RESISTORS ARE $\pm 5\%$, 1/4W.
2. PREFIX ALL REFERENCE DESIG. WITH ASSEMBLY REFERENCE DESIG. "A"
3. * INDICATES "AID" TEST POINT.

ALL DIMENSIONS AND PROCESS DATA PERTAINING TO THE ARTICLE SHOWN ON THIS SHEET IS THE PROPERTY OF BALLY MANUFACTURING CORP. THIS INFORMATION IS CONFIDENTIAL AND IS NOT TO BE COMED, REPRODUCED, RECALLED TO OR OTHERWISE DISCLOSED TO ANY OTHER PERSON OR ENTITY WITHOUT THE WRITTEN CONSENT OF BALLY MANUFACTURING CORP.

REMOVE ALL BURNS
 TOLERANCES UNLESS OTHERWISE SPECIFIED:
 DIMENSIONS: FRACTIONS: ANGLES: DO NOT SCALE DRAWING

DATE SIZE — CC — LT PER M — LBS PER M —


NO.	LET.	WAS	SCOV	CHANGE	DATE	BY	CK.
1	A	WAS	SCOV		4/27/79	TD	

Bally MANUFACTURING CORP #1120-E
 2400 BELMONT AVENUE
 CHICAGO, ILLINOIS 60627-7125

DISPLAY BOARD SCHEMATIC (A)
 AS-2515-21

PART NO. W-1184-1c


TRANSFORMER ASSEMBLY A2

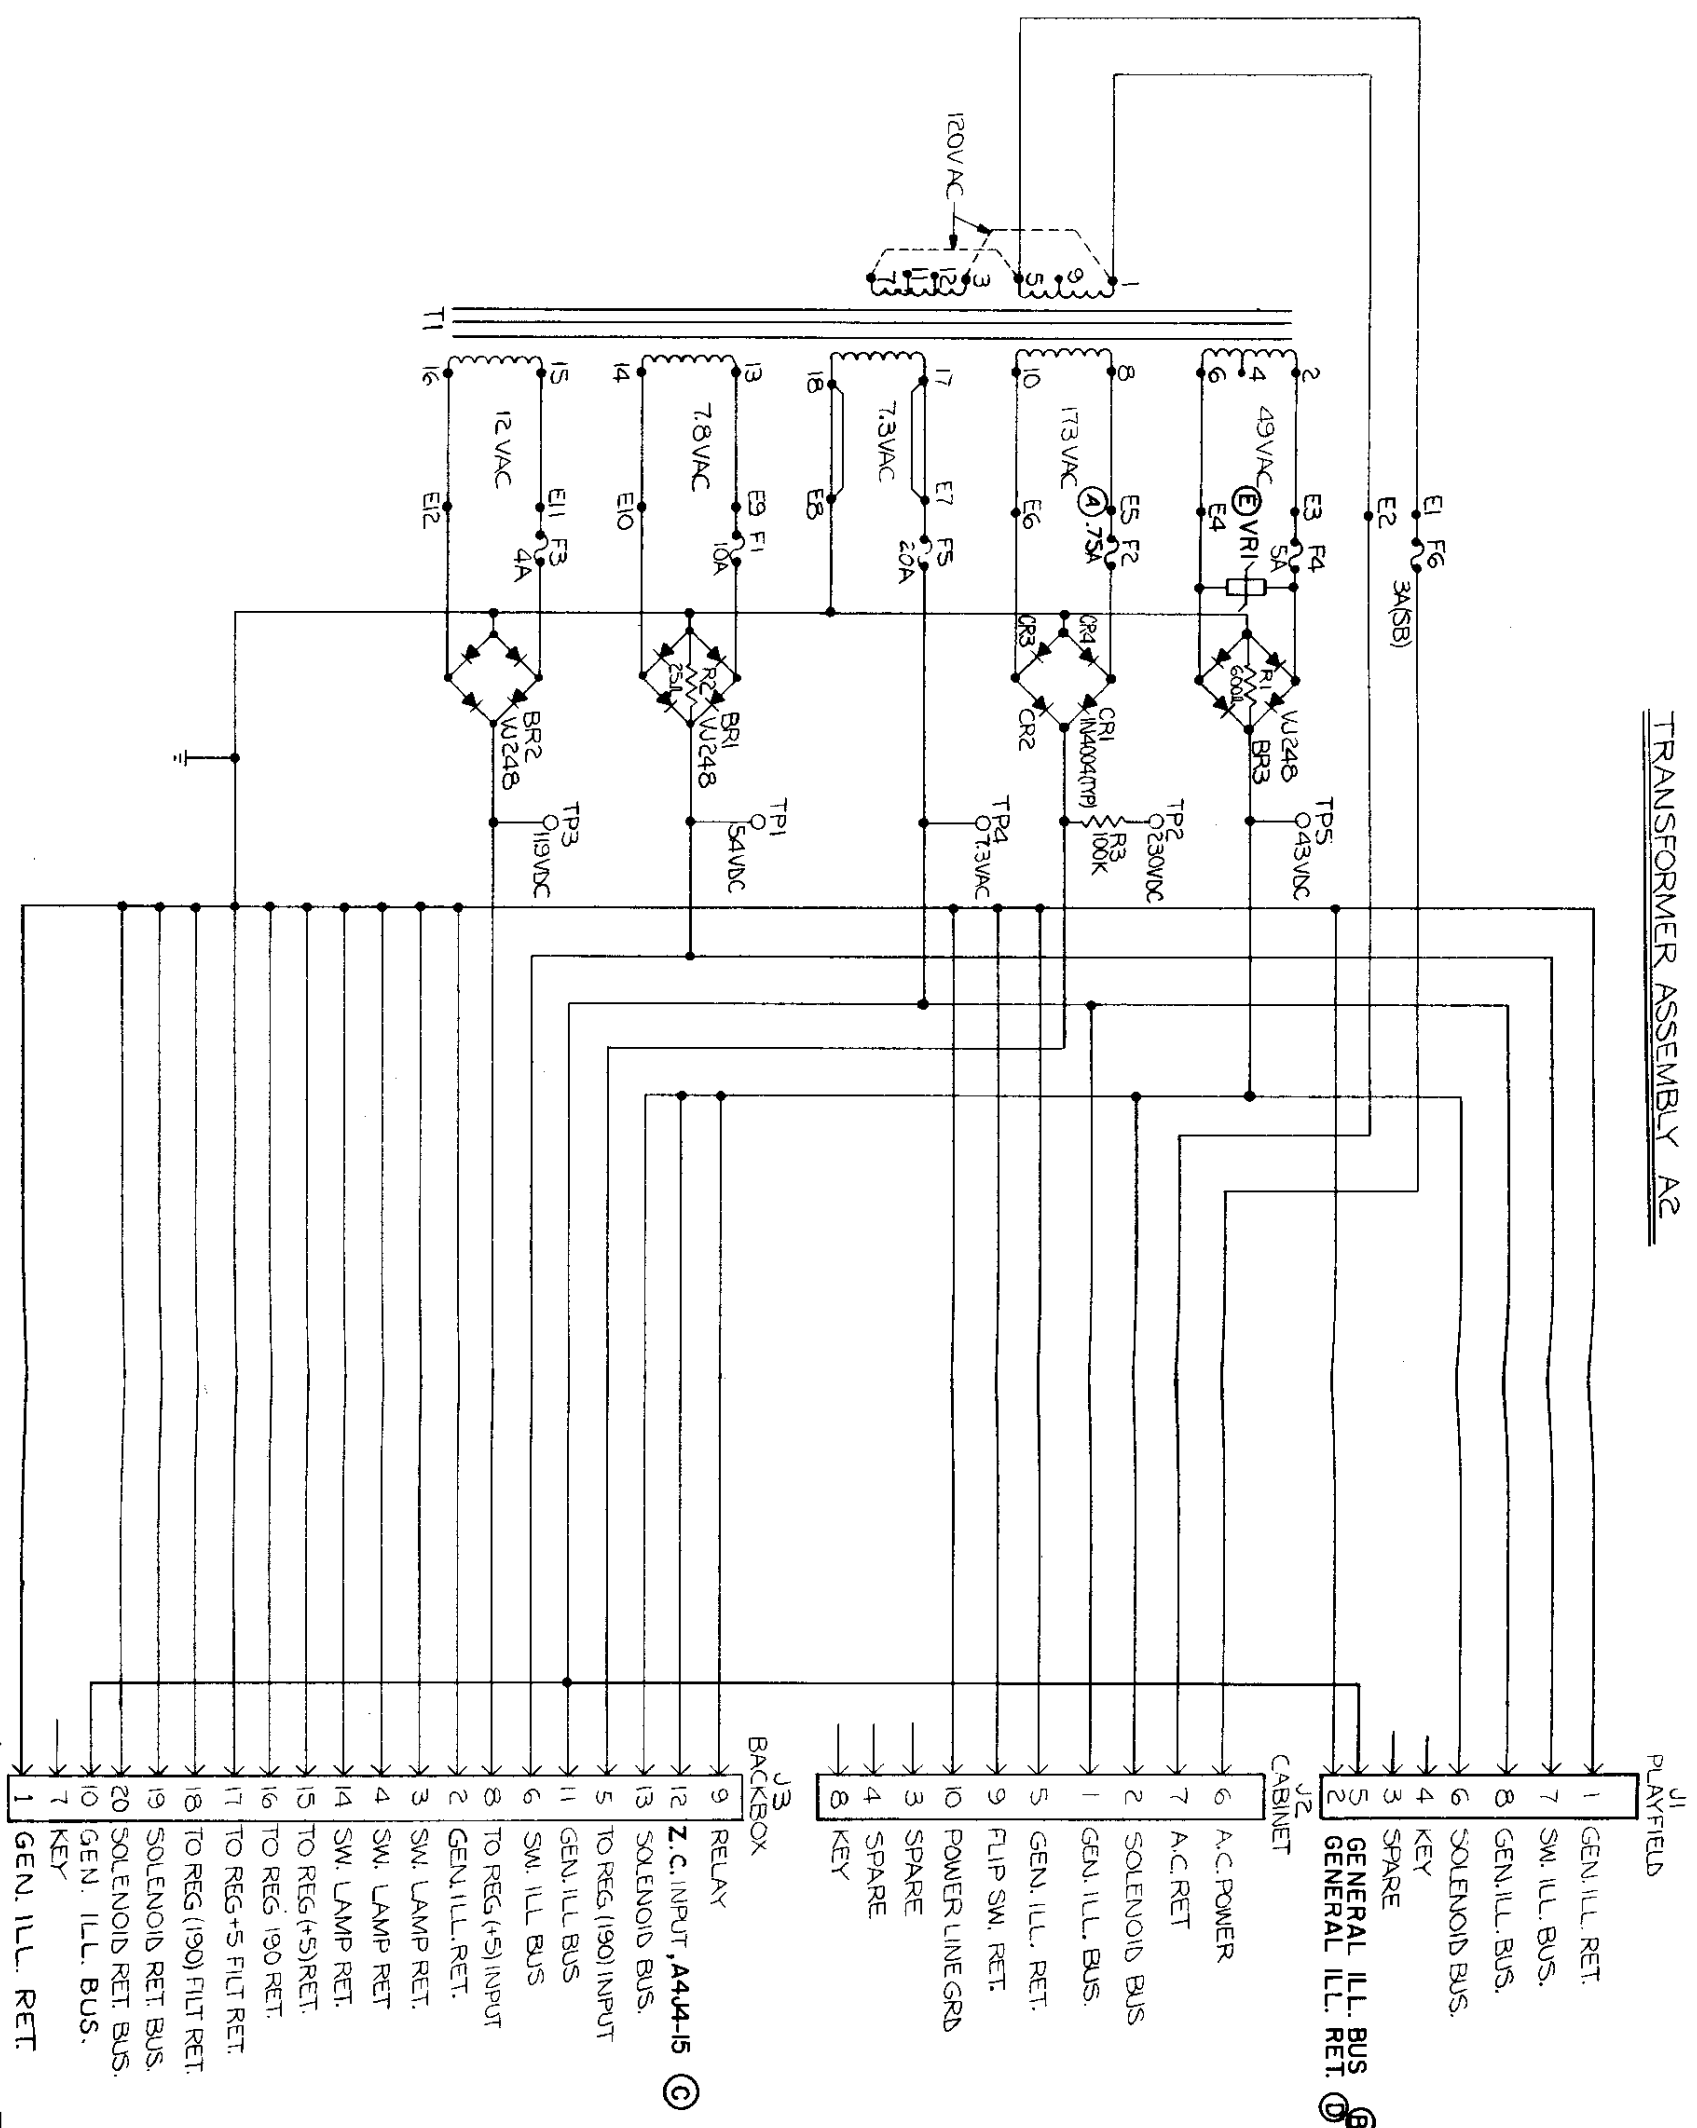

- NOTES:
- 1 WIRE A.C. POWER AND TERMINALS PER TABLE 1.
 - 2 VOLTAGES SHOWN ARE FOR GAME IN POWER-UP CONDITION.
 - 3 PREFIX ALL REFERENCE DESIGNATIONS WITH A2.

TABLE 1
POWER LINE CONNECTIONS

LINE VOLTAGE VRMS AC	STRAP TERMINALS	APPLY POWER TO TERMINALS
115	1T03 AND 1T01	1 AND 9
120	1T03 AND 1T01	1 AND 5
220	3T05	1 AND 12
240	3T05	1 AND 7

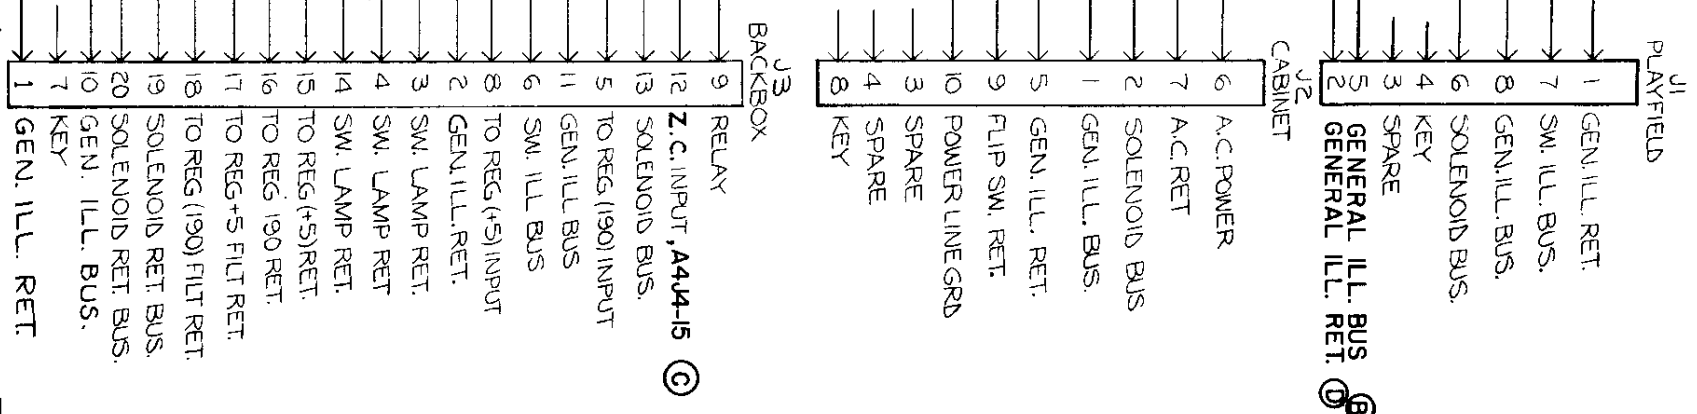

QTY	DEPT.	DESCRIPTION	TOOL No.

NO.	LET.	CHANGE	DATE	BY	CR.
1	A	52 Wires 5.0A			
2	B	33-12 Rev'd 2.C (INDPT)			
3	C	33-12 Rev'd 2.C (INDPT)			
4	D	31-2 Rev'd "AND"			
5	E	V&I Rev'd A3	1/2-28/78		

REMOVE ALL BIRTS
TOLERANCES ON DIMENSIONS UNLESS OTHERWISE SPECIFIED
FRACTIONS IN DECIMALS
DIMENSIONS IN INCHES UNLESS OTHERWISE SPECIFIED
DIMENSIONS IN MILLIMETERS UNLESS OTHERWISE SPECIFIED
DO NOT SCALE DRAWING

DATE: FEB 21 1977
DRAWN BY: [Signature]
CHECKED BY: [Signature]
SCALE: 1074 - E

Ballby MANUFACTURING CORP.
3640 BELMONT AVENUE
CHICAGO, ILLINOIS



POWER TRANSFORMER
MODULE SCHEMATIC

PART NO. W-1185-1c

ALL DIMENSIONS, UNLESS OTHERWISE SPECIFIED, ARE TO THE CENTER OF THE HOLE OR THE CENTER OF THE HOLE UNLESS OTHERWISE SPECIFIED. DIMENSIONS TO THE CENTER OF THE HOLE UNLESS OTHERWISE SPECIFIED. DIMENSIONS TO THE CENTER OF THE HOLE UNLESS OTHERWISE SPECIFIED.

DWG. NO. W-1185-1c
REV. 1074 - E
DATE: FEB 21 1977
DRAWN BY: [Signature]
CHECKED BY: [Signature]
SCALE: 1074 - E

VR1 (SEE NOTE)

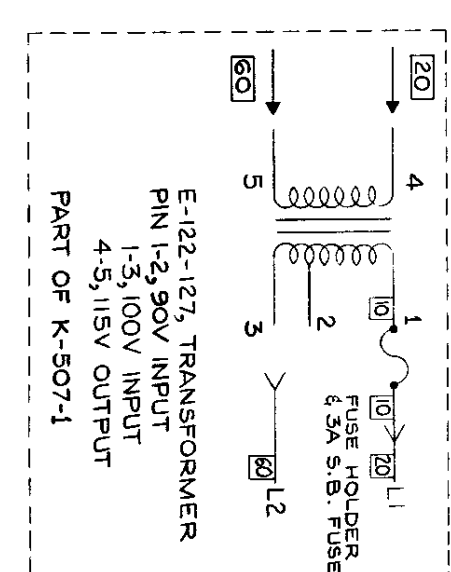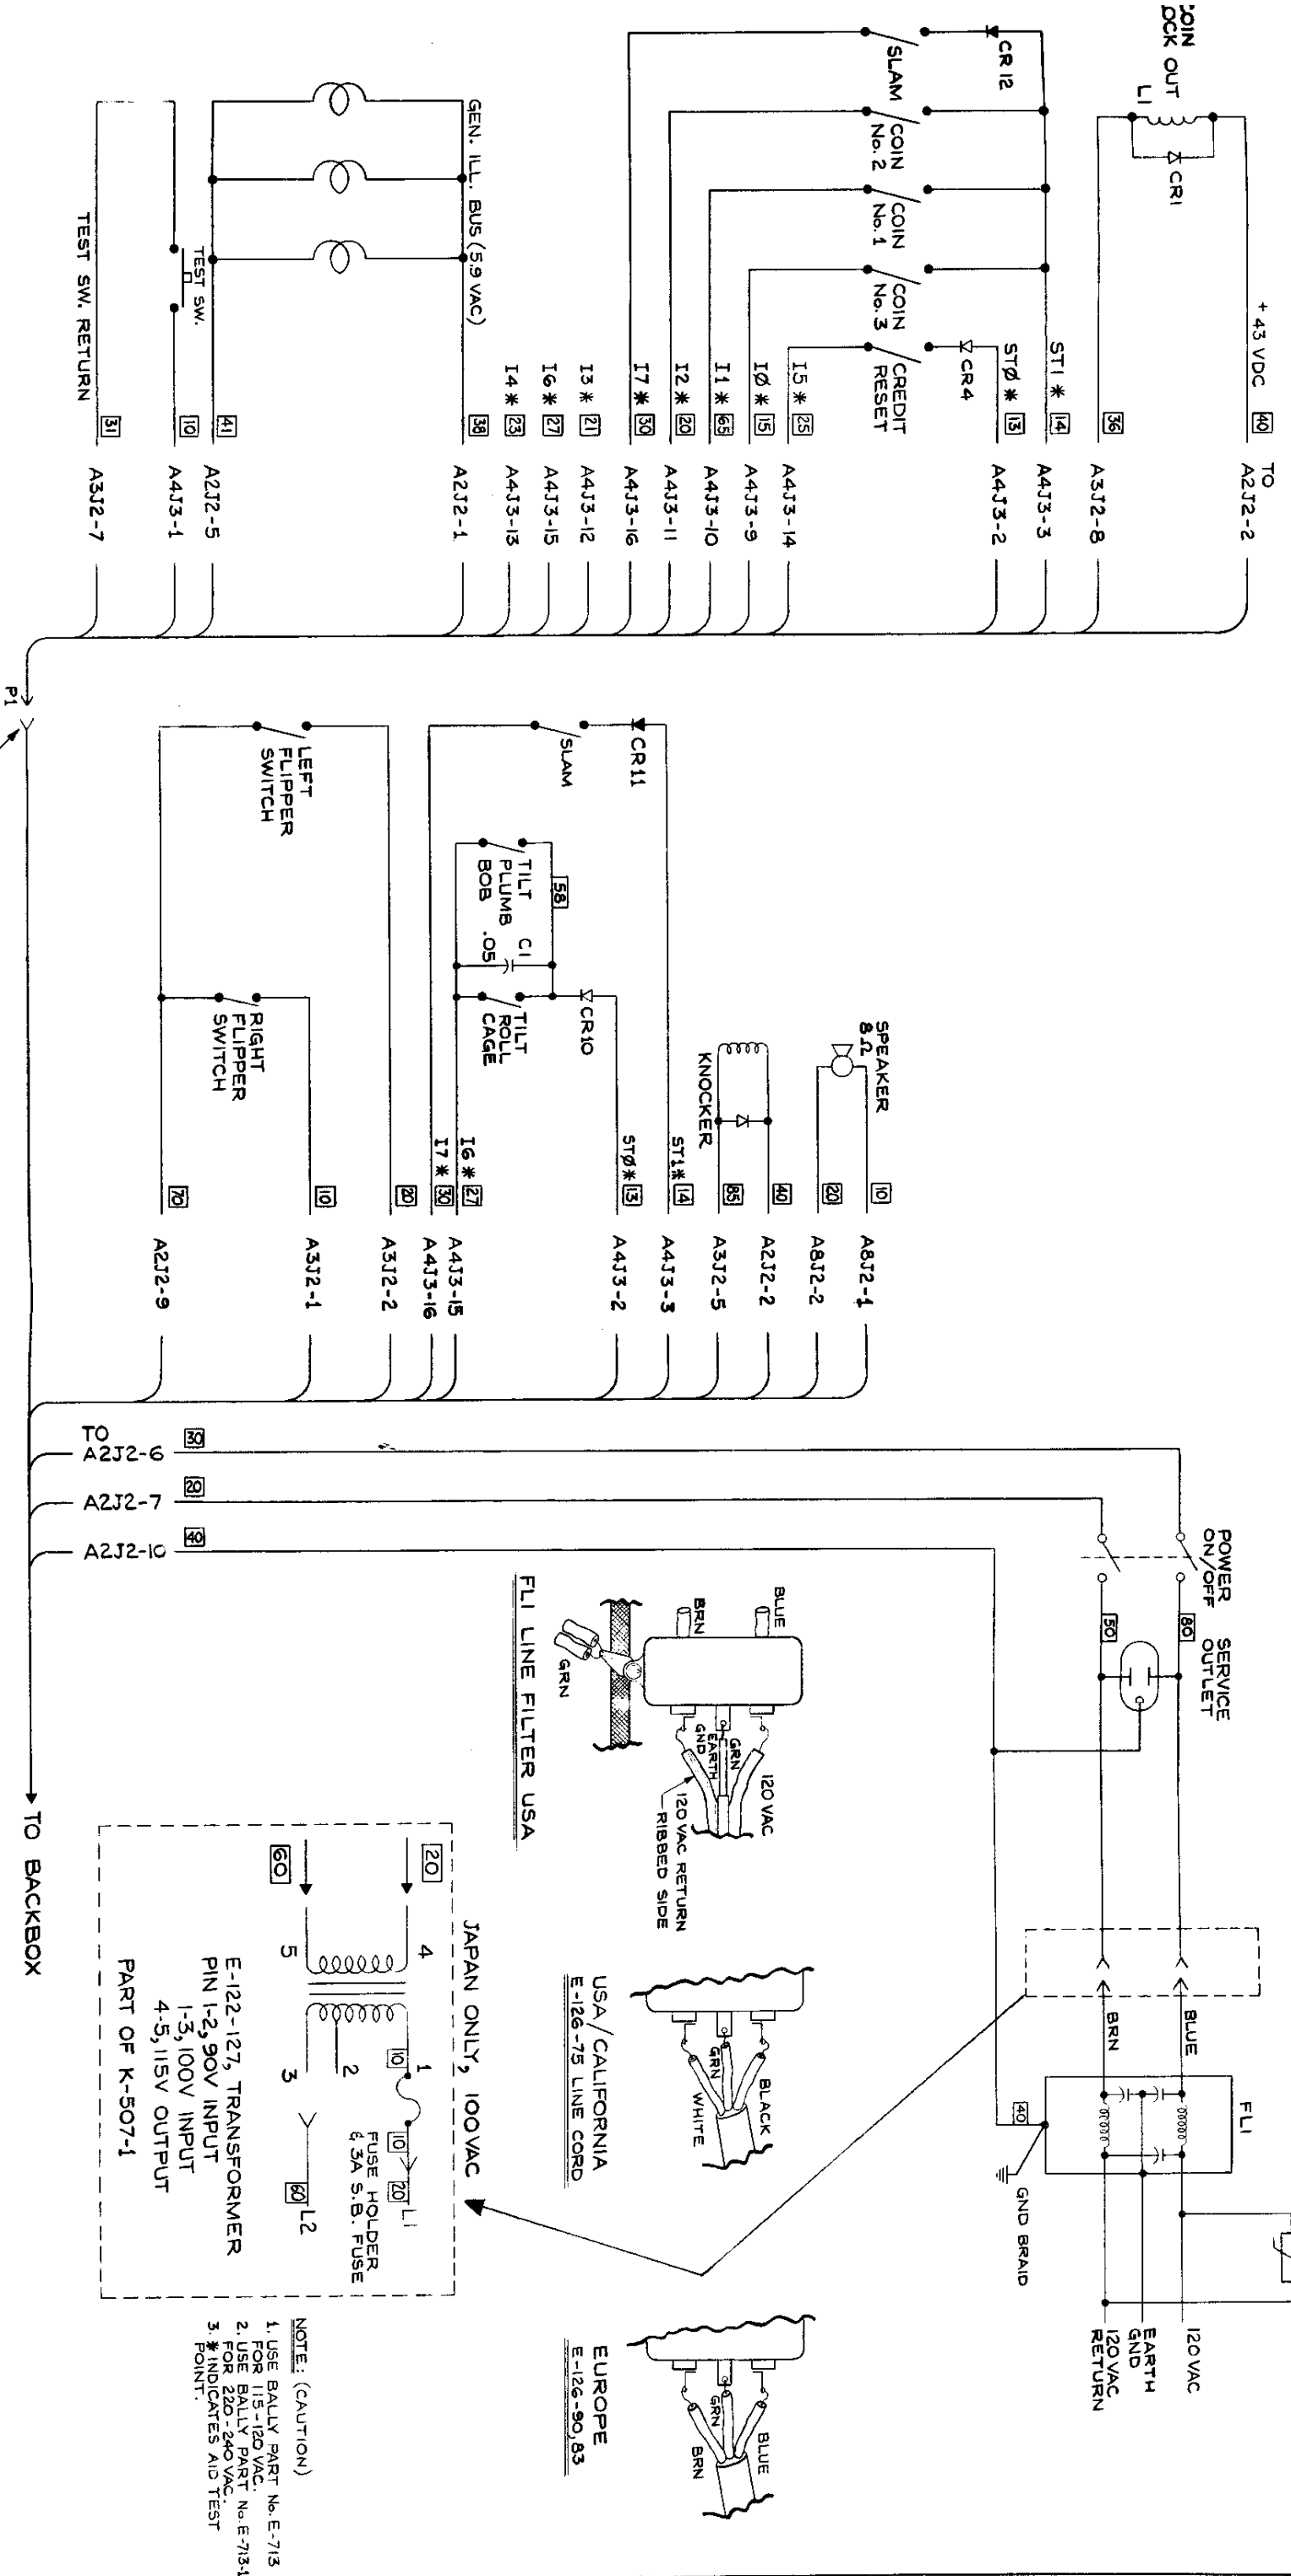

NOTE: (CAUTION)
 1. USE BALLY PART No. E-713 FOR 115-120 VAC.
 2. USE BALLY PART No. E-713-1 FOR 220-240 VAC.
 3. * INDICATES AID TEST POINT.


TO	TO	TO	TO
TO	TO	TO	TO
A4J3-9	1	A4J3-3	11
A4J3-10	2	A2J2-2	15
A4J3-11	3	A3J2-8	16
A4J3-12	4	A2J2-1	17
A4J3-13	5	A2J2-5	18
A4J3-14	6	A4J3-1	19
A4J3-15	7	A3J2-7	20
A4J3-16	8		
A4J3-2	10		

A7 CABINET ASSY. WIRING
 NOTE: - DIODES ARE IN4004, (E-587-6)

TO	TO	TO	TO
TO	TO	TO	TO
A4J3-9	1	A4J3-3	11
A4J3-10	2	A2J2-2	15
A4J3-11	3	A3J2-8	16
A4J3-12	4	A2J2-1	17
A4J3-13	5	A2J2-5	18
A4J3-14	6	A4J3-1	19
A4J3-15	7	A3J2-7	20
A4J3-16	8		
A4J3-2	10		

Bally MANUFACTURING CORP.
 CHICAGO, ILLINOIS
 1161-E
WIRING DIAGRAM
 ELECTRONIC
 W-1186-6

REV.	DATE	BY	CHK.	DESCRIPTION
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				

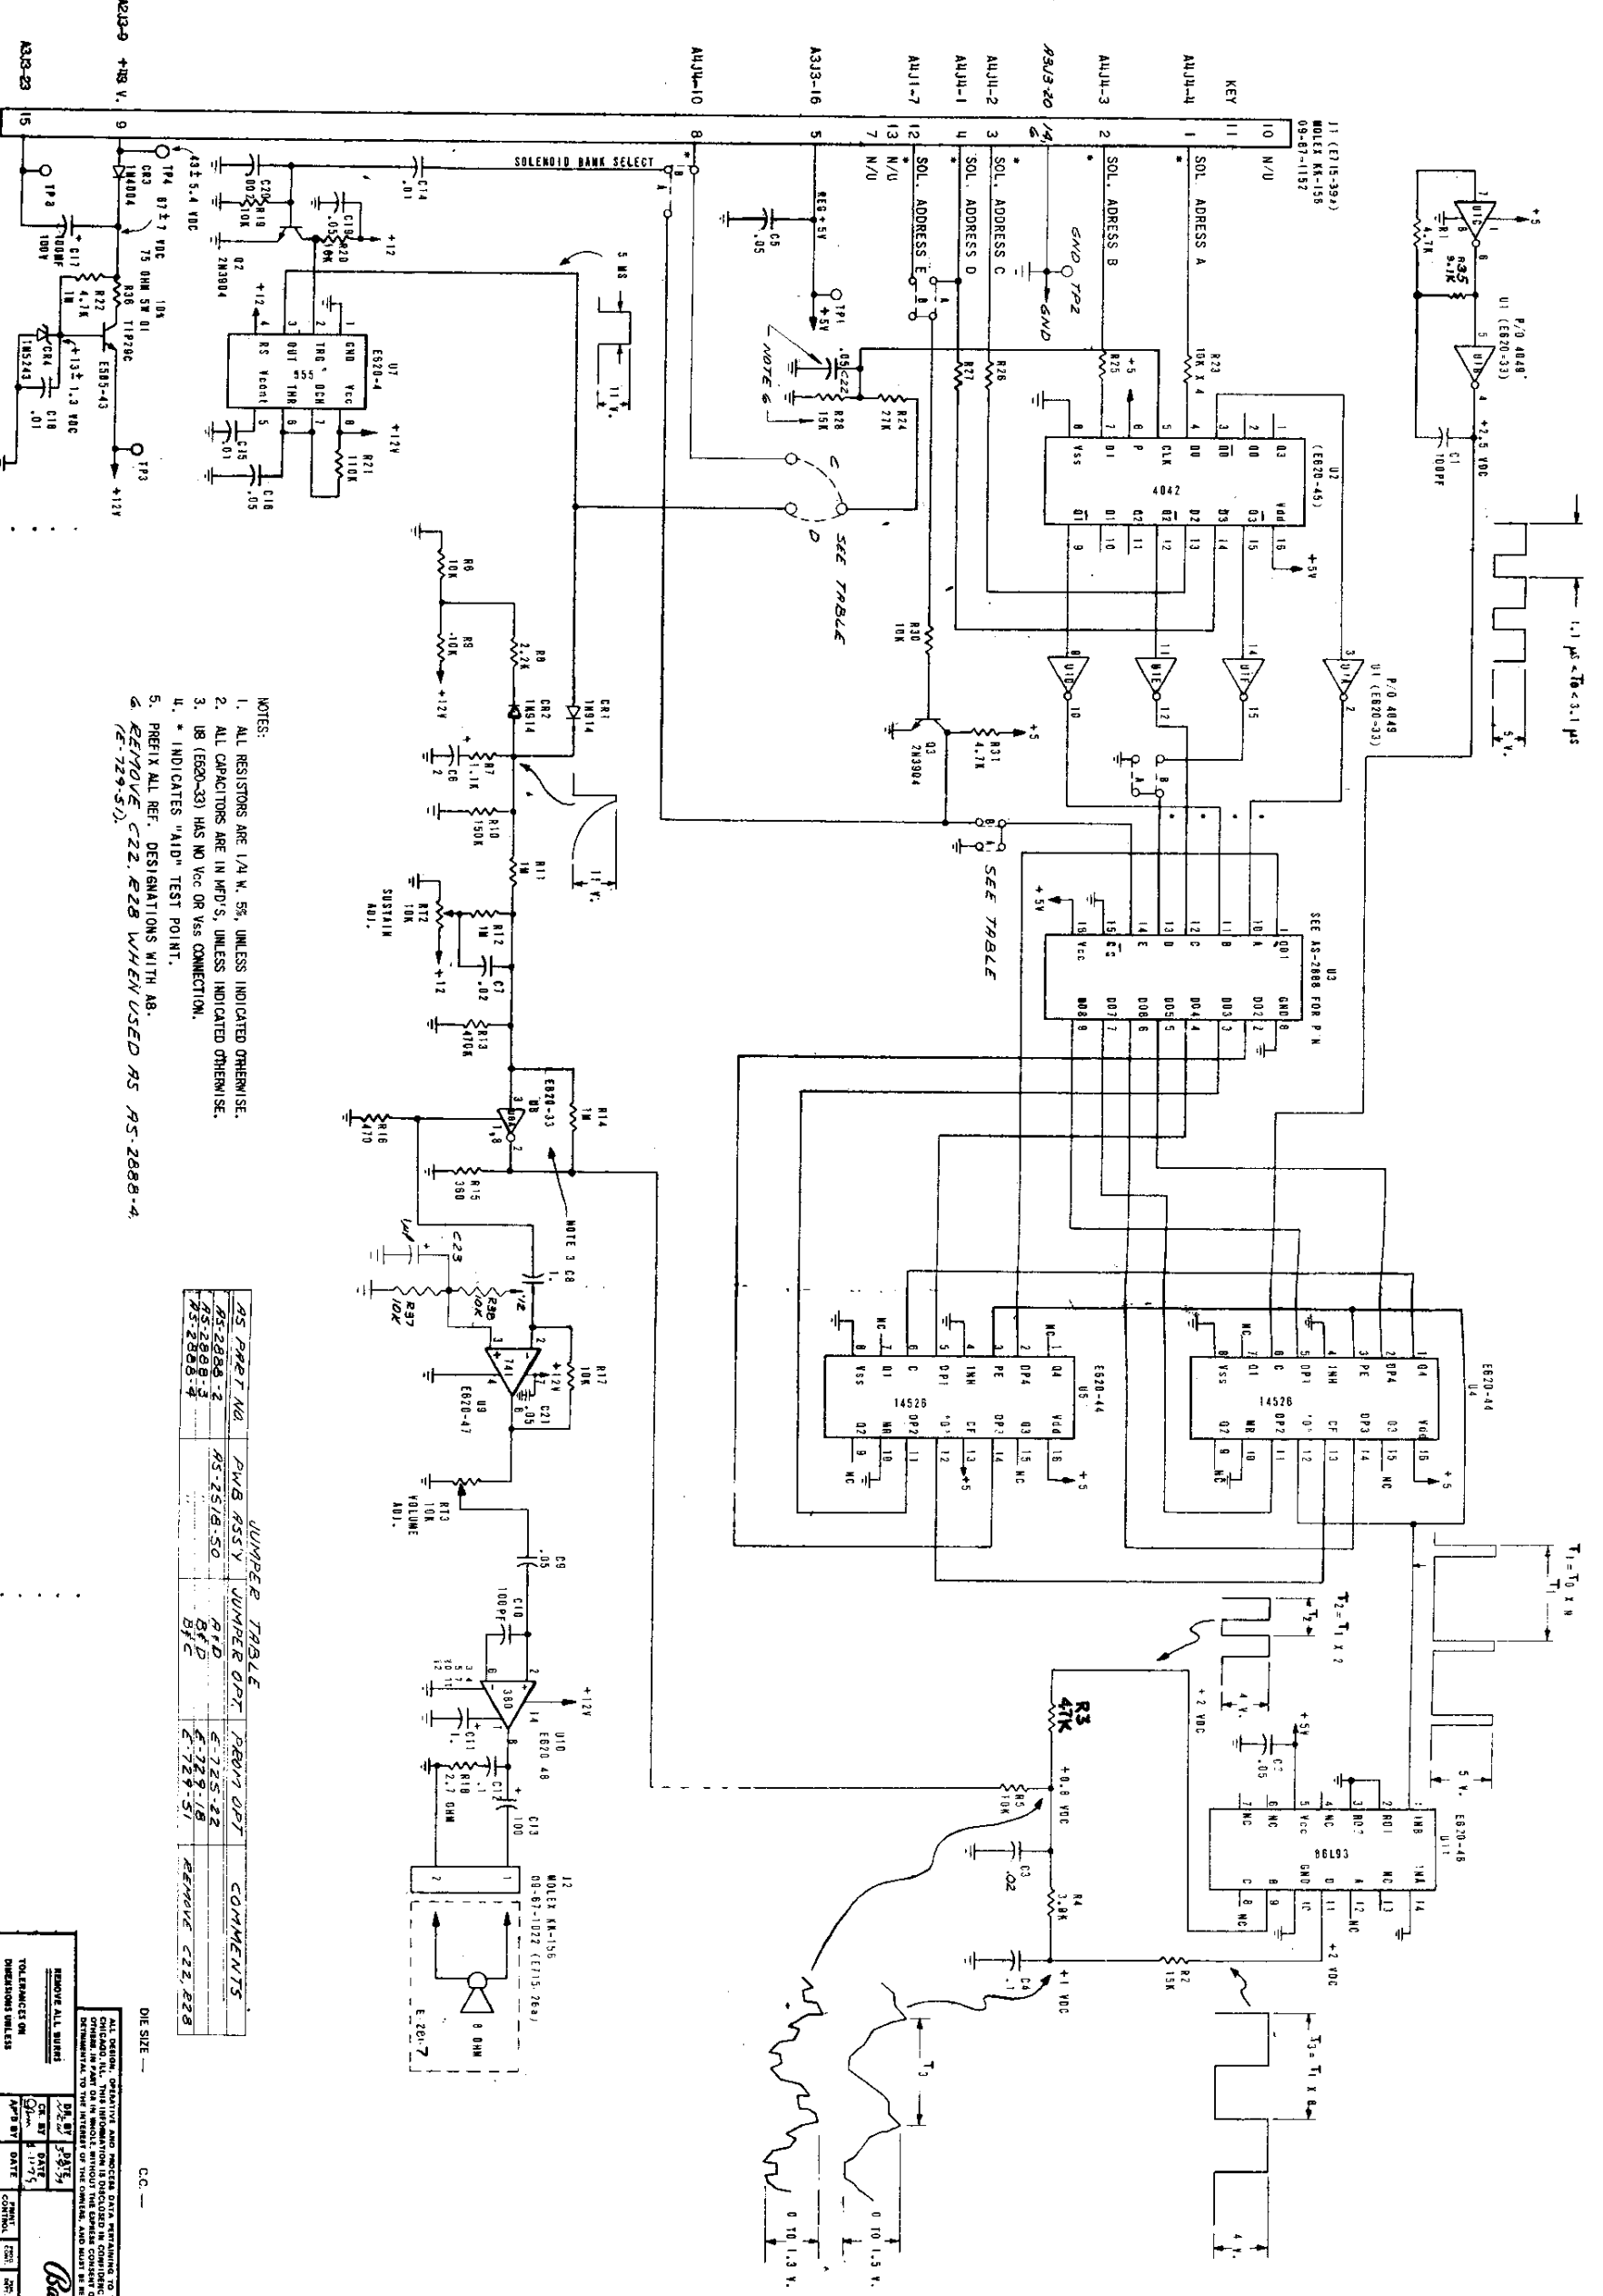

- NOTES:
1. ALL RESISTORS ARE 1/4 W. 5%, UNLESS INDICATED OTHERWISE.
 2. ALL CAPACITORS ARE IN MFD'S, UNLESS INDICATED OTHERWISE.
 3. U8 (6820-33) HAS NO Vcc OR Vss CONNECTION.
 4. * INDICATES "AID" TEST POINT.
 5. PREFIX ALL REF. DESIGNATIONS WITH AB.
 6. REMOVE C22, R28 WHEN USED AS AS-2888-4. (E-729-51)

JUMPER TABLE

AS PART NO.	PWB ASSY	JUMPER DPT.	REV'D DPT.	COMMENTS
AS-2888-2	AS-2518-50	A1D	E-725-82	
AS-2888-3		A1D	E-729-18	
AS-2888-4		B1C	E-729-51	REMOVE C22, R28

REV.	LET.	CHANGE	DATE	BY	CHK.

REMOVE ALL BUBBLES

ALL DIMENSIONS AND ANGLES ARE TO THE CENTER UNLESS OTHERWISE SPECIFIED. DIMENSIONS IN PARENTHESIS ARE FOR INFORMATION ONLY AND ARE NOT TO BE USED FOR FABRICATION.

DATE: 11/75

BY: [Signature]

CHICKAGO, ILLINOIS




11/57-1

SOLID STATE SOUND MODULE A8

AS-2518-50

W-1193-1


W-1193-1

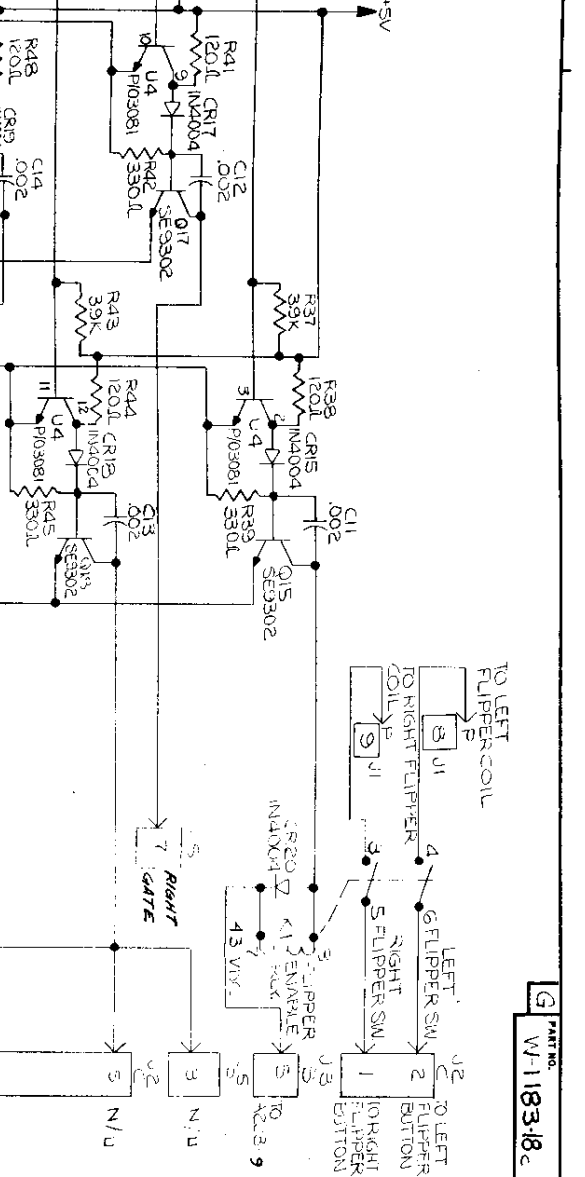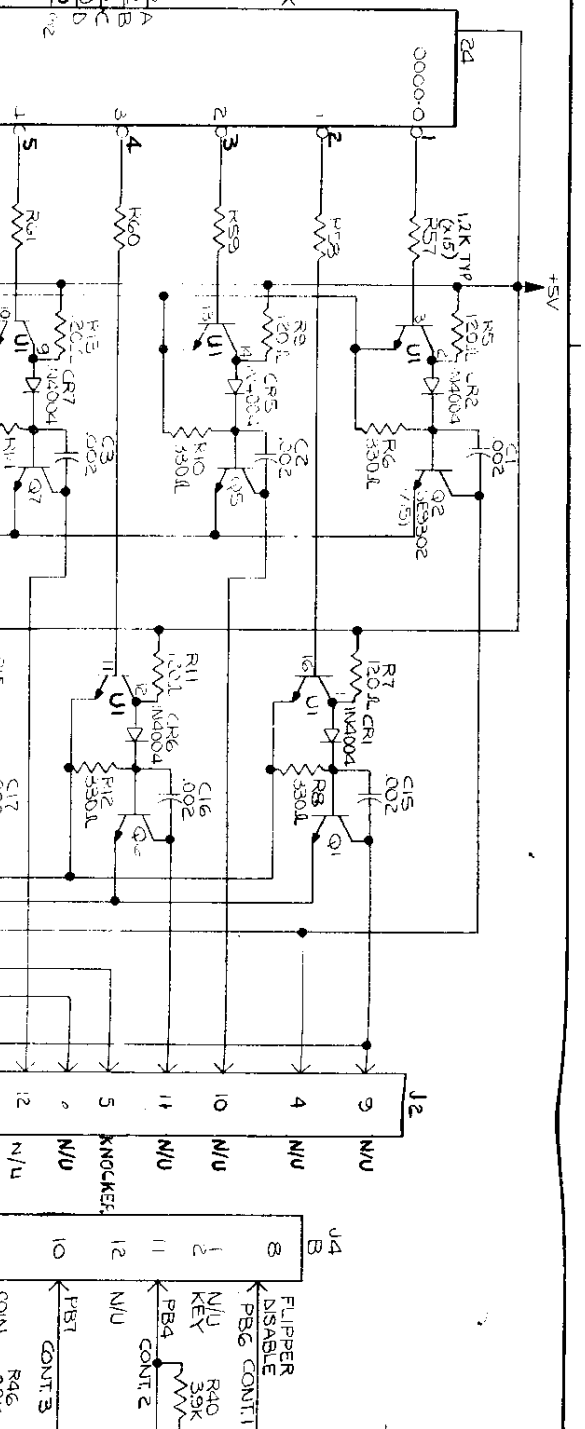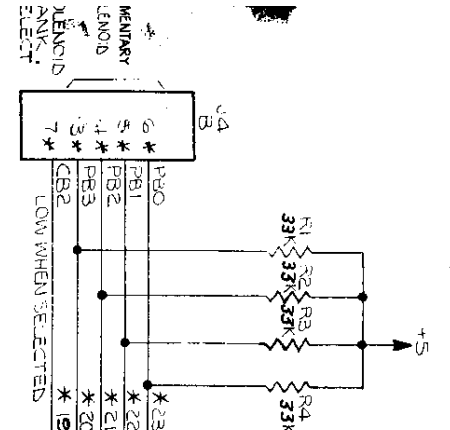

NOTES:
 1. E-710, LAMBDA, LAS 1405 NATIONAL, LV238K FAIRCHILD-78080K
 * U1, U3 AND U4 ARE CA3081. * INDICATES AID TEST POINT

CONNECTOR CODES:
 C → ROUTE TO CABINET CONN
 B → ROUTE TO BLACKBOX CONN
 P → ROUTE TO PLAYFIELD CONN

LAST NUMBER USED:
 R72 N/U C9 C10
 Q29 N/U Q3 C10
 CR21 N/U Q20
 VR1

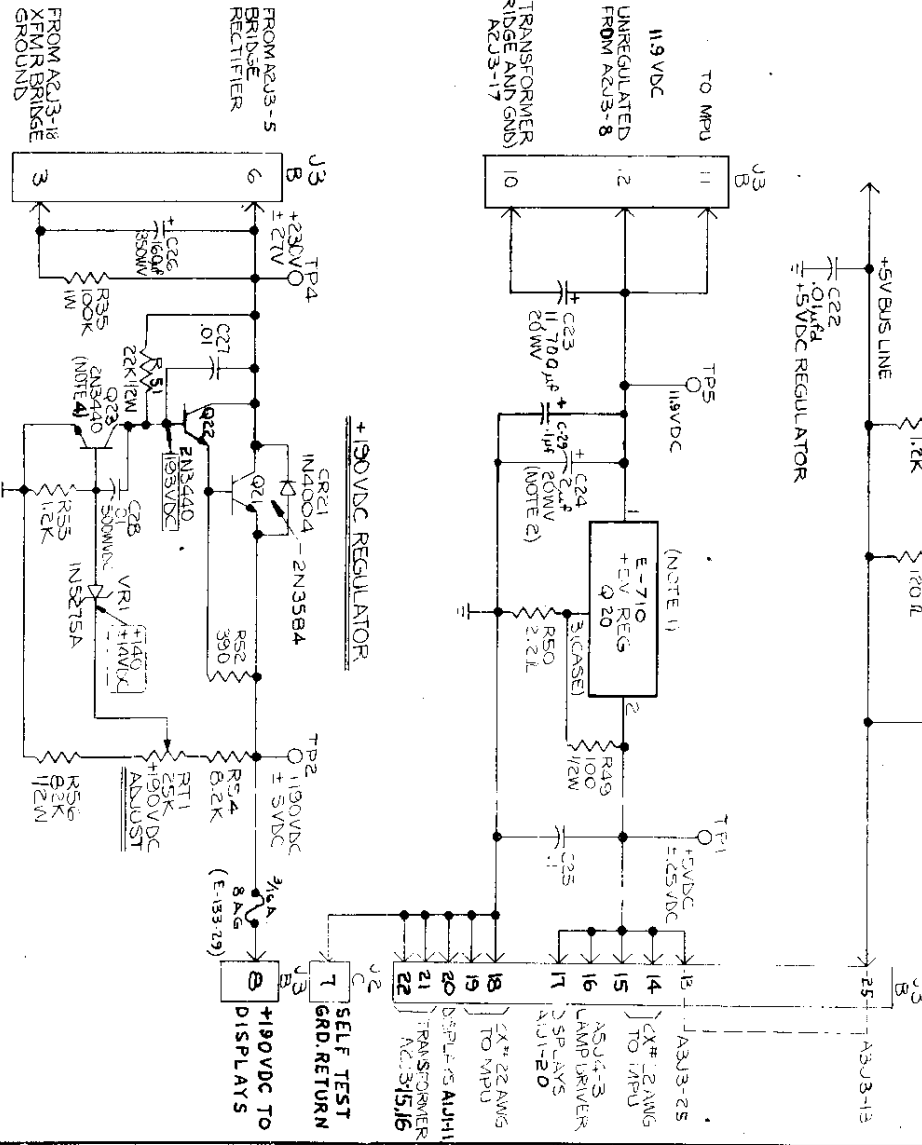

NO.	LET.	CHANGE	DATE	BY	CS.

DATE	BY	REVISION

Bally Manufacturing Corp. 2400 BELMONT AVENUE CHICAGO, ILLINOIS		30-ENDDRIVER VOLTAGE REGULATOR SCHEMATIC HARLEM GLOBETROTTERS
PART NO. W-1183-18c	SCALE 1/64" = 1"	ASSEMBLY NO. USED ON

REMOVE ALL BUSHES
 TOLEANCES ON
 DIMENSIONS UNLESS
 OTHERWISE SPECIFIED
 DIMENSIONS IN
 PARENT PARENTHESIS
 ARE MINIMUMS
 DIMENSIONS IN
 BRACKETS ARE
 MAXIMUMS
 DIMENSIONS IN
 SQUARE PARENTHESIS
 ARE TYPICALS
 DO NOT SCALE DRAWING


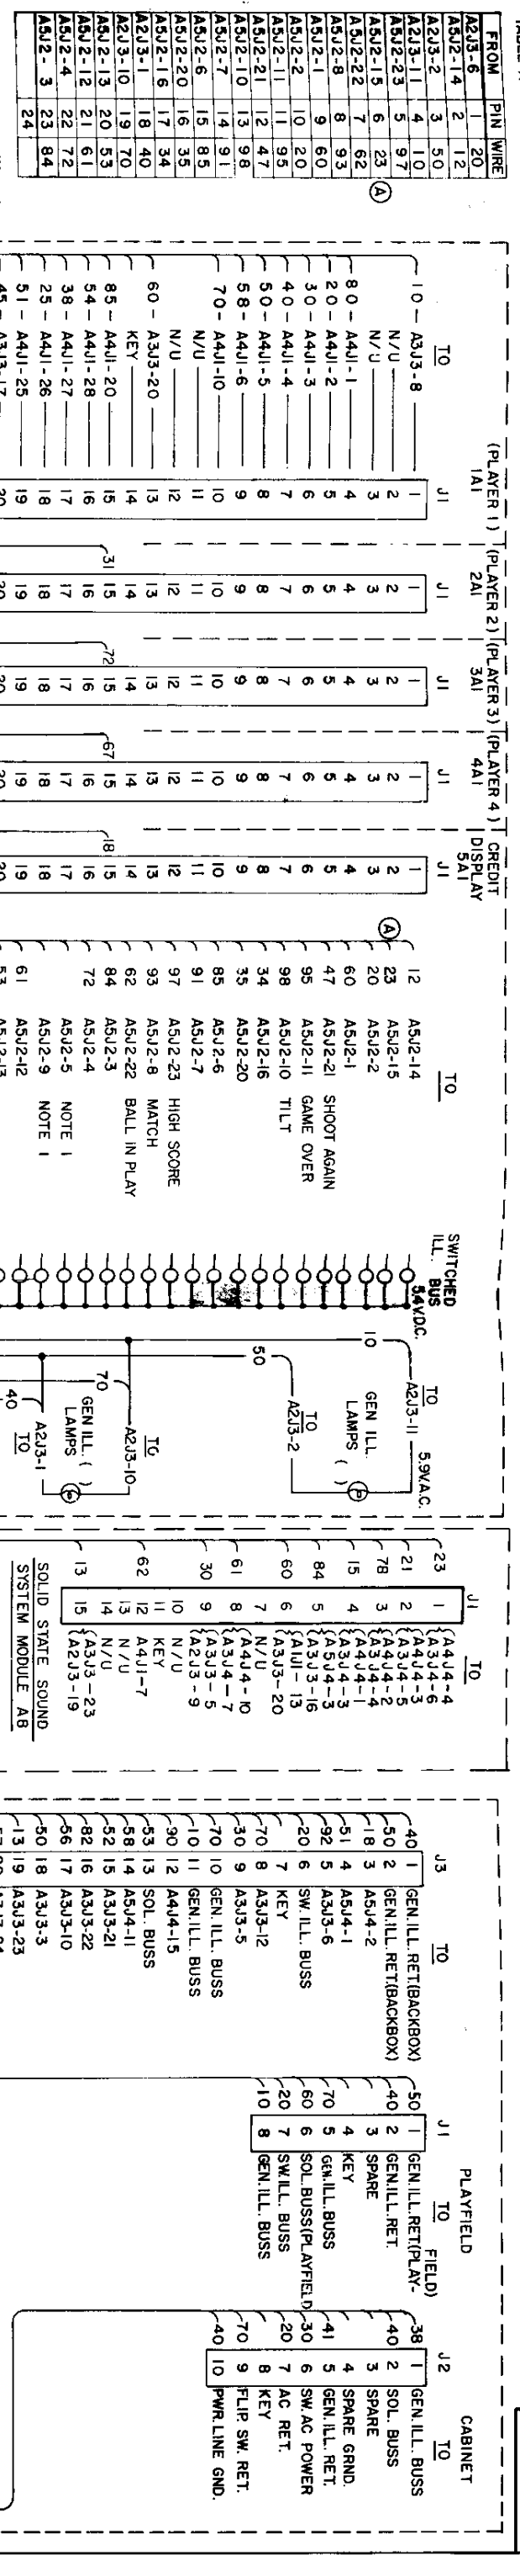



TABLE A AI/2

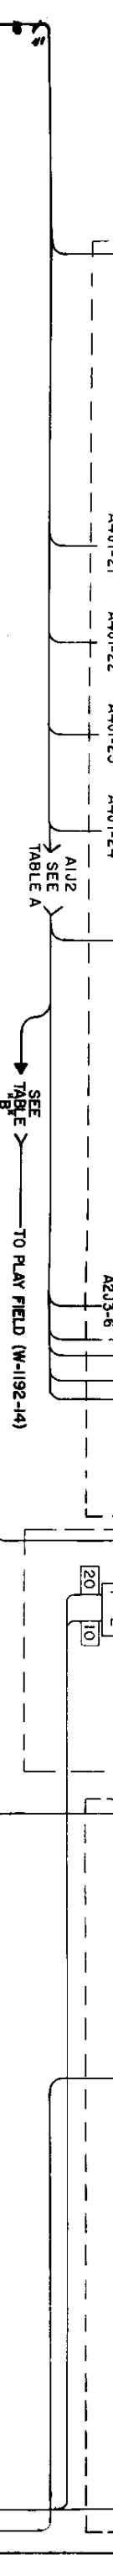

LAMP DRIVER A5

MPU A4

VOLTAGE REGULATOR / SOLENOID DRIVER A3

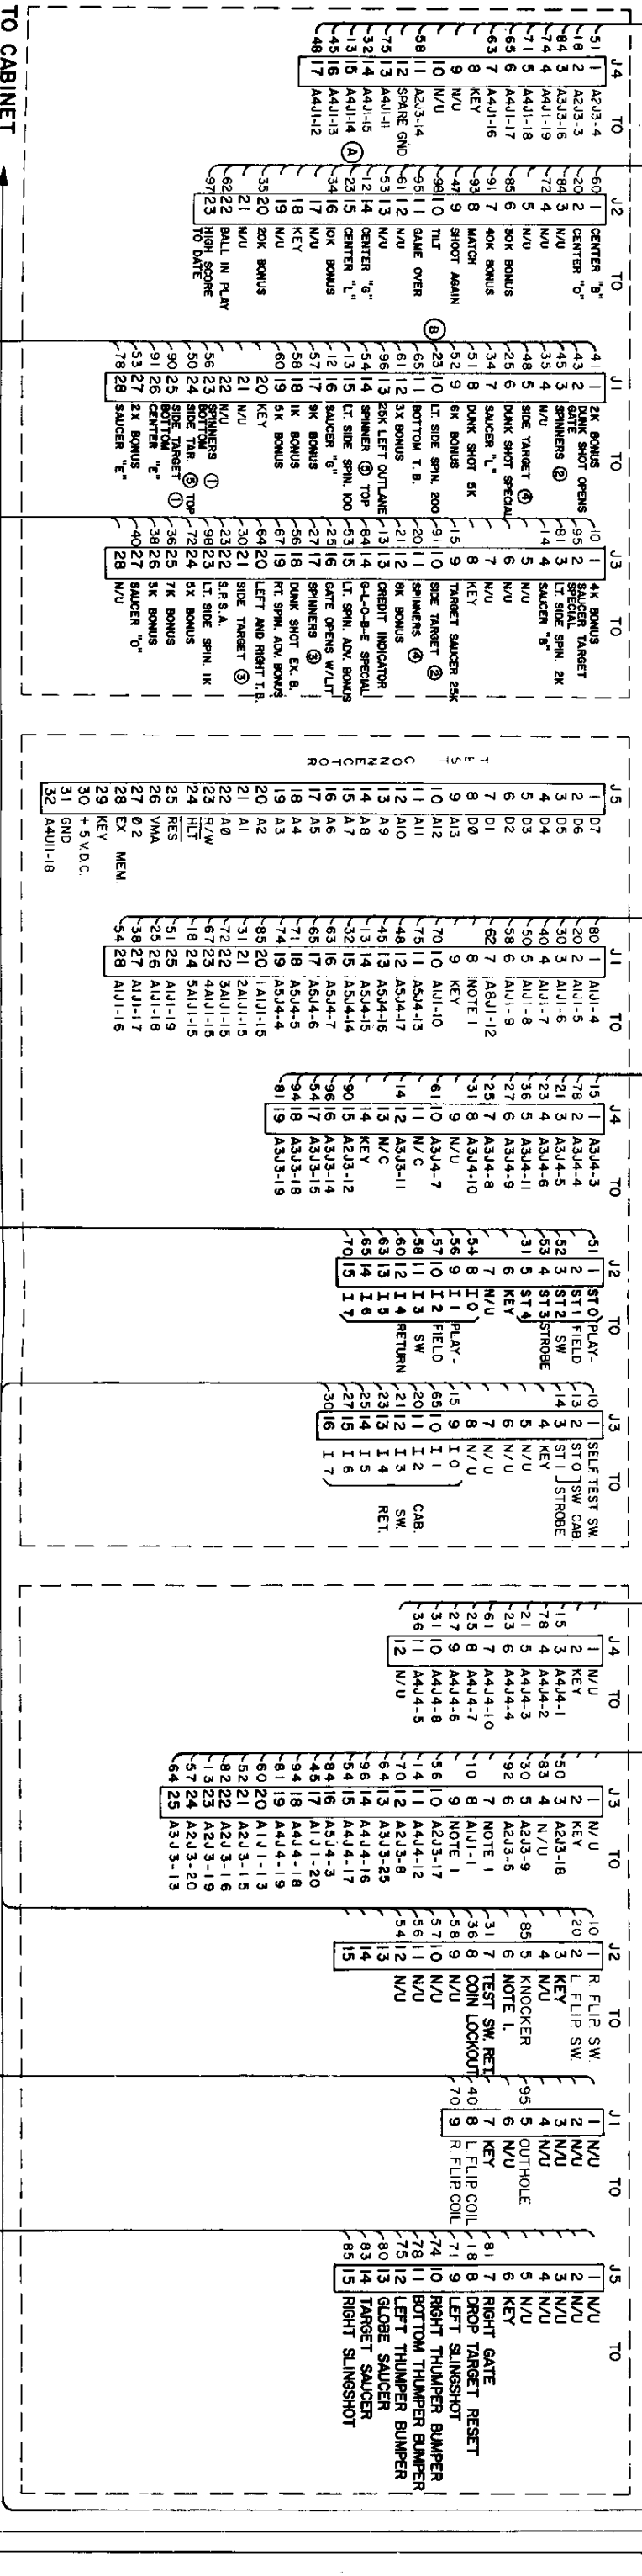

TO PLAYFIELD

TO CABINET

TABLE B

FROM	TO	WIRE
ASJ2-14	1	12
ASJ2-2	2	20
ASJ2-15	3	23
ASJ2-16	4	34
ASJ2-20	5	35
ASJ2-1	6	60
ASJ2-6	7	89
ASJ2-7	8	91

WIRE COLOR CODE

1-RED	6-BROWN
2-BLUE	7-ORANGE
3-YELLOW	8-BLACK
4-GREEN	9-GRAY
5-WHITE	0-NO TRACE

- NOTES
1. THESE PINS ARE RESERVED FOR FUTURE USE
 2. WIRE COLORS ARE SHOWN FOR ALL CONNECTOR PINS. SOME WIRES MAY NOT BE USED IN ALL GAMES.
 3. * INDICATES AID TEST POINT.

ALL DESIGN, OPERATING AND WIRING DATA PERTAINING TO THIS PROJECT IS THE PROPERTY OF BALLY MANUFACTURING CORP. IT IS HEREBY AGREED THAT THIS INFORMATION IS TO BE KEPT CONFIDENTIAL AND NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN CONSENT OF THE OWNER. THE PARTS LIST, SCHEMATIC AND WIRING DIAGRAMS ARE THE PROPERTY OF BALLY MANUFACTURING CORP. AND WILL BE KEPT CONFIDENTIAL AND NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN CONSENT OF THE OWNER.

Bally MANUFACTURING CORP.
340 BELMONT AVENUE
CHICAGO, ILLINOIS 60618

PANEL TO BACK CAB PLUG

LET	NO.	WAS	IS	DATE	BY	CD
A	23	WAS 32	IS	8/20/78	TD	
				8/20/78	TD	
				8/20/78	TD	


DO NOT SCALE DRAWING

TOLERANCES ON DIMENSIONS UNLESS SPECIFIED: FRACTIONS: .001 DECIMALS: .001 ANGLES: 1°

MATERIAL: HARLEM GLOBETROTTERS

PLUG CONNECTORS: W-1187-14 C

W-1187-14 C

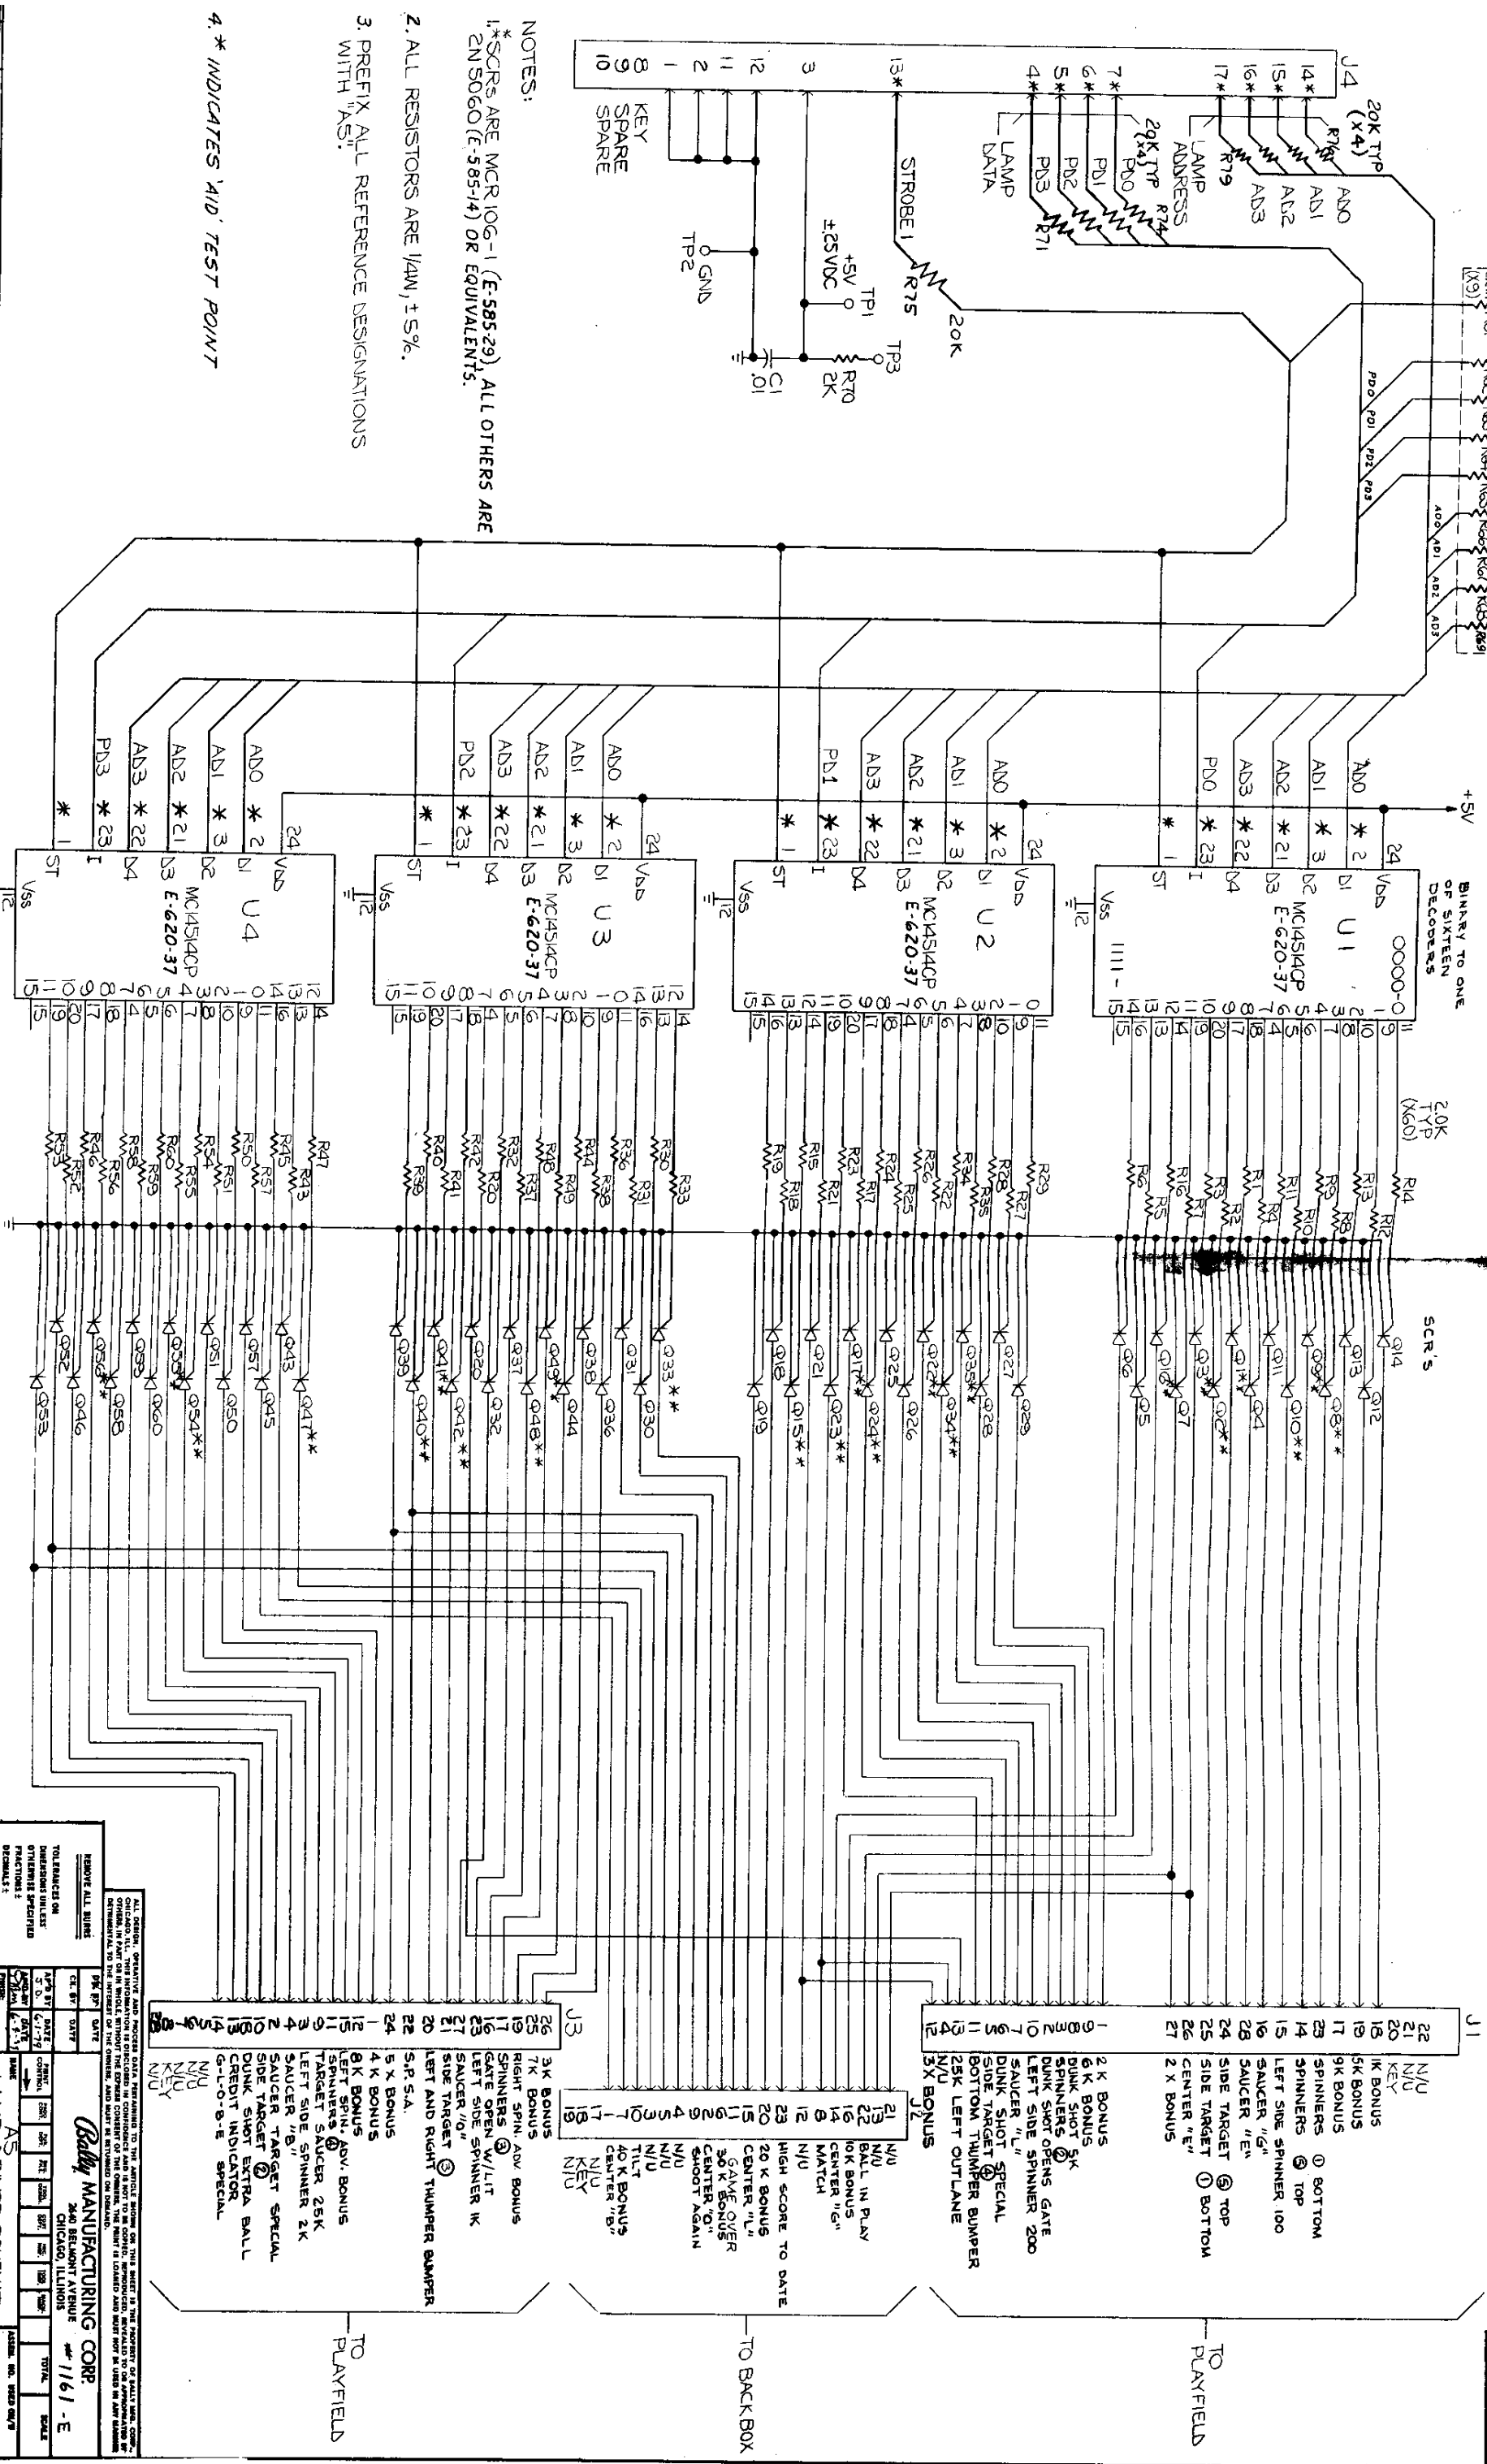


NOTES:
 1. *SCR'S ARE MCR 10G-1 (E-585-29), ALL OTHERS ARE 2N5060 (E-585-14) OR EQUIVALENTS.
 2. ALL RESISTORS ARE 1/4W, ±5%.
 3. PREFIX ALL REFERENCE DESIGNATIONS WITH "AS".
 4. * INDICATES 'AID' TEST POINT

NO.	LET.	CHANGE	DATE	BY	CK

REMOVE ALL BONES		TOLERANCES UNLESS OTHERWISE SPECIFIED	
FRACTIONS UNLESS OTHERWISE SPECIFIED		DIMENSIONS UNLESS OTHERWISE SPECIFIED	
HARDENING		NO NOT SCALE DRAWING	

DATE	BY	DATE	BY

ALL ORDERS, QUANTITIES AND PROCESS DATA PERTAINING TO THIS SHEET IS THE PROPERTY OF BALLY MANUFACTURING CORP. CHICAGO, ILL. NO INFORMATION IS TO BE DISCLOSED OR REPRODUCED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF BALLY MANUFACTURING CORP. CHICAGO, ILL.	
BALLY MANUFACTURING CORP. 240 BELMONT AVENUE CHICAGO, ILLINOIS 60611-1611	
LAMP DRIVER SCHEMATIC HARLEM GLOBE PROTECTORS	

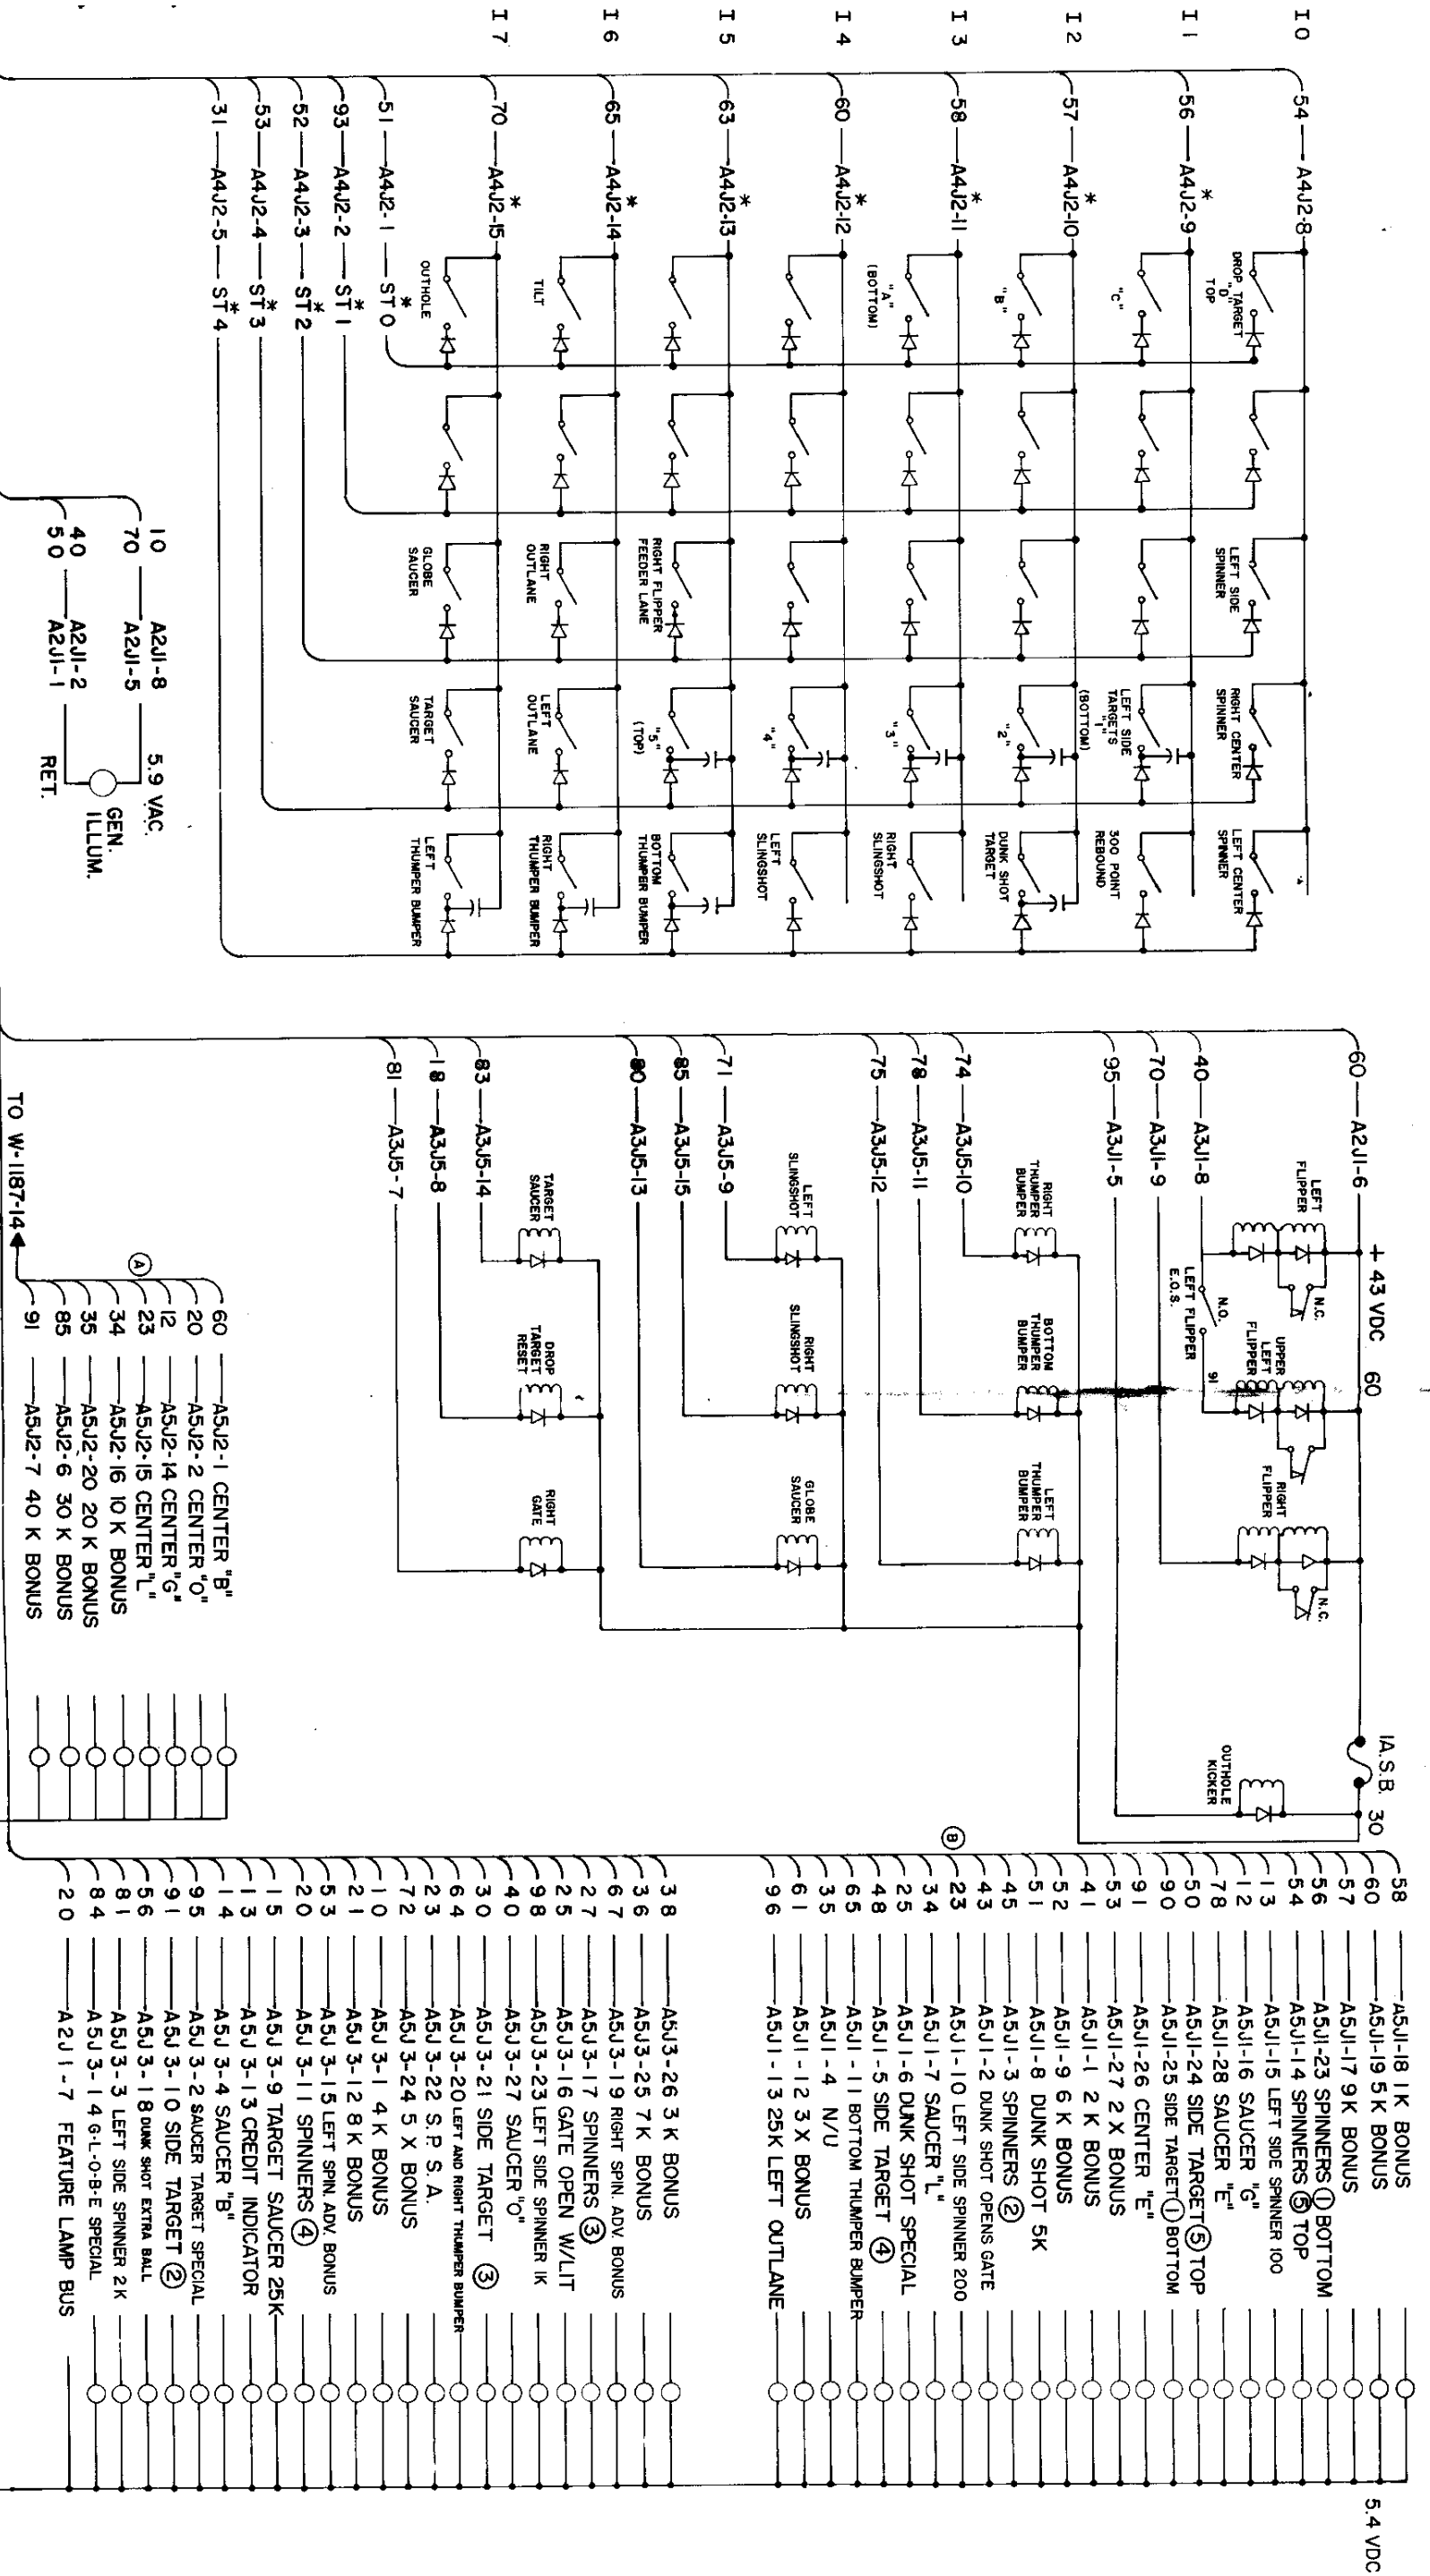

- NOTES**
1. INDICATES NOT USED
 2. N/U = NOT USED ON PLAYFIELD
 3. * INDICATES AID TEST POINT
 4. ALL DIODES ARE IN4004 (E-587-6)
 - ALL CAPACITORS ARE .05 MFD. (E-586-80)

LET	WAS	DATE	BY	CHK	REWORK ALL WIRING	DATE	BY	CHK	REWORK ALL WIRING	DATE	BY	CHK
A	23 WAS 32	8/27/71	SD		TOLERANCES UNLESS OTHERWISE SPECIFIED DECIMALS - .05 ANGLES - °							
B	23 WAS 32	8/27/71	SD		REMOVE ALL WIRING							

ALL DIMENSIONS, OPERATING AND MOUNTING DATA ARE GIVEN UNLESS OTHERWISE SPECIFIED. DIMENSIONS IN PARENTHESIS ARE FOR THE OPTION. THE SPACING BETWEEN DIMENSIONS IS FOR INFORMATION ONLY. DIMENSIONS IN PARENTHESIS ARE FOR THE OPTION. THE SPACING BETWEEN DIMENSIONS IS FOR INFORMATION ONLY. DIMENSIONS IN PARENTHESIS ARE FOR THE OPTION. THE SPACING BETWEEN DIMENSIONS IS FOR INFORMATION ONLY.

Radley MANUFACTURING CORP.
 2440 BELMONT AVENUE
 CHICAGO, ILLINOIS 60618

SWITCH MATRIX
 HARLEM GLOBETROTTERS

PART NO. W-1192-14C

PLAYFIELD MYLAR PROTECTORS

FO-589

ENCLOSED ARE TWO MYLAR PROTECTORS WHICH MAY BE ATTACHED TO THE PLAYFIELD IN FRONT OF THE SLINGSHOT KICKERS AS SHOWN IN SKETCH. THESE WILL HELP TO PRESERVE PAINT FINISH IN FRONT OF SLINGSHOTS.

TO APPLY, SIMPLY REMOVE PAPER BACKING AND PLACE MYLAR WITH FLAT EDGE TOUCHING THE TWO SLINGSHOT POSTS.

