

Magic Sword



©1990 CAPCOM ALL RIGHTS RESERVED

MANUAL

CAPCOM®


○PCB CONNECTOR

JAMMA STANDARD

○CRT MONITOR

HORIZONTAL SCREEN

○CONTROL PANEL

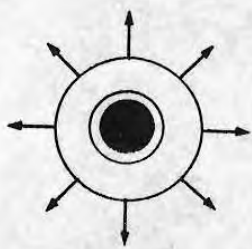

8-WAY JOYSTICK



ATTACK



JUMP

○8-WAY JOYSTICK


MAKE PLAYER MOVE LEFT/RIGHT AND CROUCH.

○PUSHING TWO BUTTONS SIMULTANEOUSLY,
PLAYER CAN ATTACK WITH MAGIC.


○MAXIMUM NUMBER OF CREDIT IS 9:

○DIP SW (There are 2 types of PCB)

1.

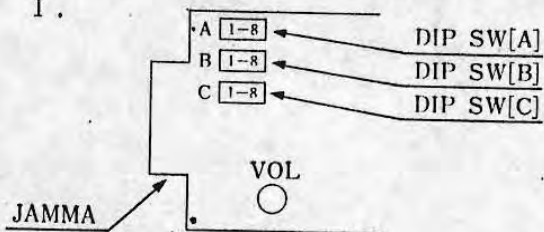

2.

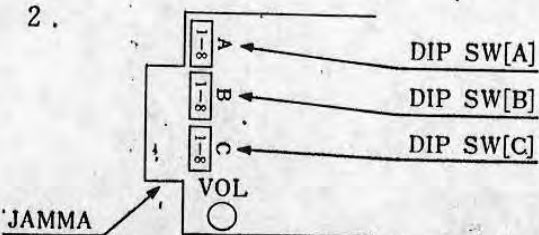

JAMMA STANDARD

SOLDER SIDE				COMPONENTS SIDE
GND	A	1	GND	
GND	B	2	GND	
+5V	C	3	+5V	
+5V	D	4	+5V	
N.C.	E	5	N.C.	
+12V	F	6	+12V	
		H	7	
COIN COUNTER 2	J	8	COIN COUNTER 1	
(COIN LOCK OUT 2)	K	9	(COIN LOCK OUT 1)	
SP(-)	L	10	SP(+)	
N.C.	M	11	N.C.	
VIDEO GREEN	N	12	VIDEO RED	
VIDEO SYNC	P	13	VIDEO BLUE	
SERVICE SW	R	14	VIDEO GND	
	S	15	TEST SW	
COIN SW 2	T	16	COIN SW 1	
START SW 2	U	17	START SW 1	
2P UP	V	18	1P UP	
2P DOWN	W	19	1P DOWN	
2P LEFT	X	20	1P LEFT	
2P RIGHT	Y	21	1P RIGHT	
2P PUSH 1 (2P ATTACK)	Z	22	1P PUSH 1 (1P ATTACK)	
2P PUSH 2 (2P JUMP)	a	23	1P PUSH 2 (1P JUMP)	
N.C.	b	24	N.C.	
N.C.	c	25	N.C.	
N.C.	d	26	N.C.	
GND	e	27	GND	
GND	f	28	GND	

●PARTS NAME

CR7E-56DA-3.96E : (HIROSE)

OR

1168-056-009 : (KEL)

DIP SW[A]

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
COIN 1	1 COIN 1 CREDIT	OFF	OFF	OFF					
	1 COIN 2 CREDITS	ON	OFF	OFF					
	1 COIN 3 CREDITS	OFF	ON	OFF					
	1 COIN 4 CREDITS	ON	ON	OFF					
	1 COIN 6 CREDITS	OFF	OFF	ON					
	2 COINS 1 CREDIT	ON	OFF	ON					
	3 COINS 1 CREDIT	OFF	ON	ON					
	4 COINS 1 CREDIT	ON	ON	ON					
COIN 2	1 COIN 1 CREDIT				OFF	OFF	OFF		
	1 COIN 2 CREDITS				ON	OFF	OFF		
	1 COIN 3 CREDITS				OFF	ON	OFF		
	1 COIN 4 CREDITS				ON	ON	OFF		
	1 COIN 6 CREDITS				OFF	OFF	ON		
	2 COINS 1 CREDIT				ON	OFF	ON		
	3 COINS 1 CREDIT				OFF	ON	ON		
	4 COINS 1 CREDIT				ON	ON	ON		
CONTINUE COIN	NORMAL							OFF	
	CONTINUE COIN							ON	

※When CONTINUE COIN is ON, game starts with 2COINS and continues with 1COIN.

In this case, setting of COIN 1 & COIN 2 automatically cancelled.

※Highlighted position when shipped.

DIP SW[B]

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
DIFFICULTY LEVEL 1 (Speed of Player's vitality consumption changes.)	EASY	OFF	OFF	OFF					
	↑	ON	OFF	OFF					
	NORMAL	OFF	ON	OFF					
	↓	ON	ON	OFF					
	DIFFICULT	OFF	OFF	ON					
		ON	OFF	ON					
		OFF	ON	ON					
		ON	ON	ON					
DIFFICULTY LEVEL 2 (Enemy's vitality and attacking power changes.)	EASY				ON	ON	OFF		
	↑				OFF	ON	OFF		
	NORMAL				ON	OFF	OFF		
	↓				OFF	OFF	OFF		
	DIFFICULT				OFF	OFF	ON		
					ON	OFF	ON		
					OFF	ON	ON		
					ON	ON	ON		
STAGE SELECT	NOT SELECT							OFF	
	SELECT							ON	

※Difficulty level is set at normal when shipped. When adjusting DIFFICULTY LEVEL, please refer to ABOUT DIFFICULTY LEVEL (written in next page).

※Highlighted position when shipped.

DIP SW[C]

ITEM	DESCRIPTION	1	2	3	4	5	6	7	8
INITIAL NUMBER OF VITALITY BLOCKS	10	OFF	OFF						
	15	ON	OFF						
	20	OFF	ON						
	5	ON	ON						
FREE PLAY	WITHOUT FREE PLAY			OFF					
	FREE PLAY			ON					
SCREEN STOP	NOT STOP				OFF				
	STOP				ON				
SCREEN FLIP	NORMAL					OFF			
	FLIP					ON			
SOUND DURING DEMONSTRATION MODE	WITHOUT SOUND						OFF		
	WITH SOUND						ON		
CONTINUE MODE	WITHOUT CONTINUE							OFF	
	WITH CONTINUE							ON	
TEST MODE	GAME MODE								OFF
	TEST MODE								ON

※Whenever DIP SWITCH settled newly, make sure the power is OFF.
 ※Highlighted position when shipped.

● ABOUT DIFFICULTY LEVEL

Please follow our suggestions in the following case.

- 1) Increase DIFFICULTY LEVEL 1, when average play time becomes longer after certain period passes.
- 2) Increase DIFFICULTY LEVEL 2, when average play time is long since setting up.
- 3) Decrease DIFFICULTY LEVEL 1, when game is unpopular since setting up.
- 4) Decrease DIFFICULTY LEVEL 2, when game becomes unpopular after certain period passes.

※In other cases, adjust DIFFICULTY LEVEL 1 first and next adjust DIFFICULTY LEVEL 2 when it seems required. When adjust LEVEL 2, Dip Switch of LEVEL 1 should be settled at NORMAL POINT.

CAPCOM® CO.,LTD.

CAPCOM BLDG. NO. 4-12, OHTEDORI 1-CHOME, CHUO-KU, OSAKA 540, JAPAN
 TEL (06) 947-1156 (FAX NO. 06-946-6657)